



Operating Instructions and Parts Manual Ferrous Manual Cold Saws

Models J-FK350-2, J-FK350-4



JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-414214
Edition 7 12/2025
Copyright © 2017 JET

1.0 Warranty and Service

JET® warrants every product it sells against manufacturers' defects. If one of our tools needs service or repair, please contact Technical Service by calling 1-800-274-6846, 8AM to 5PM CST, Monday through Friday.

Warranty Period

The general warranty lasts for the time period specified in the literature included with your product or on the official JET branded website.

- JET products carry a limited warranty which varies in duration based upon the product. (See chart below)
- Accessories carry a limited warranty of one year from the date of receipt.
- Consumable items are defined as expendable parts or accessories expected to become inoperable within a reasonable amount of use and are covered by a 90 day limited warranty against manufacturer's defects.

Who is Covered

This warranty covers only the initial purchaser of the product from the date of delivery.

What is Covered

This warranty covers any defects in workmanship or materials subject to the limitations stated below. This warranty does not cover failures due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, improper repair, alterations or lack of maintenance. JET woodworking machinery is designed to be used with Wood. Use of these machines in the processing of metal, plastics, or other materials may void the warranty. The exceptions are acrylics and other natural items that are made specifically for wood turning.

Warranty Limitations

Woodworking products with a Five Year Warranty that are used for commercial or industrial purposes default to a Two Year Warranty. Please contact Technical Service at 1-800-274-6846 for further clarification.

How to Get Technical Support

Please contact Technical Service by calling 1-800-274-6846. **Please note that you will be asked to provide proof of initial purchase when calling.** If a product requires further inspection, the Technical Service representative will explain and assist with any additional action needed. JET has Authorized Service Centers located throughout the United States. For the name of an Authorized Service Center in your area call 1-800-274-6846 or use the Service Center Locator on the JET website.

More Information

JET is constantly adding new products. For complete, up-to-date product information, check with your local distributor or visit the JET website.

How State Law Applies

This warranty gives you specific legal rights, subject to applicable state law.

Limitations on This Warranty

JET LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD OF THE LIMITED WARRANTY FOR EACH PRODUCT. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

JET SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

JET sells through distributors only. The specifications listed in JET printed materials and on official JET website are given as general information and are not binding. JET reserves the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever. JET® branded products are not sold in Canada by JPW Industries, Inc.

Product Listing with Warranty Period

90 Days – Parts; Consumable items
1 Year – Motors; Machine Accessories
2 Year – Metalworking Machinery; Electric Hoists, Electric Hoist Accessories; Woodworking Machinery used for industrial or commercial purposes
5 Year – Woodworking Machinery
Limited Lifetime – JET Parallel clamps; VOLT Series Electric Hoists; Manual Hoists; Manual Hoist Accessories; Shop Tools; Warehouse & Dock products; Hand Tools; Air Tools

NOTE: JET is a division of JPW Industries, Inc. References in this document to JET also apply to JPW Industries, Inc., or any of its successors in interest to the JET brand.

2.0 Table of Contents

1.0 Warranty and Service.....	2
2.0 Table of Contents.....	3
3.0 IMPORTANT SAFETY INSTRUCTIONS.....	4
4.0 About this machine and manual.....	5
5.0 J-FK350 Features.....	6
6.0 Specifications.....	6
7.0 Features.....	7
7.1 Miter Cutting Head.....	7
7.2 Miter Position Lock.....	7
7.3 Self-centering Vise.....	7
7.4 J-FK350 Controls.....	7
7.5 Trigger Handle.....	7
7.6 Flood Coolant System.....	7
8.0 Installation.....	8
8.1 Unpacking the machine.....	8
8.2 Anchoring and handling the machine.....	8
9.0 Electrical Connections.....	8
10.0 Controls.....	8
10.1 Control Panel.....	8
10.2 Trigger Handle.....	8
11.0 Operation.....	9
11.1 Stock Stop.....	9
11.2 Miter Adjustment.....	9
11.3 Depth Stop.....	9
12.0 Maintenance.....	10
12.1 Maintenance Requirements.....	10
12.2 Periodic Maintenance.....	10
12.3 Coolant.....	10
12.4 Changing the Saw Blade.....	10
12.5 Lubrication.....	10
12.6 Coolant System.....	10
13.0 Blade Selection.....	11
13.1 General Characteristics.....	11
13.2 Determining Proper Tooth Pitch.....	11
13.3 Cutting and Feeding Speed.....	11
13.4 Coolant.....	11
13.5 Blade Structure.....	12
13.6 Types of Blades.....	12
13.7 Teeth Shape.....	12
14.0 Troubleshooting the J-FK350.....	14
14.1 Blade and Cutting Problems.....	14
14.2 Machine Fault & Operating Problems.....	15
15.0 Parts.....	15
15.1.1 Head Assembly – Parts List.....	16
15.1.2 Head Assembly – Exploded View.....	17
15.2.1 Stock Stop Assembly – Parts List.....	18
15.2.2 Stock Stop Assembly – Exploded View.....	18
15.3.1 Stand Assembly – Parts List.....	19
15.3.2 Stand Assembly – Exploded View.....	19
15.4.1 Base Assembly – Parts List.....	20
15.4.2 Base Assembly – Exploded View.....	21
15.5.1 Manual Vise Assembly – Parts List.....	22
15.5.2 Manual Vise Assembly – Exploded View.....	23
15.6.1 Guard Assembly – Parts List.....	24
15.6.2 Guard Assembly – Exploded View.....	25
15.7.1 In-Feed Table Assembly – Parts List.....	26
15.7.2 In-Feed Table Assembly – Exploded View.....	26
15.8.1 Out-Feed Table – Parts List.....	27
15.8.2 Out-Feed Table – Exploded View.....	27
16.0 Wiring Diagram.....	28



3.0 IMPORTANT SAFETY INSTRUCTIONS

1. Read and understand the entire owner's manual before attempting assembly or operation.
2. Read and understand the warnings posted on the machine and in this manual. Failure to comply with all of these warnings may cause serious injury.
3. Replace the warning labels if they become obscured or removed.
4. The cold saw is designed and intended for use by properly trained and experienced personnel only. If you are not familiar with the proper and safe operation of a cold saw, do not use until proper training and knowledge have been obtained.
5. Do not use this cold saw for other than its intended use. If used for other purposes, JET disclaims any real or implied warranty and holds itself harmless from any injury that may result from that use.
6. Always wear approved safety glasses/face shields while using this cold saw. Everyday eyeglasses only have impact resistant lenses; they are not safety glasses.
7. Before operating the cold saw, remove tie, rings, watches and other jewelry, and roll sleeves up past the elbows. Remove all loose clothing and confine long hair. Non-slip footwear or anti-skid floor strips are recommended. Do **not** wear gloves.
8. Wear ear protectors (plugs or muffs) during extended periods of operation.
9. Do not operate this machine while tired or under the influence of drugs, alcohol or any medication.
10. Make certain the switch is in the **OFF** position before connecting the machine to the power supply.
11. Make certain the machine is properly grounded.
12. Make all machine adjustments or maintenance with the machine unplugged from the power source.
13. Remove adjusting keys and wrenches. Form a habit of checking to see that keys and adjusting wrenches are removed from the machine before turning it on.
14. Keep safety guards in place at all times when the machine is in use. If removed for maintenance purposes, use extreme caution and replace the guards immediately.
15. Make sure the cold saw is firmly placed on a secure foundation.
16. Check damaged parts. Before further use of the machine, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
17. Provide for adequate space surrounding work area and non-glare, overhead lighting.
18. Keep the floor around the machine clean and free of scrap material, oil and grease.
19. Keep visitors a safe distance from the work area. **Keep children away.**
20. Make your workshop child proof with padlocks, master switches or by removing starter keys.
21. Give your work undivided attention. Looking around, carrying on a conversation and "horse-play" are careless acts that can result in serious injury.
22. Maintain a balanced stance at all times so that you do not fall into the blade or other moving parts. Do not overreach or use excessive force to perform any machine operation.
23. Use the right tool at the correct speed and feed rate. Do not force a tool or attachment to do a job for which it was not designed. The right tool will do the job better and safer.
24. Use recommended accessories; improper accessories may be hazardous.
25. Maintain tools with care. Keep saw blades sharp and clean for the best and safest performance. Follow instructions for lubricating and changing accessories.
26. Turn off the machine before cleaning. Use a brush or compressed air to remove chips or debris — do not use your hands.
27. Do not stand on the machine. Serious injury could occur if the machine tips over.
28. Never leave the machine running unattended. Turn the power off and do not leave the machine until it comes to a complete stop.

29. Remove loose items and unnecessary work pieces from the area before starting the machine.

Familiarize yourself with the following safety notices used in this manual:

⚠ CAUTION

This means that if precautions are not heeded, it may result in minor injury and/or possible machine damage.

⚠ WARNING

This means that if precautions are not heeded, it may result in serious injury or possibly even death.

The specifications in this manual are given as general information and are not binding. JET reserves the right to effect, at any time and without prior notice, changes or alterations to parts, fittings, and accessory equipment deemed necessary for any reason whatsoever.

4.0 About this machine and manual

The **J-FK350** Cold Saw is designed to provide a reliable solution to the needs of machine shops and production environments that work with steel or iron. The J-FK350 is manually operated. After clamping the material in the vise, the operator presses the trigger handle starting the blade, and brings the operating lever downward to cut the material. The **saw** can perform miter cuts up to 45° to the right or left.

This manual is provided by JET, covering the safe operation and maintenance procedures for the J-FK350 Cold Saw. This manual contains instructions on installation, safety precautions, general operating procedures, maintenance instructions and parts breakdown. Your machine has been designed and constructed to provide consistent, long-term operation if used in accordance with the instructions as set forth in this document.

If there are questions or comments about this product, please contact your local supplier or JET. JET can also be reached at our web site: www.jettools.com.

Retain this manual for future reference. If the machine transfers ownership, the manual should accompany it.

⚠ WARNING


Read and understand the entire contents of this manual before attempting assembly or operation. Failure to comply may cause serious injury.

Register your product using the mail-in card provided or register online: www.jettools.com/product-registration

To quickly reach the product registration webpage, scan the QR code below.



5.0 J-FK350 Features

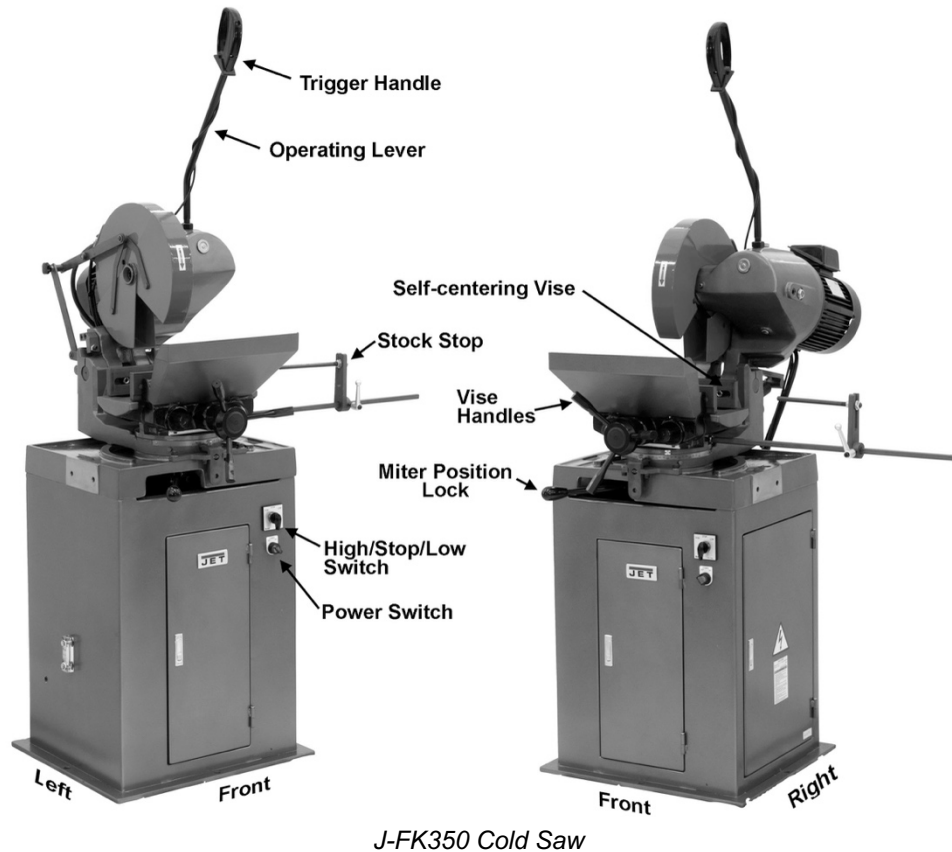

6.0 Specifications

Model	J-FK350-2	J-FK350-4
Stock Number	414214	414217
Disc Blade		
Disc diameter	14" (350mm)	14" (350mm)
Hole diameter	1.3" (32mm)	1.3" (32mm)
Blade thickness	0.1" (2.5mm)	0.1" (2.5mm)
Cutting Speed		
Blade Speed (RPM)	44 and 88	44 and 88
Motor		
Motor	2HP, 3PH, 60Hz	2HP, 3PH, 60Hz
Voltage	220VAC	440VAC
Other		
Maximum Vise Opening	6"	6"
Coolant Capacity	3 gal.	3 gal.
Dimensions	50"L x 28"W x 60"H	50"L x 28"W x 60"H
Net Weight	794 lbs	794 lbs
Shipping Weight	850 lbs	850 lbs

Cutting Capacity (All Models)

	Degree	Round	Square	Rectangle
Tubing	90°	4.5"	4.25"	5.5" x 3.75"
	45°	3.5"	3.5"	3.5" x 3.5"
Solid	90°	2"	2"	2" x 2"
	45°	1.75"	1.75"	1.75" x 1.75"

7.0 Features

7.1 Miter Cutting Head

The *miter cutting head* is the unit that cuts the material and consists of a cast iron base, blade support unit and guard, transmission unit, and motor. The depth of cut is set by adjusting the *depth cut stop*. The miter cutting head swivels and locks into -45° , 90° , and $+45^\circ$ by means of a *locking mechanism*. Pressing the mechanism overrides the lock, permitting the head to adjust to any position between -45° and $+45^\circ$.

7.2 Miter Position Lock

The *miter position lock* secures the miter cutting head from movement. The miter is secured when the lock is pushed all the way to the left and can be positioned when the lock is moved to the right.

7.3 Self-centering Vise

The *self-centering vise* holds the work piece in place during cutting. The work piece is secured in the vise by turning the *vise handles*.

7.4 J-FK350 Controls

The *control panel* consists of the *Power (On/Off)* switch and *High/Stop/Low* switch, and an integral coolant system. To operate the machine, the *Power* switch must be set to *on* and the *High/Stop/Low* switch must be set for *Hi* or *Low*. Then press the trigger handle to start.

7.5 Trigger Handle

The *trigger handle* (Figure 1) is located on the *operating lever* used to raise and lower the saw. It contains a *micro-switch*, which is activated when the operator depresses the *run trigger*.

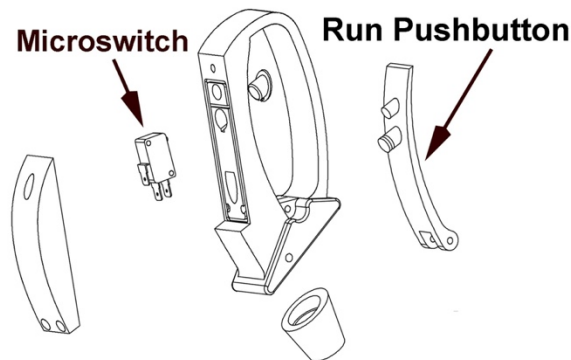


Figure 1

7.6 Flood Coolant System

⚠ CAUTION

The coolant pump must be submerged before operating to prevent damage to the pump.

Coolant is dispensed directly onto the saw blade from a coolant fitting on the upper blade guard. Coolant is provided through tubing from the coolant pump (Figure 2) in the machine base.

Adjust the coolant flow valve on coolant fitting to achieve desired flow. When the coolant switch is in the ON position, flow starts when the drive motor is started. Turning off the coolant switch stops coolant flow.

This coolant system can operate with either a soluble oil base coolant or water-soluble synthetic coolant. Coolant should be changed regularly. Some recommended brands are *DoAll* and *Lenox*. These coolants are available at your local industrial distributor.

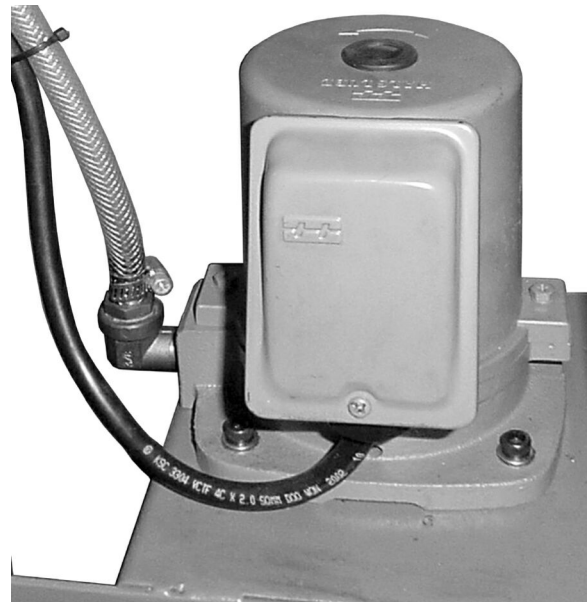


Figure 2

8.0 Installation

8.1 Unpacking the machine

⚠ WARNING Do not handle the packed machine using slings.

To install the machine, first remove the packing, paying particular attention not to cut any electric wires or hydraulic hoses. Lift using straps (Figure 3).



Figure 3

8.2 Anchoring and handling the machine

The base of the machine must be anchored to the floor by two lag bolts or studs properly anchored into concrete.

9.0 Electrical Connections

⚠ WARNING All adjustments or repairs must be done with the machine disconnected from the power source, unplugged. Failure to comply may result in serious injury!

The J-FK350-2 is rated at 220V.

The J-FK350-4 is rated at 440V.

These machines not supplied with a plug. Use a plug and outlet rated at least 20amps. The circuit for the machine should also be protected by at least a 20 amp circuit breaker or fuse.

Make sure that the blade turns in the correct direction. If it does not, simply reverse two of the phase wires on the supply input.

The cold saw is now ready for use.

10.0 Controls

10.1 Control Panel

The *Control Panel* (Figure 4) is located on the front of the cabinet stand and consists of the *Power* and *High/Stop/Low* switches, described below.

Power Switch – The *Power* switch has two positions, *Off* and *On*.

High/Stop/Low Switch – This switch controls the blade speed. To operate the saw, the power switch must set to on, *High* or *Low* must be selected, and the *Run Trigger* pressed.

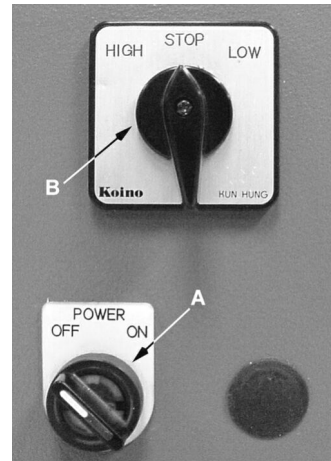


Figure 4

10.2 Trigger Handle

To operate, the *Power* switch must be set to ON, a *Hi* or *Low* speed selection made, and the trigger handle pressed.



Figure 5

11.0 Operation

Before using the machine:

- ❑ Check that safety devices (e.g., blade guards) are in position and work perfectly and that personal safety requirements are complied with.
- ❑ Check the sharpness of the blade and verify coolant flow.

Operation

1. Make sure the work piece is securely clamped in the vise.
2. Turn the power on (A, Fig. 8).
3. Select the cutting speed (B, Fig. 8).

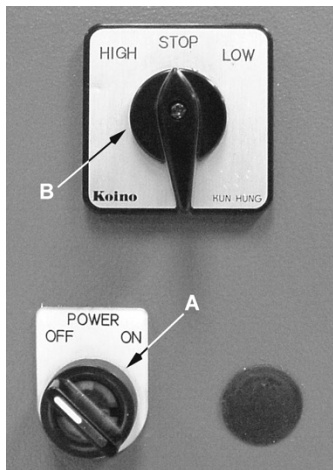


Figure 8

4. Grip the trigger handle (Figure 5) on the control lever.
5. Start the blade by pressing the micro-switch on the handgrip.

The down stroke speed of the head is controlled manually by the operator. The coolant pump is activated during the time that the head is below the upper limit position.

When the cut is complete:

6. Raise the head.
7. Remove the work piece from the vise using the vise hand wheels.

11.1 Stock Stop

Install the shaft of the stock stop into the threaded hole in the right side of the table. See sect. 14.2.2 exploded view for reference.

The stop can be used for quickly making multiple cuts of the same length

11.2 Miter Adjustment

To adjust the miter position follow the steps below while referring to Figure 10:

1. Move the miter position lock (A) to the right to release.
2. Adjust the head to the desired angle ranging from -45° to $+45^\circ$ by pushing on the back of the motor to the right or left. The miter position is shown on the scale (B).
3. A detent mechanism locks the head in the -45° , 90° and $+45^\circ$ positions to prevent the head from rotating. For a miter position other than -45° , 90° and $+45^\circ$, press the lever (C) to release while rotating the head.
4. When the desired cutting angle is set, move miter position lock (A) to the left to secure.

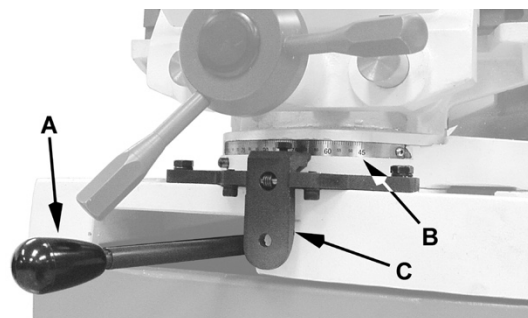


Figure 10

11.3 Depth Stop

The *depth stop* adjustment limits the lower travel of the saw blade during a cutting operation.

WARNING

Remove power when making this adjustment. Failure to comply may result in serious injury!

To adjust the depth of cut (refer to Figure 12):

1. Using two 13mm wrenches, loosen the lock nut (A).
2. With the saw in the fully lowered position, turn the screw (B) until the saw blade bottoms out at the desired level.
3. Tighten the lock nut.

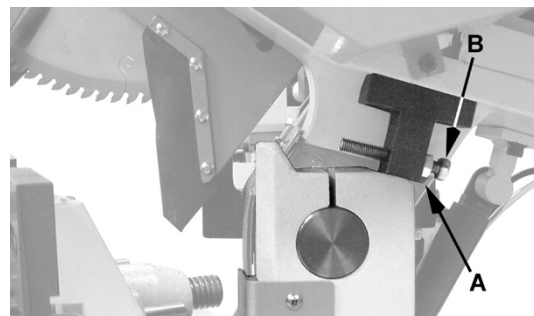


Figure 12

12.0 Maintenance

12.1 Maintenance Requirements

⚠ WARNING All maintenance must be carried out with the **power switched off**. Failure to comply may result in serious injury!

On completion of maintenance, ensure that replaced parts and/or any tools used have been removed from the machine before starting it up.

12.2 Periodic Maintenance

- ❑ Remove chips from the machine, preferably with a cloth
- ❑ Remove chips from the coolant tank and change coolant regularly (see *Coolant* section)
- ❑ Top up the coolant level (see *Coolant*)
- ❑ Check the wear of the blade and change if necessary (see *Changing the Saw Blade*)
- ❑ Empty the chips out of the base.
- ❑ Clean the vise and lubricate all the joints and sliding surfaces, using good quality oil.
- ❑ Attend to daily, weekly and annual lubrication recommendations (see the *Lubrication* section)

12.3 Coolant

The *coolant tank access door* is located on the back of the cabinet stand. Remove four hex cap screws with a 5mm hex wrench. Check coolant level in the coolant tank periodically and top off if necessary. Coolant can also be added by pouring directly on the table, which will drain into the tank through the *chip strainer*.

Remove excess chips periodically from the tank.

Use the coolant level gauge to check the coolant level.

12.4 Changing the Saw Blade

⚠ WARNING The cold saw must not be connected to the power source when changing saw blades. Failure to comply may result in serious injury!

To change the saw blade:

1. Switch off the machine.
2. Release the lower disc guard.
3. Move the lower guard upwards.
4. Remove the blade and replace it with a new one.
5. To secure the saw blade, reverse the preceding steps.

12.5 Lubrication

For long life and trouble-free operation, it is essential that this machine be kept well lubricated. The vise and leadscrew should be oiled daily. Pivot joints and bearings should be greased weekly. Check the gearbox oil level weekly; full level is top of sight glass with head in full up position. The gearbox oil should be changed annually.

Recommended Lubricants:

Gearbox

Use Texaco Meropa 460 or equivalent.

Grease fittings

Texaco Starplex 2 or equivalent

Vise and Leadscrew

Regal R & O 68

12.6 Coolant System

This coolant system can operate with either a soluble oil base coolant or water-soluble synthetic coolant. Coolant should be changed regularly. Some recommended brands are *DoAll* and *Lenox*. These coolants are available at your local industrial distributor.

Coolant Type:

- ❑ Soluble Oil Base
- ❑ Water-Soluble Synthetic Coolant

13.0 Blade Selection

When using the J-FK350 cold saw, it is important to select the correct type of blade for the material to be cut. This section explains the limitations and specific applications of the different types of blades.

13.1 General Characteristics

Fine Tooth Pitch – used for thin wall materials such as sheet steel, tubes and profiles

Coarse Tooth Pitch – used for large cross-sections – for soft materials (aluminum alloys and soft alloys in general).

13.2 Determining Proper Tooth Pitch

Proper tooth pitch depends on:

- the size of the section;
- the hardness of the material;
- wall thickness.

Solid sections call for discs with a coarse tooth pitch, while small cross-sections require blades with finer teeth. This is because when cutting walls of small cross-section (1–7 mm) profiles, it is important that the number of teeth actually making the cut should not be too small, otherwise the effect obtained will be one of tearing rather than of chip removal, leading to a large increase in shearing stress. On the other hand, when cutting thick materials or solid sections using an excessively fine tooth pitch, the chip collects as a spiral inside the gullet, and since fine tooth pitches have small gullets, the accumulated chip will exceed the gullet capacity and press against the walls of the workpieces, resulting in poor cutting (same situation with soft materials), greater shearing stress and hence breakage of the blade.



Choice of tooth pitch T as a function of cross-section to be cut for light alloy solid pieces and profiles			
 S		 S	
S in mm.	Pitch T	S and sp in mm.	Pitch T
10	6	10 sp=0.5	3-4
30	8	30 sp=1.5	4-5
50	10	50 sp=2.5	6-7
70	12	70 sp=3.5	8-9
90	14	90 sp=4.5	8-9
130	18	130 sp=6.5	10

KEY:

s = diameter or width of the solid piece to be cut in mm.

sp = thickness of the wall to be cut in mm.

T = tooth pitch in mm.

Table 1

A larger pitch should be chosen when, as a result of the shape of the piece to be cut, the cross-section at any given point exceeds the average cross-section given above.

13.3 Cutting and Feeding Speed

The cutting speed, in m/min, and the head feeding speed, in cm²/min, are limited by the amount of heat generated near the points of the teeth. If the head feeding speed is too high, the cut will not be straight in either the vertical or the horizontal plane. As we have already said, the cutting speed depends on the strength (kg/mm²) and hardness (HRC) of the material and the dimensions of the thickest section. The feeding speed depends on the cross-section of the material. Solid or thick-walled materials (thickness>5mm) can therefore be cut at high speed providing there is sufficient swarf removal by the blade, while thin-walled materials such as tubes or thin profiles must be cut with a low feeding speed.

⚠ WARNING

A new blade requires a break-in period, during which time about half the normal feeding speed should be used.

13.4 Coolant

The cooling fluid ensures that the blade teeth and material in the area of the cut do not overheat. The fluid must be an excellent lubricant so as to prevent abrasion of the teeth and welding of the chips to the teeth themselves (seizing).

13.5 Blade Structure

For non-ferrous metals, it is common to use circular saws with brazed hard metal HM cutting edge, consisting of a disc made of alloy tool steel (71Cr1) on which the shape of the teeth and the seats for the cutting edges are made of Widia K10. These saws have shown excellent wear resistance but low resistance to impact, which is in any case a minor problem with non-ferrous materials.

CHEMICAL COMPOSITION:

Blade body	C	Cr	Mn	Mo	V	Co	HRC
steel type	0,71	0,20	0,40	-	-	-	
71Cr1	÷	÷	÷	÷	÷	÷	43+/-1
	0,78	0,30	0,70	-	-	-	

KEY:

C = Carbon Co = Cobalt Cr = Chromium
 Mo = Molybdenum Mn = Manganese V = Vanadium
 The numbers in the columns indicate the % of the element present in the steel.

Table 2

13.6 Types of Blades

The blades fitted to the J-FK350 have dimensions 350 x 32 x 2.5 mm and are of HM hard steel type since the machine is to be used for cutting non-ferrous materials. In addition to the size and pitch of the teeth, however, the blades also have different geometric characteristics in accordance with their particular use:

tooth cutting angle – may be negative or positive

tooth sharpening – may be *BW* with an alternate raked tooth or *C* with a roughing tooth raked on both sides and a non-raked finishing tooth

tooth pitch – the distance between the crest of one tooth and the crest of the next tooth (tooth pitch = T)

13.7 Teeth Shape

"C" TYPE SHARPENING (HZ)

Coarse toothing with roughing tooth raked on both sides and non-raked finishing tooth. The roughing tooth is about 0.3 mm higher.

Coarse toothing with roughing tooth and finishing tooth. Used in saws with pitch greater than or equal to 5 mm for cutting ferrous and non-ferrous materials with solid or solid-profiled sections.

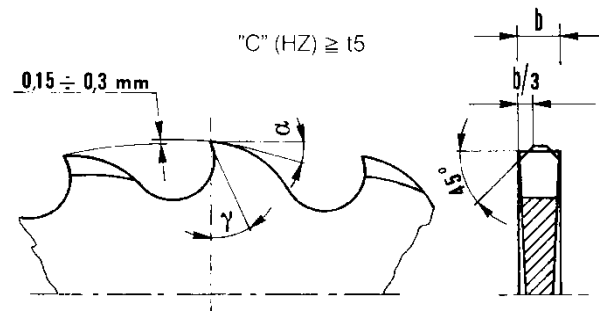


Figure 14

"BW" TYPE SHARPENING DIN 1838--UNI 4014

Coarse toothing with teeth alternately raked to the right and left.

Toothing generally used on cutting-off machines for cutting ferrous and alloy materials with tubular and profiled sections.

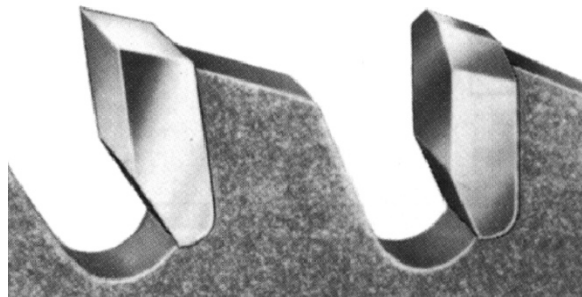


Figure 15

POSITIVE AND NEGATIVE CUTTING ANGLES

The cutting angle may vary from positive to negative depending on the cutting speed, the profile and the type of material to be cut.

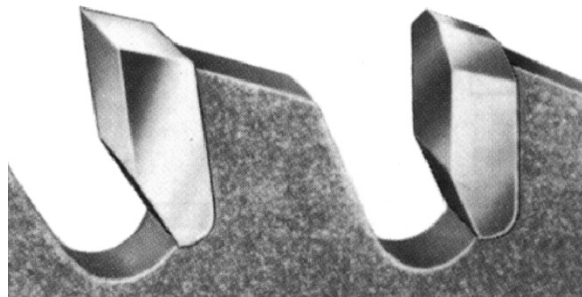


Figure 16

A positive angle determines better penetration of the tool and hence lower shear stress and greater ease of sliding for the swarf over the cutting edge. On the other hand, the cutting edge has lower mechanical resistance, so as the breaking load of the material to be cut increases, the cutting angle decreases from positive until it becomes negative so as to offer a cutting edge with a larger resistant section.

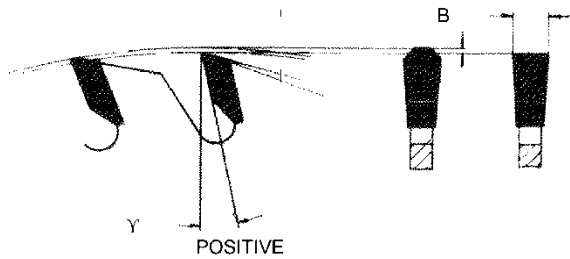


Figure 17

Short swarf material such as brass, bronze, aluminum and hard cast iron require smaller cutting angles because the swarf becomes crushed immediately and the rake angle has little effect during the cutting stage.

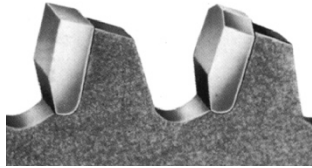


Figure 18

The J-FK350 uses discs with positive cutting angles for cutting solid materials and with negative cutting angles for cutting hollow profiles. This is because, as a result of the high cutting speeds (3400 rpm), even with non-ferrous materials the tool "strikes" against the wall of the profile to be cut several times, thus requiring a cutting edge with a larger resistant section.


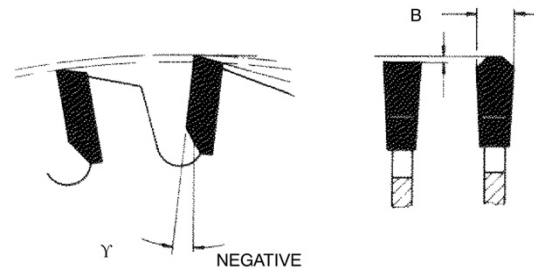


Figure 19

Circular saws can also be characterized by other parameters such as the whine reduction feature, which cuts down noise at high speeds, or expansion, which compensates for the pushing of chips inside the cutting edge, thus reducing the thrust on the walls of the material to be cut.

Whine reduction feature

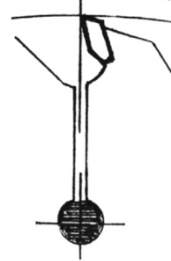

Expansion cut

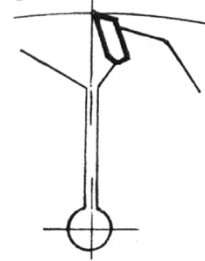


Figure 20

14.0 Troubleshooting the J-FK350

14.1 Blade and Cutting Problems

Problem	Probable Cause	Solution
Teeth breaking	Incorrect lubricant/coolant fluid	Ensure proper coolant flow.
	Material too hard	Check the cutting speed, feed speed and air pressure parameters and the type of blade you are using.
	Disc not worn-in correctly	With a new blade it is necessary to start cutting at half feeding speed. After the wearing-in period (a cutting surface of about 300 cm ² for hard materials and about 1000 cm ² for soft materials) the cutting and feed speeds can be brought up to normal values
	Disc with excessively fine tooth pitch	The swarf wedges into the bottom of the teeth causing excessive pressure on the teeth themselves. Use disc with greater pitch.
	New blade inserted in a partially completed cut	The surface of the cut may have undergone work hardening. When starting work again, use a lower cutting speed and head feed speed. A tooth from the old blade may be left in the cut: check and remove before starting work again.
	Work piece not clamped firmly in place	Any movement of the work piece during cutting can cause broken teeth: check the vise, jaws and clamping pressure.
Rapid tooth wear	Feed speed too slow	The blade runs over the material without removing it: increase feed speed.
	Cutting pressure too high	Reduce cutting pressure.
	Blade speed too high	The teeth slide over the material without cutting it: reduce the blade speed.
	Insufficient coolant	Check the coolant level and clean coolant lines and nozzles.
	Incorrect fluid concentration	Check and use the correct concentration.
	Material defective	The materials may present altered zones either on the surface, such as oxides or sand, or in section, such as under-cooled inclusions. These zones, which are much harder than the blade, cause the teeth to break: discard or clean these materials.
Broken blade	Feed speed too high	Reduce blade speed.
	Teeth in contact with material before starting the cut	Always check the position of the blade before starting a new job.
	Insufficient coolant	Check the coolant level and clean coolant lines and nozzles.

14.2 Machine Fault & Operating Problems

Problem	Probable Cause	Solution
Spindle motor will not turn	Electrical power supply	Check: the phases; the cables; the plug; the socket. Also check that the motor connections are in place.
	Transformer	Check that the voltages are present both on the input and output. Otherwise replace.
	Contactor	Check that the phases in it are present both on the input and output, that it is not jammed, that it closes when powered and that it is not causing short circuits. Change if any of these problems are found.
	Thermal relay	Make sure it is closed, i.e. check that the phases are present in input and output, that it is not causing short circuits and responds when the reset coil is closed. If it has tripped to protect the motor, check the amperage setting, reset, and check the motor. Change if necessary.
	Motor	Check that it has not burnt out, that it turns freely and that there is no moisture in the connection terminal board box. The winding can be rewound or replaced.

15.0 Parts

Ordering Replacement Parts

Replacement parts are listed on the following pages. To order parts or reach our service department, call 1-800-274-6848 Monday through Friday, 8:00 a.m. to 5:00 p.m. CST. Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.

Non-proprietary parts, such as fasteners, can be found at local hardware stores, or may be ordered from JET.


Some parts are shown for reference only, and may not be available individually.

15.1.1 Head Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
1	JT9-J-FK350-201G	Head Body		1
2	JT9-FK350-202A	Spindle		1
3	**	Spindle Housing		1
4	JT9-FK350-204	Cutter Cap		1
5	JT9-FK350-205	Cutter Cap Pin		2
6	JT9-FK350-206	Stopper Ring		1
7	JT9-FK350-207	Spring Block		1
8	JT9-FK350-208	Tension Bolt		1
9	JT9-FK350-209	Belleville Spring		4
10	JT9-FK350-212	Taper Shaft		1
11	JT9-FK350-212	Worm Wheel		1
12	JT9-FK350-212	Worm Shaft		1
13	**	36NTGear		1
14	**	21NTGear		1
15	JT9-FK350-215	Collar A		1
16	JT9-FK350-216	Collar B		1
17	JT9-FK350-217	Bearing Cover		1
18	JT9-FK350-218	Handle		1
19	JT9-FK350-219	Handle Switch		1
21	JT9-BB-32007	Tapered Roller Bearing	#32007	1
22	**	Tapered Roller Bearing	#32008	1
23	JT9-FK350-223	Lock Washer		1
24	JT9-FK350-224	Tooth Washer		1
25	JT9-FK350-225	Retainer Nut		1
26	JT9-FK350-226	Retainer Nut		1
27	JT9-FK350-227	Tooth Washer		1
28	JT9-FK350-228	Tooth Washer		1
29	JT9-FK350-229	Retainer Nut		1
30	JT9-FK350-230	Flat Key	8x7x42mm	1
31	JT9-FK350-231	Flat Key	8x7x27mm	1
32	JT9-FK350-232	O-Ring		1
33	JT9-FK350-233	O-Ring	P8	1
34	JT9-FK350-234	Pin	5mm Dia. x 28	2
35	JT9-TS-1540071	Hex Nut	M10	22
36	JT9-FK350-236	Needle Roller Bearing	BK3026	1
37	JT9-BB-51206	Thrust Bearing	#51206	1
38	CM9-BB-6206	Deep Groove Ball Bearing	#6206	1
39	JT9-J-FK350-239	Motor 220V		1
	JT9-J-FK350-239-4	Motor 440V		1
	JT9-J-FK350-239-1	Motor Cover		1
	JT9-J-FK350-239-2	Motor Fan		1
	JT9-J-FK350-239-3	Junction Box Cover		1
40	**	Saw Blade (local purchase)		1
41	JT9-FK350-241	Stopper		1
42	JT9-FK350-242	Oil Sight Glass		1
43	JT9-TS-1504051	Socket Head Cap Screw	M8x25	2
44	JT9-TS-1504041	Socket Head Cap Screw	M8x20	10
45	JT9-TS-1504131	Socket Head Cap Screw	M8x70	1
46	JT9-FK350-246	Oil Plug		1
47	JT9-FK350-247A	Socket Head Cap Screw (left-hand thread)	M20x45 (LH)	1
48	JT9-FK350-248	Oil Plug		1
49	JT9-FK350-249	Oil Plug		1
50	JT9-TS-1504061	Socket Head Cap Screw	M8x30	4
51	JT9-TS-1492051	Hex Cap Screw	M12x50	4
52	JT9-TS-154012	Hex Nut	M20	1
53	JT9-TS-1540061	Hex Nut	M8	4
54	JT9-TS-2361201	Lock Washer	M20	1
55	JT9-TS-2361121	Lock Washer	M12	4

** These parts are shown for reference only and are not available for order individually. Non-proprietary parts, such as fasteners, can usually be found at local hardware stores.

15.1.2 Head Assembly – Exploded View

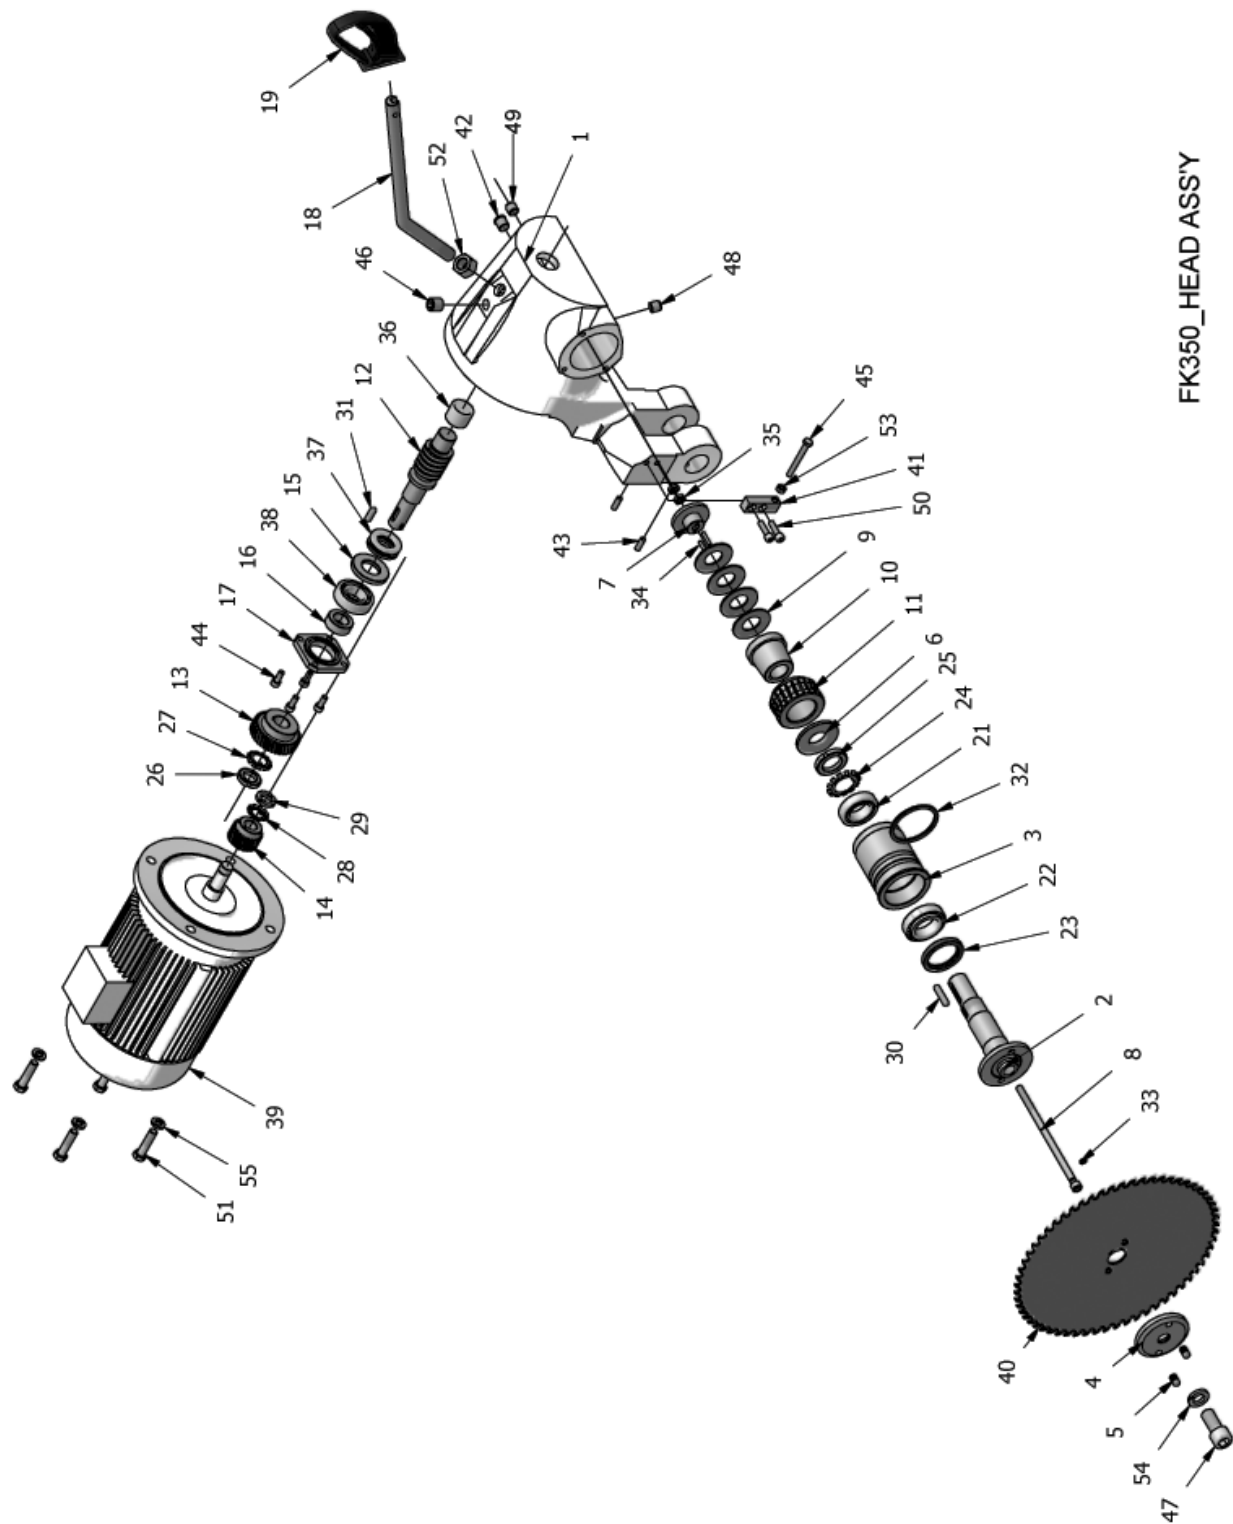


FK350_HEAD ASS'Y

15.2.1 Stock Stop Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
1	JT9-FK350-501	Block		1
2	JT9-FK350-502	Shaft		1
3	JT9-FK350-503	Stop Rod		1
4	JT9-FK350-504	Scale (Inch)		1
5	**			
6	JT9-FK350-506	Handle	M8x30	2
7	JT9-FK350-505	Rivet		2


15.2.2 Stock Stop Assembly – Exploded View

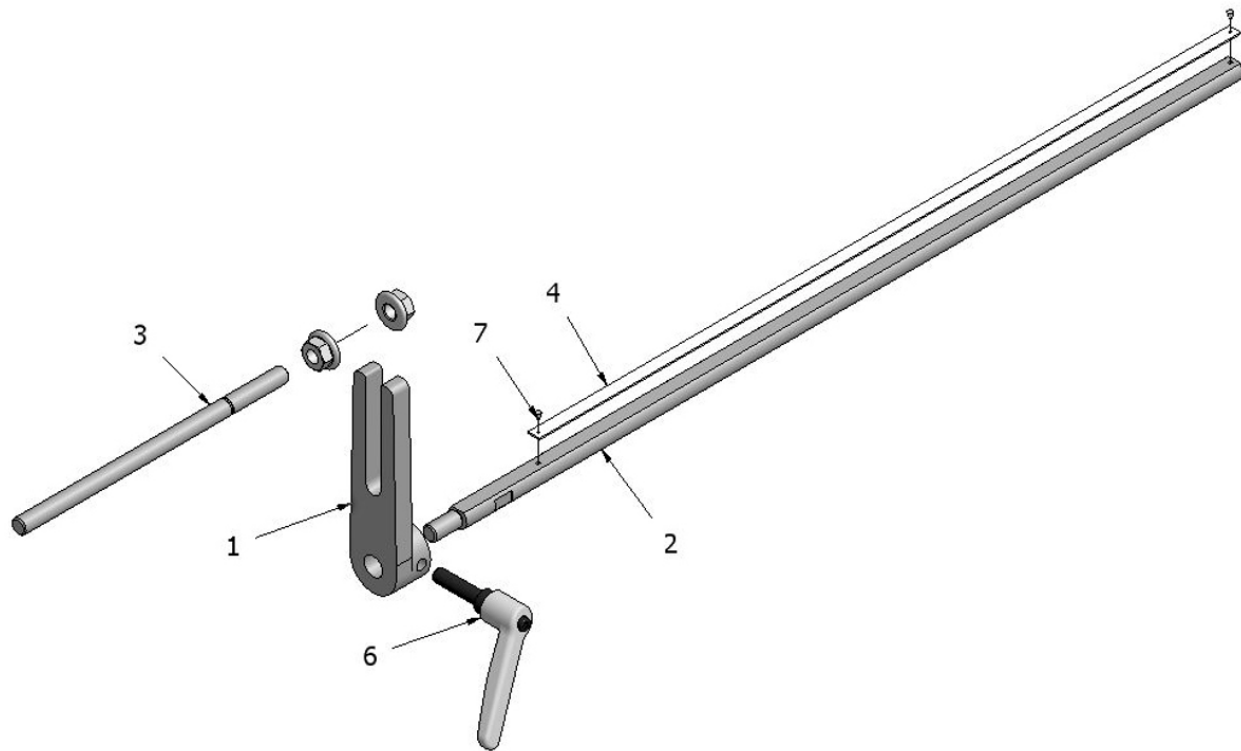

15.3.1 Stand Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
1	JT9-J-FK350-601G	Cabinet Stand		1
2	JT9-FK350-602G	Coolant Pump		1
3	JT9-FK350-603	Cam Switch		1
4	JT9-FK350-604	Magnetic Switch	220V	1
	JT9-FK350-604	Magnetic Switch	440V	1
5	JT9-FK350-605	Overload Relay	220V	1
	JT9-FK350-605	Overload Relay	440V	1
6	JT9-FK350-606	Lighted Selector Switch		1
7	JT9-TS-1502051	Socket Head Cap Screw	M5x20	14
8	JT9-TS-1551031	Lock Washer	M5	4
9	JT9-FK350-609	Cable Lock		3
10	JT9-J-FK350-610G	Rear Cover		1
11	JT9-TS-1503021	Socket Head Cap Screw	M6x10	4
12	JT9-FK350-612	Tapered Plug	PT1/4	1
13	JT9-FK350-613	Coolant Gauge		1
14	JT9-TS-1502051	Socket Head Cap Screw	M5x20	2
15	JT9-FK350-615	Transformer (440V only)	AU-20DW(50/60Hz)	1
	JT9-FK350-615-2	Transformer (220V only)		1
	JT9-JET-92	JET Logo (not shown)	92x38mm	1

15.3.2 Stand Assembly – Exploded View

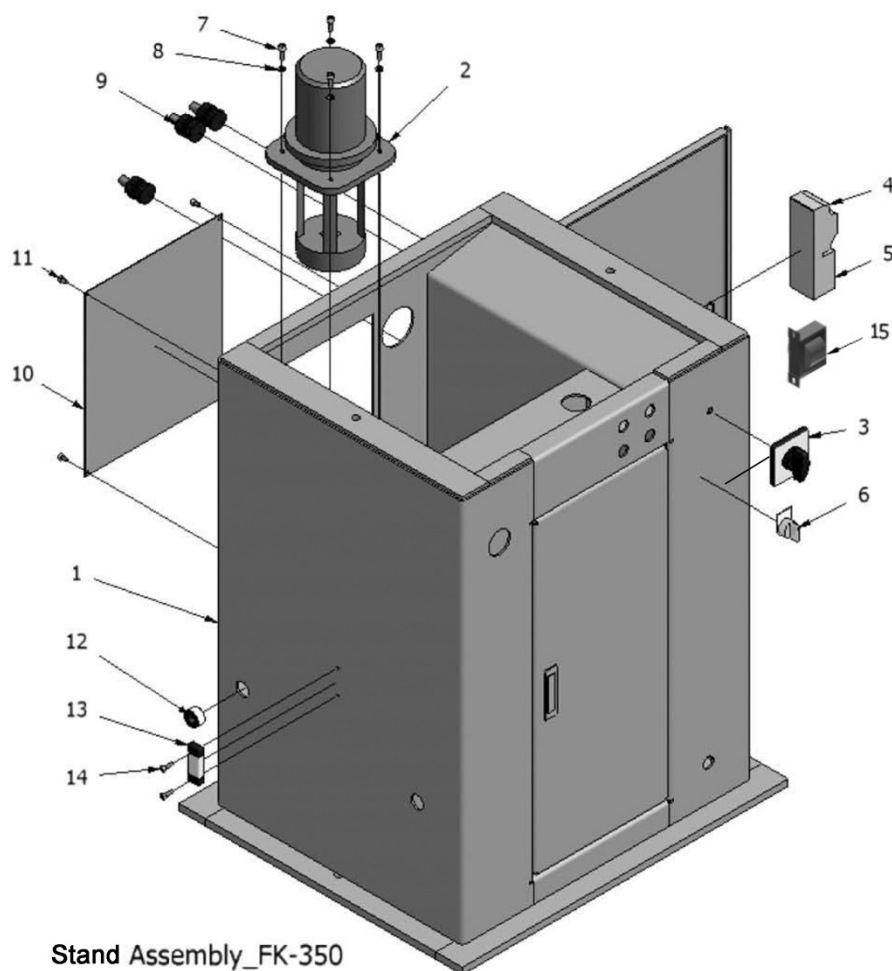


15.4.1 Base Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
1	JT9-J-FK350-101G	Base		1
2	JT9-J-FK350-102G	Hinge Body		1
3	JT9-FK350-103	Locking Mount		1
4	**	Release Handle		1
5	JT9-FK350-105	Pin		1
6	JT9-FK350-106	Coil Spring		1
7	JT9-FK350-107	Scale		1
8	JT9-FK350-108	Pivot Shaft		1
9	**	Spring Bracket A		1
10	JT9-J-FK350-110AG	Spring Bracket B		1
11	JT9-FK350-111A	Return Spring		1
12	JT9-FK350-112	Chip Screen		1
13	JT9-TS-1505031	Socket Head Cap Screw	M10x25	2
14	JT9-TS-1551071	Lock Washer	M10	2
16	JT9-TS-1504101	Socket Head Cap Screw	M8x50	2
17	JT9-TS-1491041	Hex Cap Screw	M10x30	10
18	JT9-TS-2361101	Lock Washer	M10	14
19	JT9-TS-1504021	Socket Head Cap Screw	M8x12	2
20	JT9-TS-1490041	Hex Cap Screw	M8x25	1
21	JT9-TS-223A911	Socket Head Cap Screw	M12x100	2
22	JT9-FK350-122	Pipe		1
23	JT9-FK350-123	Pin	10mm Dia. x 22	3
24	JT9-FK350-124	Grease Fitting	PT 1/8	2

** These parts are shown for reference only and are not available for order individually. Non-proprietary parts, such as fasteners, can usually be found at local hardware stores.

15.4.2 Base Assembly – Exploded View

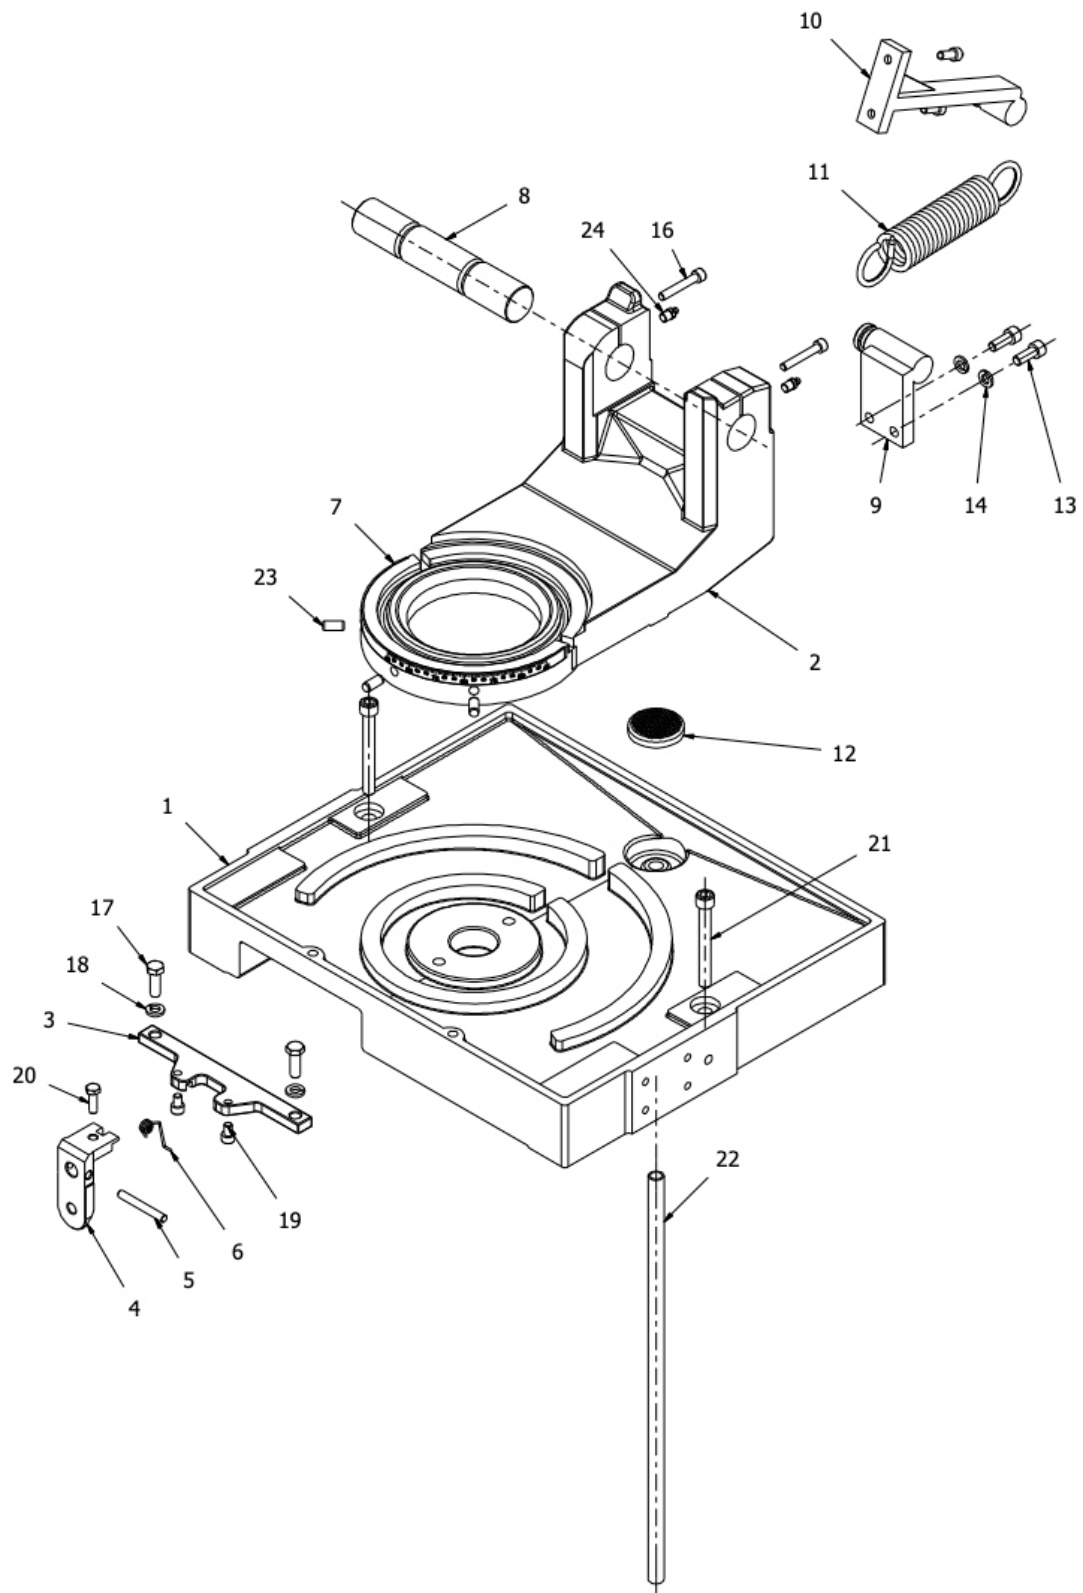


15.5.1 Manual Vise Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
	JT9-FK350-300	Complete Vise Assembly (includes index #1-32)		
1	JT9-J-FK350-301G	Base		1
2	JT9-J-FK350-302	Front Vise Jaw		1
3	JT9-FK350-303	Tip		1
4	JT9-FK350-304	Vise Screw		1
5	JT9-FK350-305	Jaw Insert A (Steel, Smooth)		2
	JT9-FK350-305ST	Jaw Insert A (Steel, Serrated)		2
6	JT9-FK350-306	Jaw Insert B (Steel, Smooth)		2
	JT9-FK350-306ST	Jaw Insert B (Steel, Serrated)		2
7	JT9-FK350-307	Guide Rod		2
8	JT9-FK350-308	Handle Hub		1
9	JT9-FK350-309	Handle		3
10	JT9-FK350-310	Filling Block		1
12	JT9-FK350-312	Cap		1
13	JT9-FK350-313	Setting Screw		1
14	JT9-FK350-314	Hex Nut	M20x1.5P	1
15	JT9-J-FK350-315G	Cover		1
16	JT9-FK350-316	Tension Handle		1
17	JT9-FK350-317	Tension Nut		1
18	JT9-FK350-318	Pressure Plate		1
19	JT9-FK350-319	Scale Centering		1
20	JT9-FK350-320	Pin	10mm Dia. x 30	2
21	JT9-FK350-321	Retainer		2
22	JT9-TS-1505051	Socket Head Cap Screw	M10x35	4
25	JT9-TS-1502031	Socket Head Cap Screw	M5x12	2
26	JT9-TS-1550031	Flat Washer	M5	2
27	JT9-TS-2208501	Hex Cap Screw	M8x50	3
29	JT9-TS-1505041	Socket Head Cap Screw	M10x30	2
30	JT9-TS-1505011	Socket Head Cap Screw	M10x16	2
31	JT9-FK350-331	Rivet	2mm Dia. x 4	2
32	**	Rear Vise Jaw		1

** These parts are shown for reference only and are not available for order individually. Non-proprietary parts, such as fasteners, can usually be found at local hardware stores.


15.5.2 Manual Vise Assembly – Exploded View

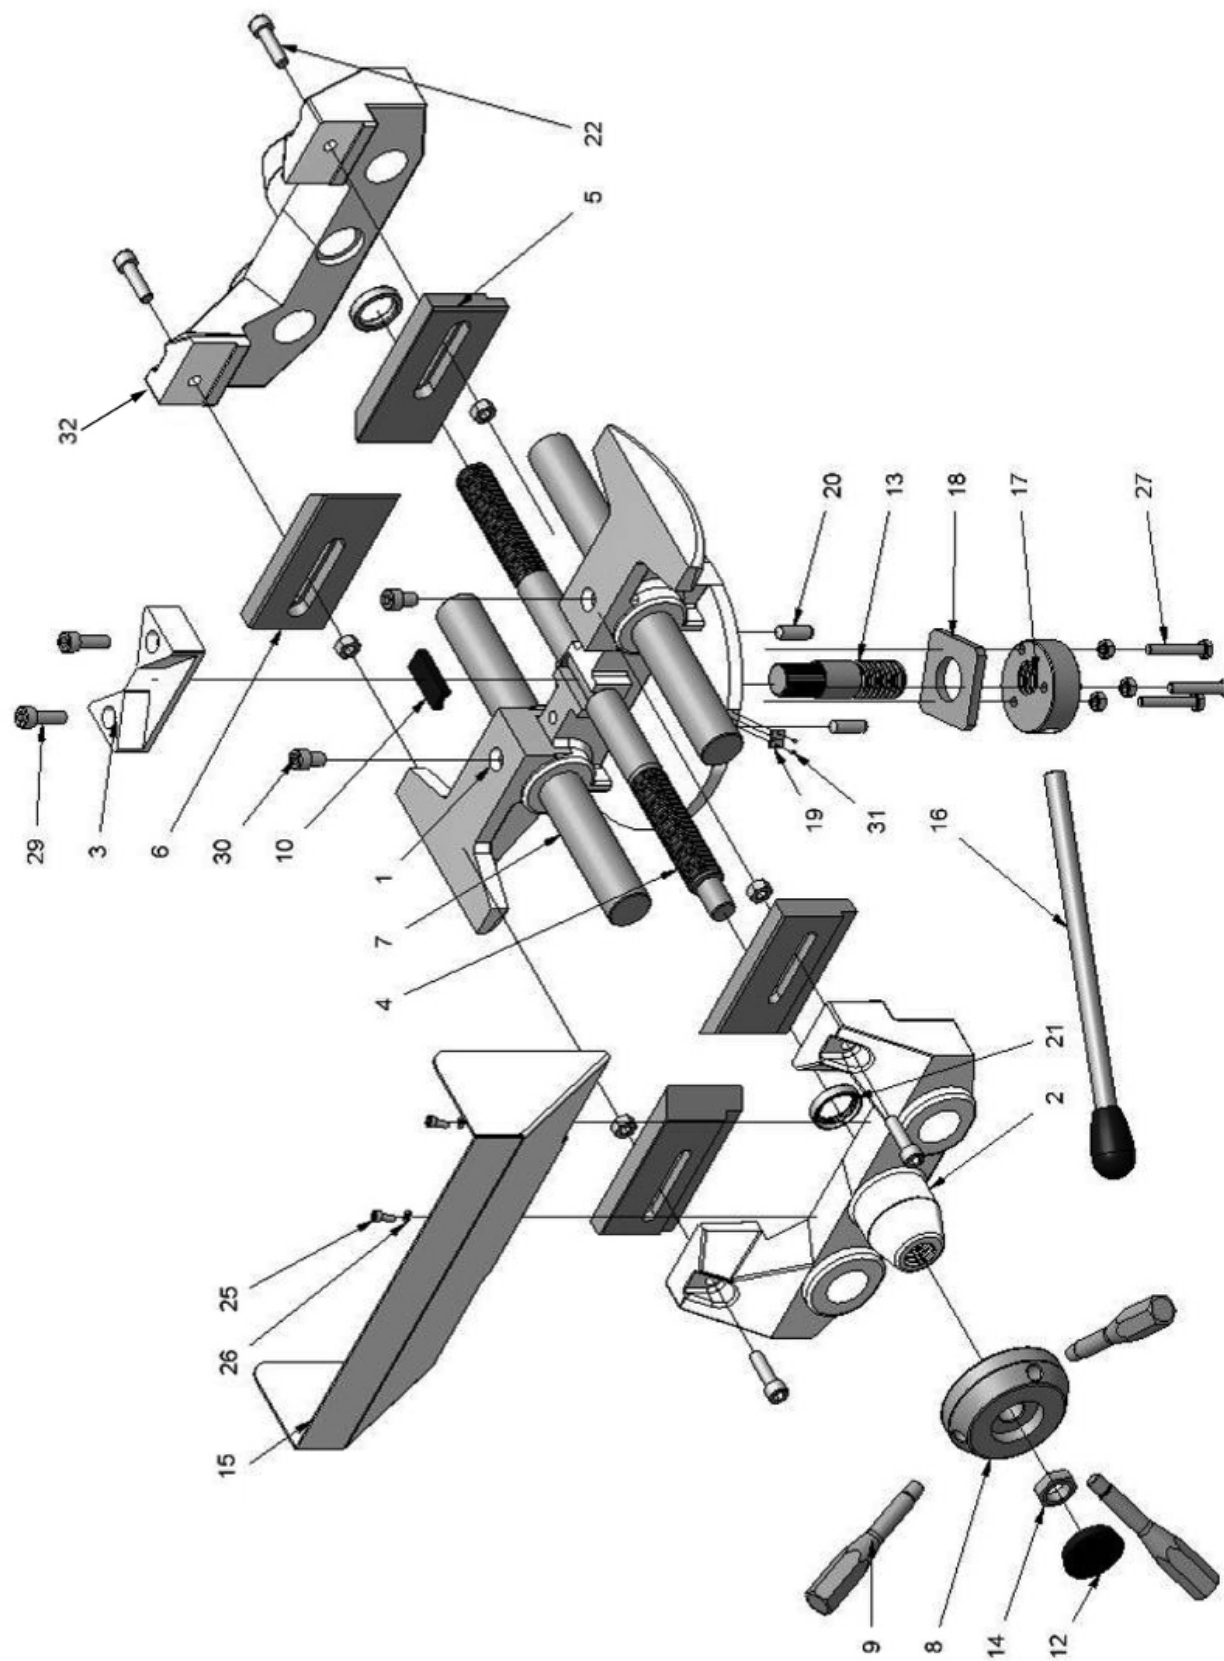

15.6.1 Guard Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
1	JT9-J-FK350-401	Guard A		1
2	JT9-J-FK350-402	Guard B		1
3	JT9-J-FK350-403	Guard C		1
4	JT9-FK350-404	Link A		1
5	JT9-FK350-405	Nylon Spacer A		6
6	JT9-FK350-406	Nylon Spacer B		3
7	JT9-FK350-407	Nylon Spacer C		2
8	JT9-FK350-408	Link B		1
9	JT9-FK350-409	Link C		1
10	JT9-FK350-410	Link Ring		1
11	JT9-FK350-411	Link Pin		1
12	JT9-FK350-412	Link Bracket		1
13	JT9-FK350-413	Link D		1
14	JT9-FK350-414	Link D Ring		1
15	CM9-TS-1504031	Socket Head Cap Screw	M8x16	3
16	JT9-TS-1550061	Flat Washer	M8	3
18	JT9-TS-1551061	Lock Washer	M8	2
19	JT9-TS-1521021	Set Screw	M4x6	1
20	JT9-FK350-420	Snap Ring	S48	1
21	JT9-FK350-421	Snap Ring	S10	2
22	JT9-FK350-422	Bushing		1
23	JT9-FK350-423	Knob	M8x30	1
24	JT9-FK350-424	Shut off Valve		1
25	JT9-FK350-425	Hose Band		1
26	JT9-FK350-426	Hose		1


15.6.2 Guard Assembly – Exploded View

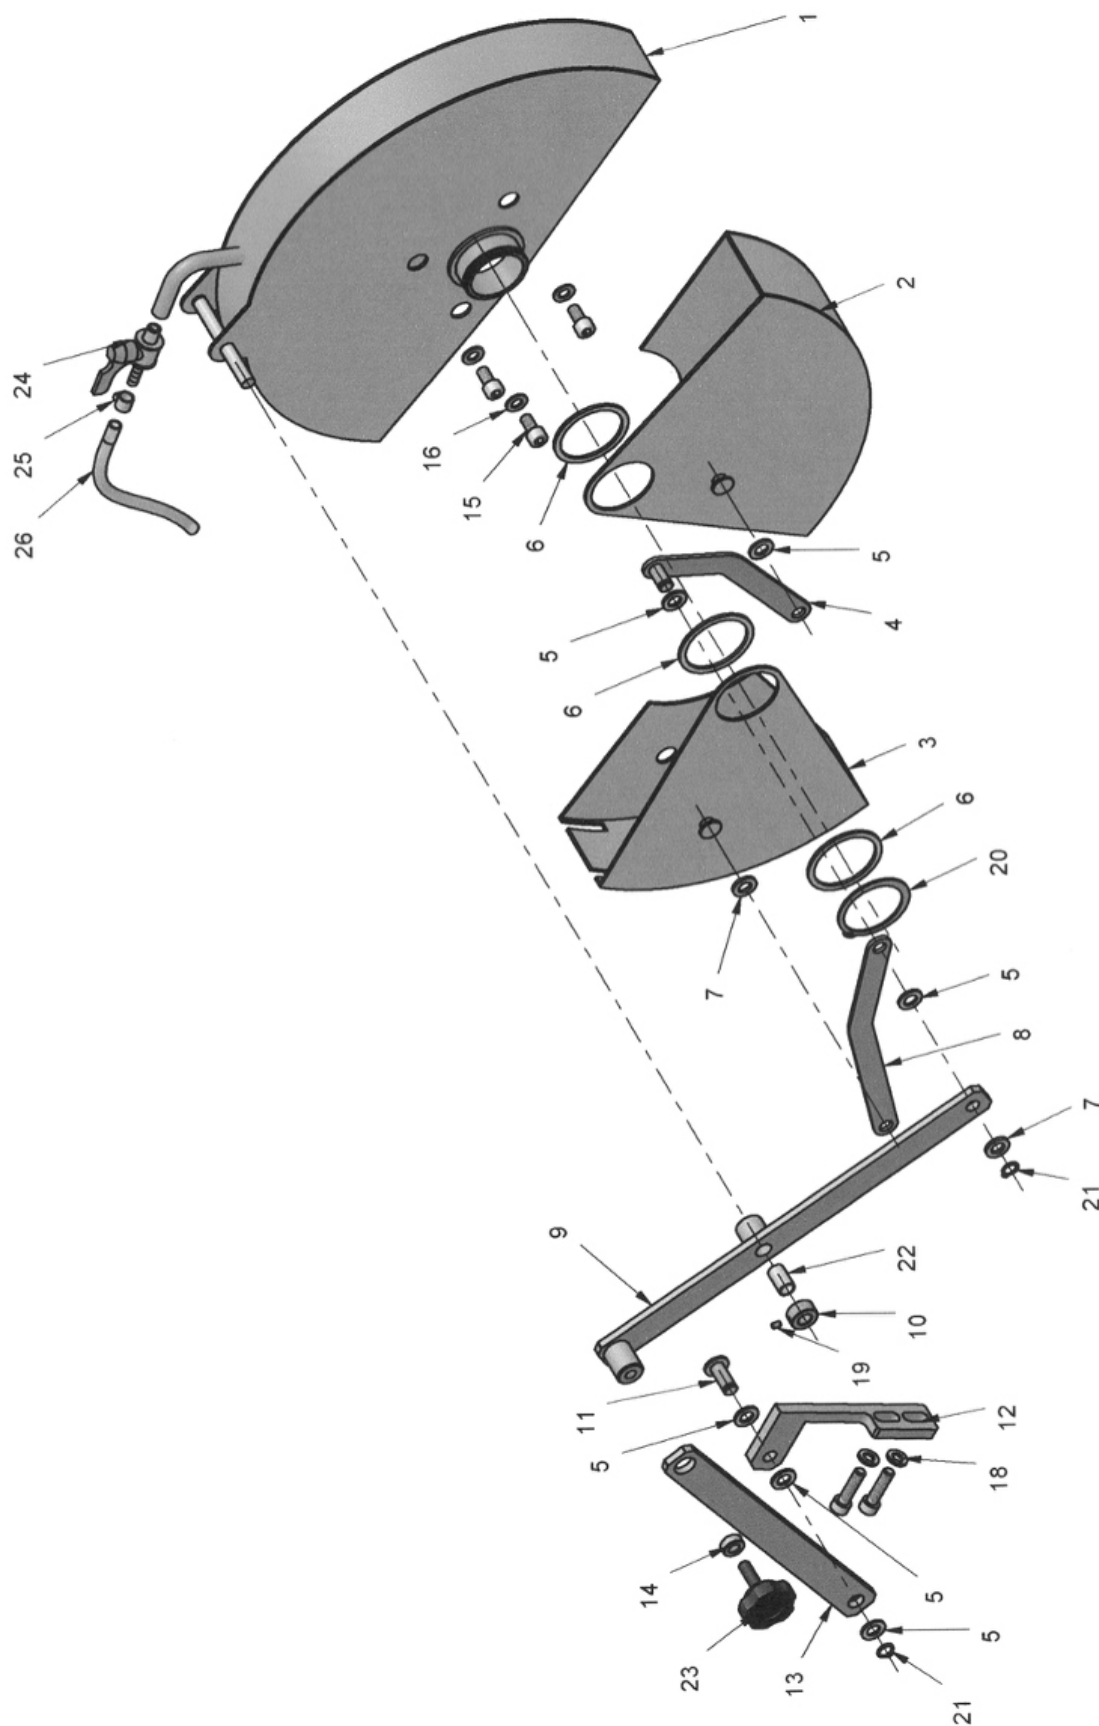

15.7.1 In-Feed Table Assembly – Parts List

Index No.	Part No.	Description	Size	Qty
1	JT9-J-FK350-701	Bracket		1
2	JT9-J-FK350-702	Stand		1
3	JT9-FK350-703	Leveling Foot		2
4	JT9-TS-154010	Hex Nut	M16	2
5	JT9-FK350-705	Angle Rail		2
6	JT9-J-FK350-706	Base A		1
7	JT9-J-FK350-707	Base B		1
9	JT9-TS-1491061	Hex Cap Screw	M10x40	2
10	JT9-TS-1491121	Hex Cap Screw	M10x70	2
13	JT9-FK350-713	Roller		6
14	JT9-FK350-714	Roller Bracket		12
15	JT9-TS-1502021	Socket Head Cap Screw	M5x10	12
16	JT9-J-FK350-716	Cover A		2
17	JT9-J-FK350-717	Cover B		5
18	JT9-TS-1533032	Pan Head Screw	M5x10	7

15.7.2 In-Feed Table Assembly – Exploded View

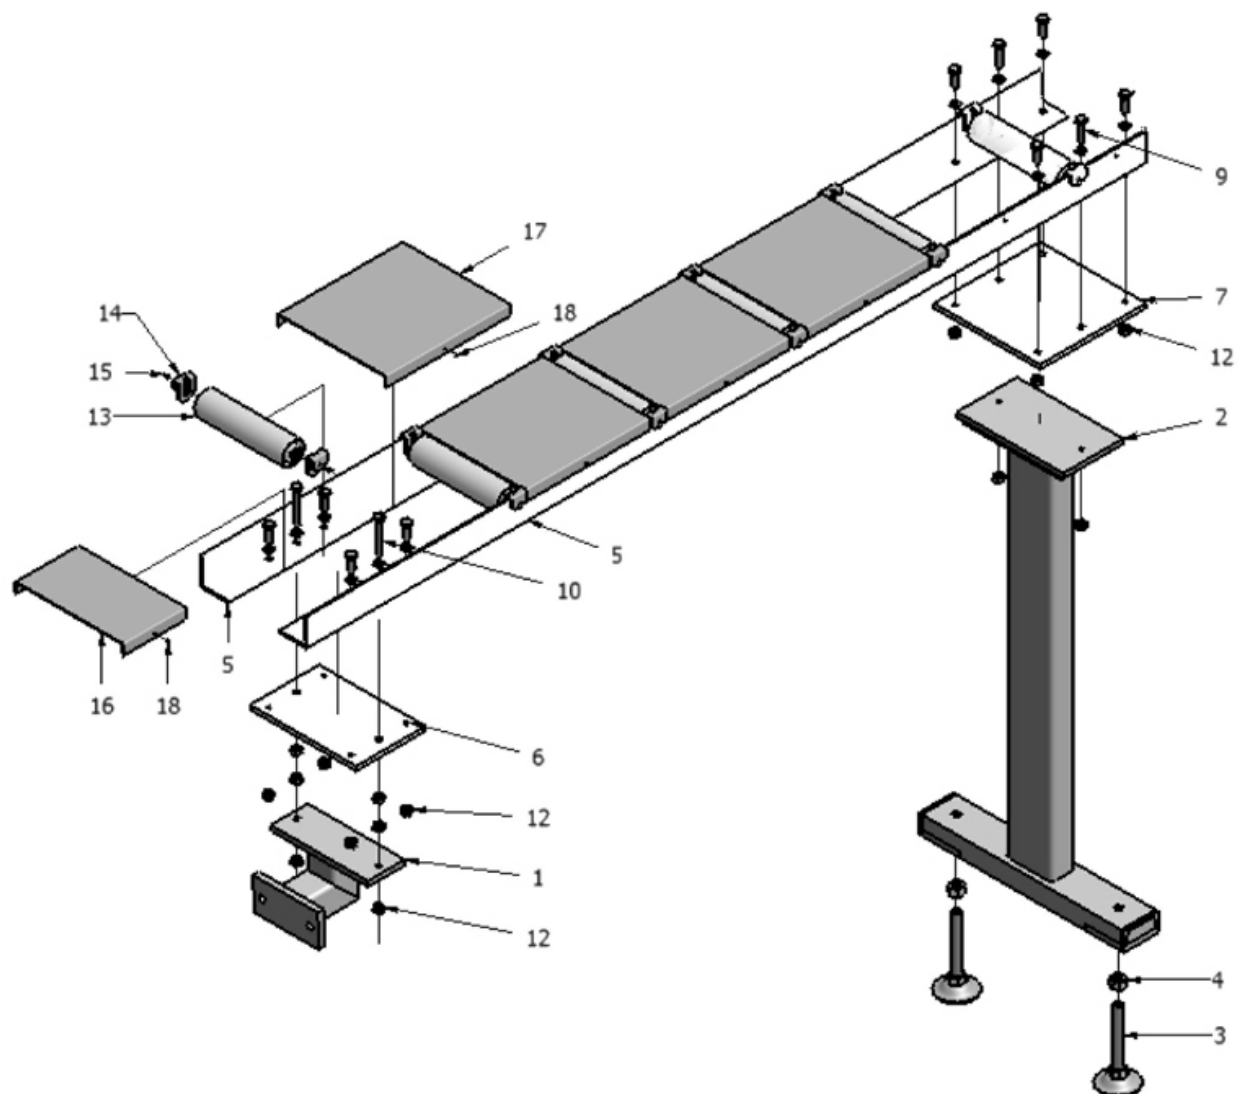


15.8.1 Out-Feed Table – Parts List


Index No.	Part No.	Description	Size	Qty
1	JT9-FK350-801	Guide Block		1
2	JT9-FK350-802	Guide Rail		1
4	JT9-FK350-804	Stopper Base		1
6	JT9-FK350-806	Connecting Plate		1
7	JT9-TS-1502071	Socket Head Cap Screw	M5x30	3
8	JT9-FK350-808	Lock Block A		1
9	**	Lock Block B		1
10	**	Spring		1
11	JT9-FK350-811	Stopper		1
12	JT9-TS-1503051	Socket Head Cap Screw	M6x20	2
13	JT9-FK350-813	Stopper Pad		1
14	JT9-TS-1502041	Socket Head Cap Screw	M5x16	2
15	JT9-FK350-815	Scale Indicator		1
16	JT9-FK350-816	Rivet		2
17	JT9-FK350-817	Inch Scale		1
18	JT9-FK350-810	Handle		1

** These parts are shown for reference only and are not available for order individually. Non-proprietary parts, such as fasteners, can usually be found at local hardware stores.

15.8.2 Out-Feed Table – Exploded View

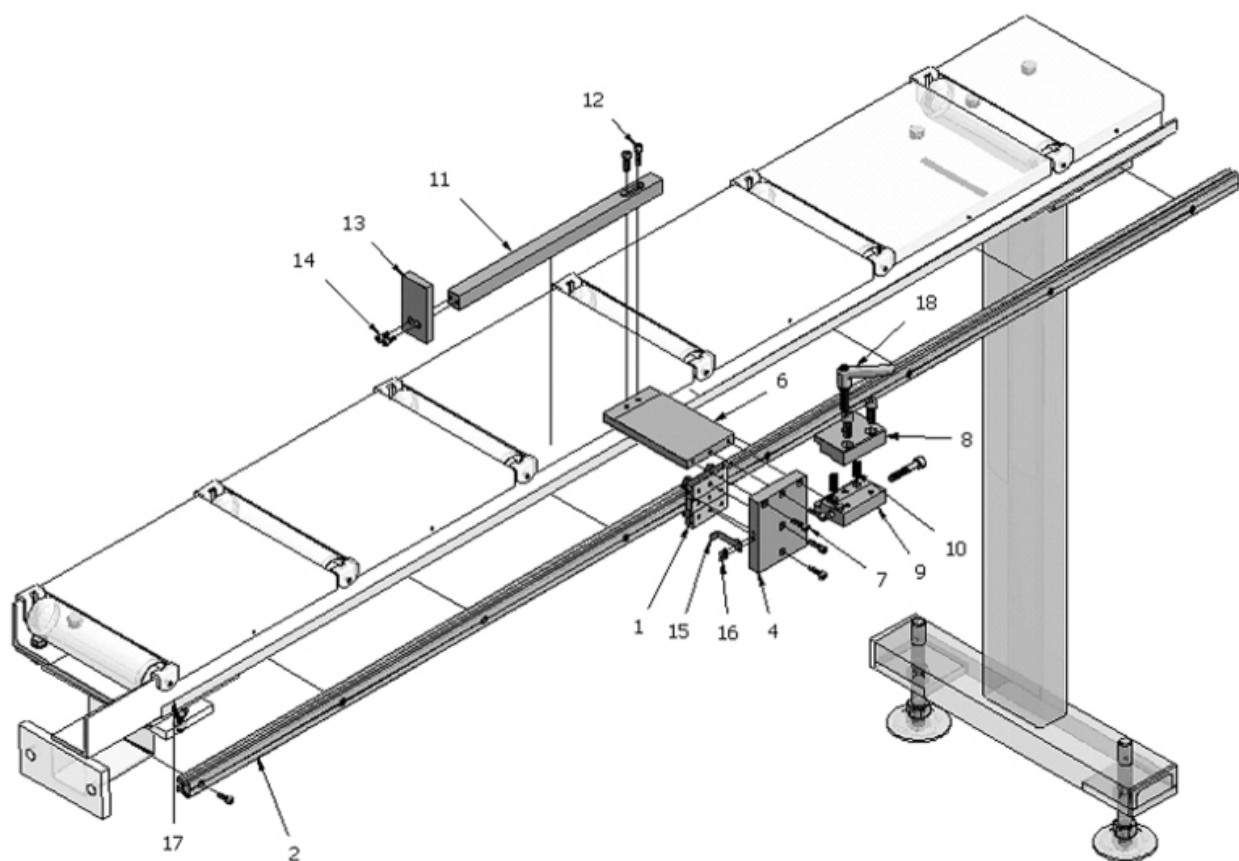

16.0 Wiring Diagram

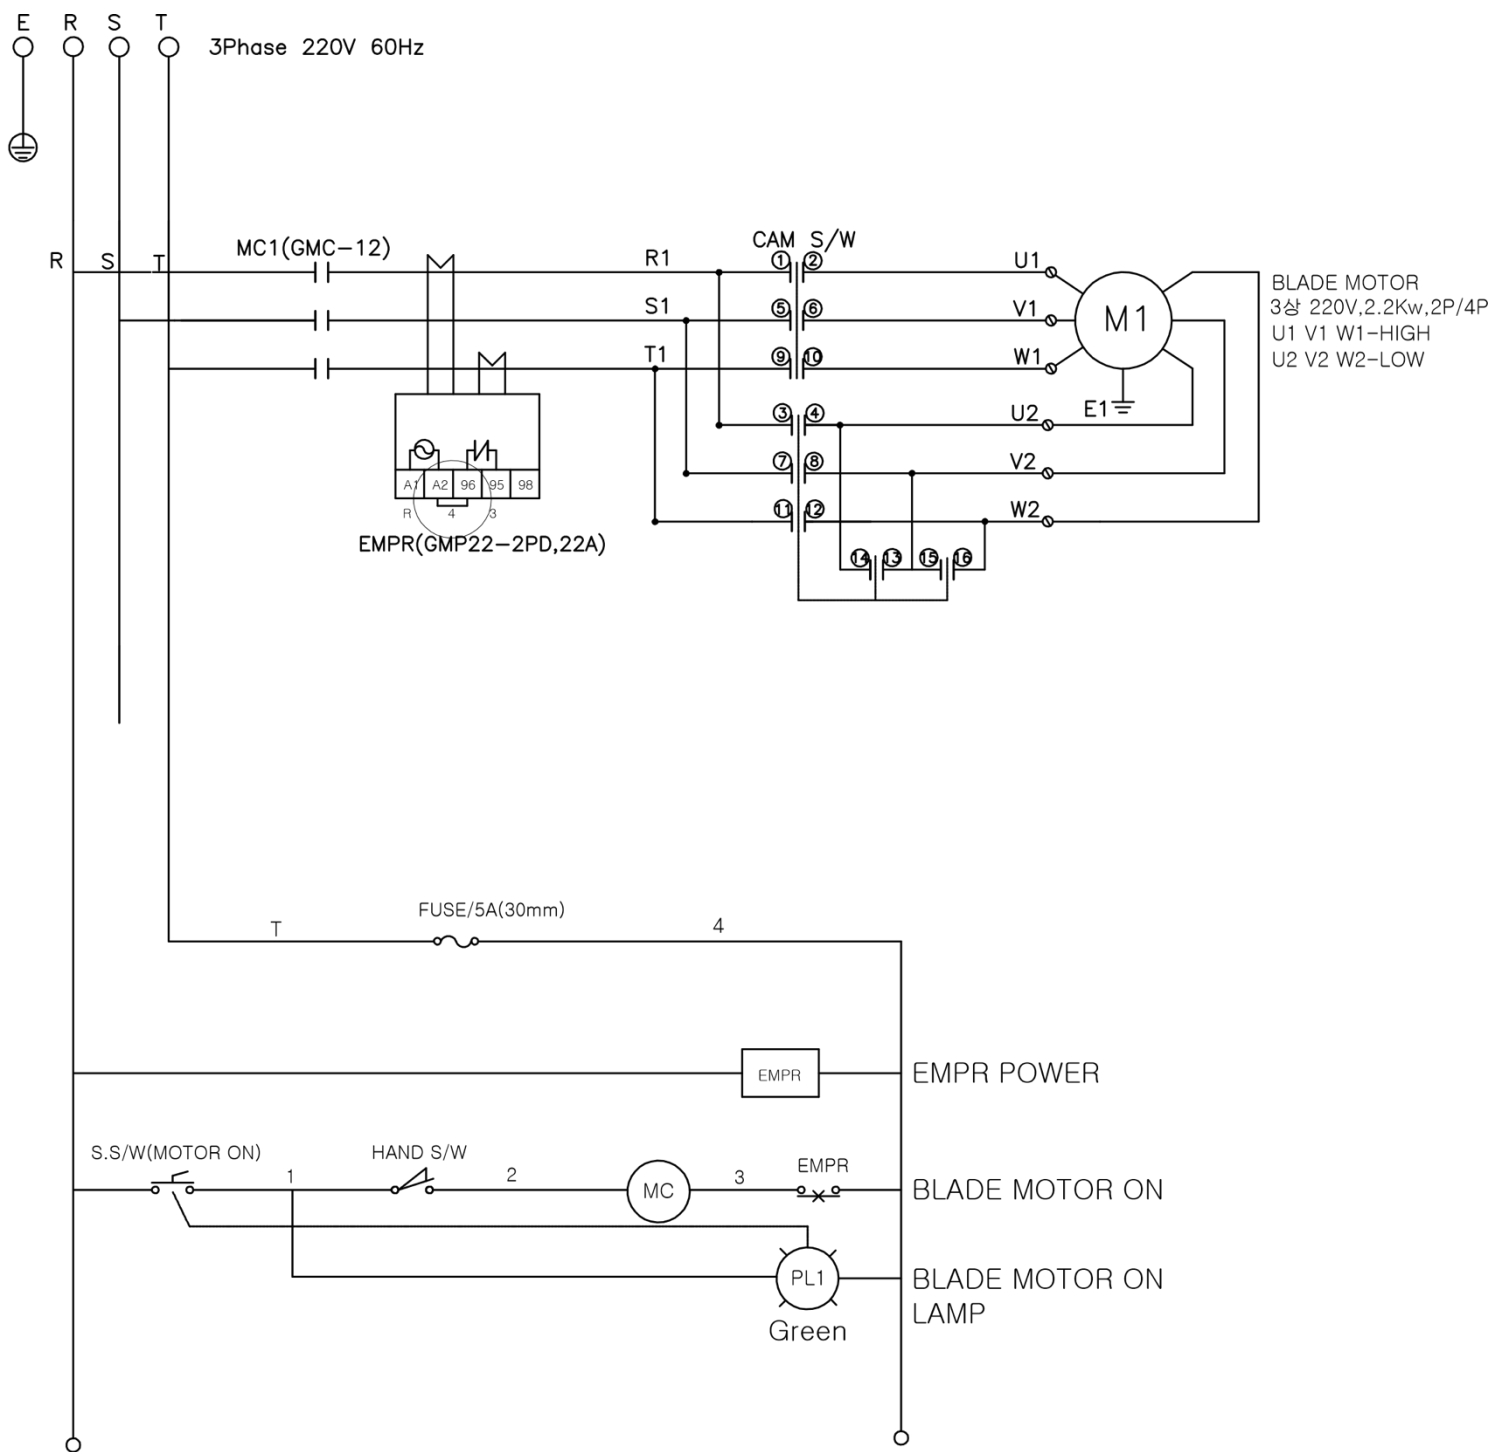



427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.jettools.com