



Operating Instructions and Parts Manual

Box and Pan Brake

Model BB-2416E



Baileigh Industrial
P.O. Box 531
Manitowoc, WI 54221-0531
Ph.: 920-684-4990
Fax: 920-684-3944
Baileigh-Sales@jpwindustries.com

BA9-1000383
Edition 2 07/2025
Copyright © 2021 Baileigh Industrial

1.0 Table of Contents

Section	Page
1.0 Table of Contents	2
2.0 Safety Instructions	3
3.0 About This Manual	4
4.0 Product Identification	5
4.1 Overall Dimensions	6
5.0 Specifications	7
5.1 Description	7
6.0 Setup and Assembly	8
6.1 Unpacking and Checking Contents	8
6.2 Cleaning	8
6.3 Transporting and Lifting	8
6.4 Installation	8
6.5 Assembly	9
7.0 Operation	11
7.1 Bending Sheet Metal	11
8.0 Bending Allowance	12
9.0 Understanding Springback	12
10.0 Material Selection	12
11.0 Maintenance	12
11.1 Oil Ports	12
12.0 Troubleshooting	13
13.0 Replacement Parts	14
13.1.1 Box and Pan Brake Assembly – Exploded View	14
13.1.2 Box and Pan Brake Assembly – Exploded View	15
14.0 Warranty and Service	16



2.0 Safety Instructions

⚠ WARNING

Failure to follow these rules may result in serious personal injury

1. FOR YOUR OWN SAFETY, READ INSTRUCTION MANUAL BEFORE OPERATING THE MACHINE. Learn the machine's application and limitations as well as the specific hazards.
2. Only trained and qualified personnel can operate this machine.
3. Make sure guards are in place and in proper working order before operating machinery.
4. Remove any adjusting tools. Before operating the machine, make sure any adjusting tools have been removed.
5. Keep work area clean. Cluttered areas invite injuries.
6. Overloading machine. By overloading the machine you may cause injury from flying parts. DO NOT exceed the specified machine capacities.
7. Machine usage. DO NOT use the brake as a press or crushing tool.
8. Dressing material edges. Always chamfer and deburr all sharp edges.
9. Do not force tool. Your machine will do a better and safer job if used as intended. DO NOT use inappropriate attachments in an attempt to exceed the machines rated capacity.
10. Use the right tool for the job. DO NOT attempt to force a small tool or attachment to do the work of a large industrial tool. DO NOT use a tool for a purpose for which it was not intended.
11. Dress appropriate. DO NOT wear loose fitting clothing or jewelry as they can be caught in moving machine parts. Protective clothing and steel toe shoes are recommended when using machinery. Wear a restrictive hair covering to contain long hair.
12. Use eye protection. Always wear ISO approved protective eye wear when operating machinery. Wear a full-face shield if you are producing metal filings. Eye wear shall be impact resistant, protective safety glasses with side shields which comply with ANSI Z87.1 specification. Use of eye wear which does not comply with ANSI Z87.1 specification could result in severe injury from breakage of eye protection.
13. Do not overreach. Maintain proper footing and balance at all times. DO NOT reach over or across a running machine.
14. Stay alert. Watch what you are doing and use common sense. DO NOT operate any tool or machine when you are tired.
15. Check for damaged parts. Before using any tool or machine, carefully check any part that appears damaged. Check for alignment and binding of moving parts that may affect proper machine operation.
16. Observe work area conditions. DO NOT use machines or power tools in damp or wet locations. Do not expose to rain. Keep work area well lighted.
17. Keep children away. Children must never be allowed in the work area. DO NOT let them handle machines, tools, or extension cords.
18. Store idle equipment. When not in use, tools must be stored in a dry location to inhibit rust. Always lock up tools and keep them out of reach of children.
19. DO NOT operate machine if under the influence of alcohol or drugs. Read warning labels on prescriptions. If there is any doubt, DO NOT operate the machine.
20. Keep visitors a safe distance from the work area.

Familiarize yourself with the following safety notices used in this manual:

⚠ CAUTION

This means that if precautions are not heeded, it may result in minor injury and/or machine damage.

⚠ WARNING

This means that if precautions are not heeded, it may result in serious injury or death.

⚠ DANGER

This means that if precautions are not heeded, it will result in serious or fatal, injury.

Save the Instructions

3.0 About This Manual

This manual is provided by Baileigh Industrial, covering the safe operation and maintenance procedures for a Baileigh Model BB-2416E Box and Pan Brake. This manual contains instructions on installation, safety precautions, general operating procedures, maintenance instructions and parts breakdown. Your machine has been designed and constructed to provide consistent, long-term operation if used in accordance with the instructions as set forth in this document.

Technical Support handles questions on setup, operation, schematics, warranty issues, and individual parts needed. Our Technical Support department can be reached at 920-684-4990.

If there are questions or comments, please contact your local supplier or Baileigh Industrial. We can also be reached at our web site: www.baileigh.com.

Retain this manual for future reference. If the machine transfers ownership, the manual should accompany it.

WARNING

Read and understand the entire contents of this manual before attempting assembly or operation! Failure to comply may cause serious injury!

Register your product online -

<https://baileigh.com/product-registration>



4.0 Product Identification

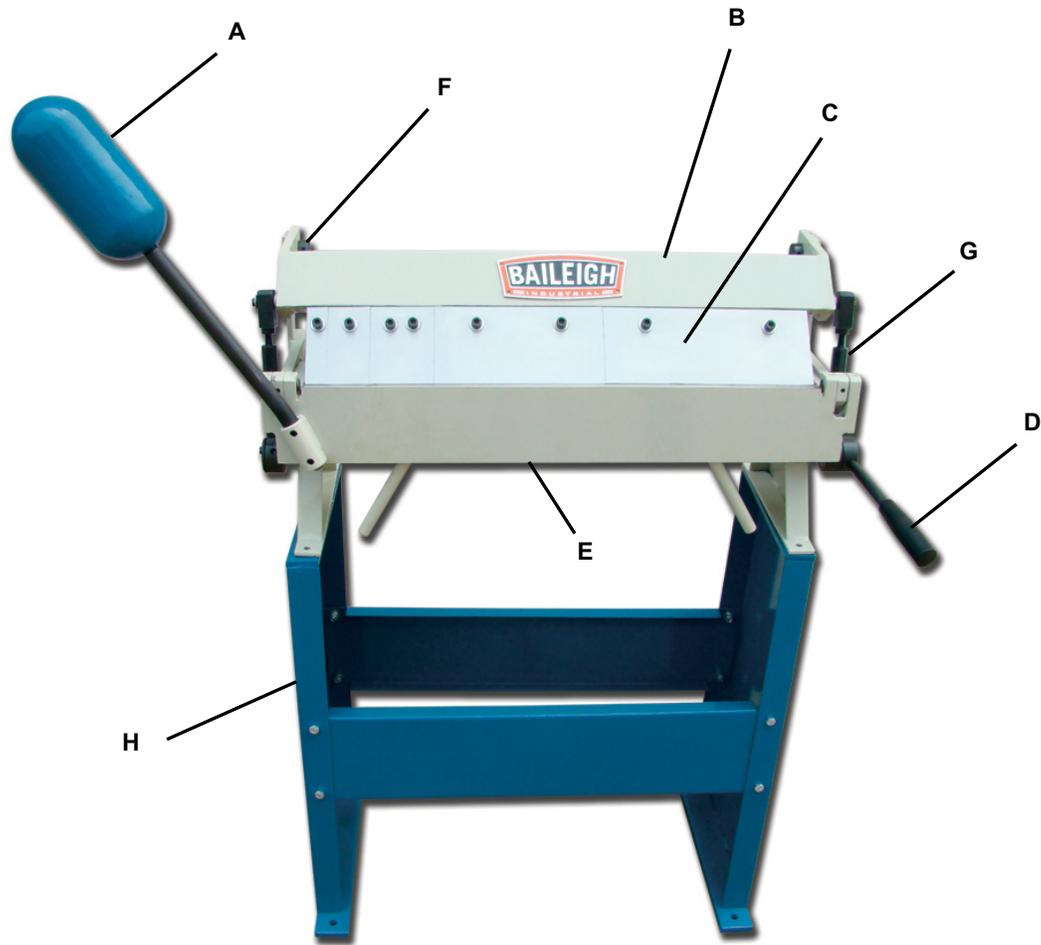


Figure 4-1

Table 4-1

Item	Description	Function
A	Counterweight	Used to assist in raising the bending leaf.
B	Clamping Leaf	Holds the fingers and secures the material in position.
C	Finger Blocks	Movable dies that the material is bent against.
D	Clamping Handle	Used to raise, lower, and lock the clamp assembly.
E	Bending Leaf w/Handles	Raised by the operator to make the bend.
F	Finger Offset Adjustment	Rotate eccentric shaft to change finger setback adjustment.
G	Clamp Pressure Turnbuckle	Used to change clamping pressure for thickness variance.
H	Mounting Stand	Heavy duty stand to support the brake.

4.1 Overall Dimensions

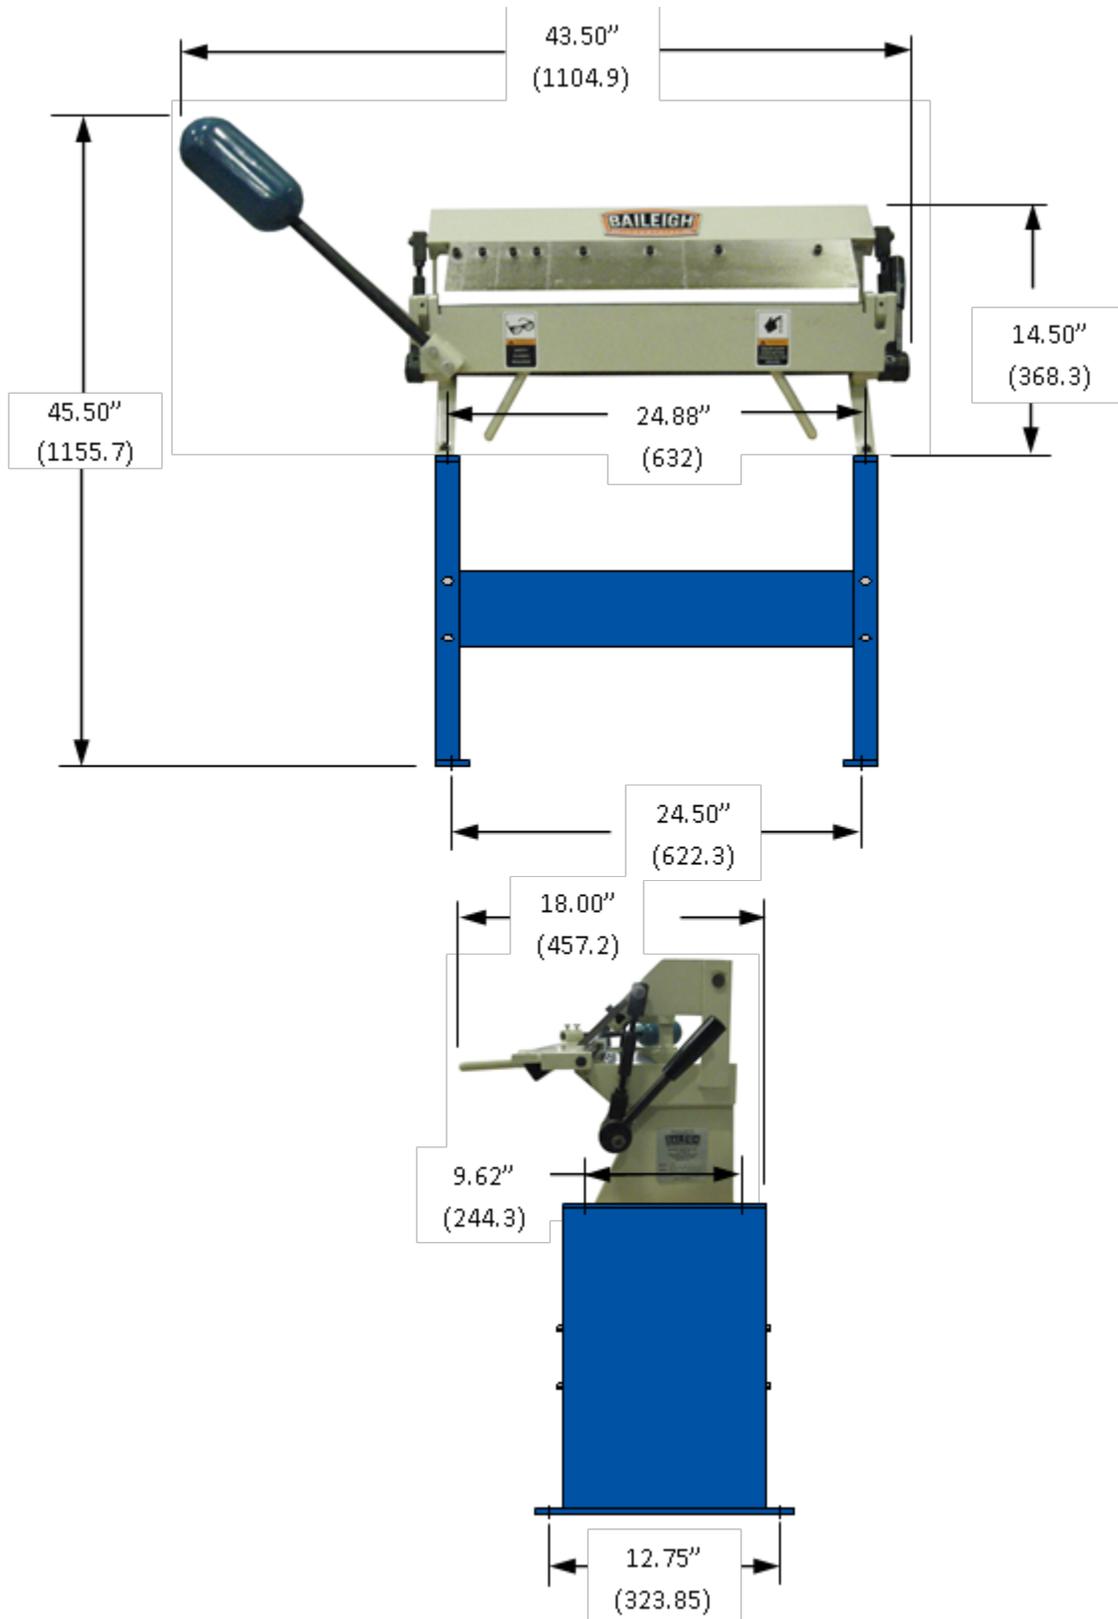


Figure 4-2

5.0 Specifications

Table 5-1

Model Number	BB-2416E
Stock Number	BA9-1000383
General Specifications	
Bend Length	24" (610mm)
Bend Material Thickness	16ga. (1.52mm) mild steel*
Bend Angle	0 – 135 degrees
Box Depth	1.18" (30mm)
Minimum Reverse Bend	.625" (16mm)
Floor Stand	Yes
Weights and Dimensions	
Shipping Dimensions (L x W x H)	34" x 14" x 18" (864 x 356 x 457mm)
Shipping Weight	185 lbs. (85 kg)
Based on a material tensile strength of *64000 PSI – mild steel	

5.1 Description

The Baileigh Model BB-2416E Box and Pan Brake is hand operated and capable of bending up to 16ga. (1.52mm) mild steel and 20ga. (.912mm) stainless x 24" (610mm) long. The machine has 5 removable fingers and a 1.18" (30mm) box depth allowing it to fabricate pans, boxes, channels, angles, and other shapes. Adjustable counterweights allow the operator to balance the bending leaf to correspond to material thickness.

⚠ WARNING

Read and understand the entire contents of this manual before attempting assembly or operation. Failure to comply may cause serious injury.

6.0 Setup and Assembly

6.1 Unpacking and Checking Contents

Your Baileigh machine is shipped complete. Separate all parts from the packing material and check each item carefully. Make certain all items are accounted for before discarding any packing material.

⚠ WARNING

SUFFOCATION HAZARD! Immediately discard any plastic bags and packing materials to eliminate choking and suffocation hazards to children and animals.

⚠ WARNING

If any parts are missing, **DO NOT** place the machine into service until the missing parts are obtained and installed correctly.

6.2 Cleaning

⚠ WARNING

DO NOT USE gasoline or other petroleum products to clean the machine. They have low flash points and can explode or cause fire.

⚠ CAUTION

When using cleaning solvents work in a well-ventilated area. Many cleaning solvents are toxic if inhaled.

Your machine may be shipped with a rustproof waxy coating and/or grease on the exposed unpainted metal surfaces. Fully and completely remove this protective coating using a degreaser or solvent cleaner. Moving items will need to be moved along their travel path to allow for cleaning the entire surface. For a more thorough cleaning, some parts will occasionally have to be removed. **DO NOT USE** acetone or brake cleaner as they may damage painted surfaces.

Follow manufacturer's label instructions when using any type of cleaning product. After cleaning, wipe unpainted metal surfaces with a light coating of quality oil or grease for protection.

IMPORTANT: This waxy coating is NOT a lubricant and will cause the machine to stick and lose performance as the coating continues to dry.

6.3 Transporting and Lifting

NOTICE

Lifting and carrying operations should be carried out by skilled workers, such as a truck operator, crane operator, etc. If a crane is used to lift the machine, attach the lifting chain carefully, making sure the machine is well balanced.

Follow these guidelines when lifting with truck or trolley:

- The lift truck must be able to lift at least 1.5 – 2 times the machines gross weight.



Figure 6-1

- Make sure the machine is balanced. While transporting, avoid rough or jerky motion, and maintain a safe clearance zone around the transport area.
- Use a fork lift with sufficient lifting capacity and forks that are long enough to reach the complete width of the machine.
- Remove the securing bolts that attach the machine to the pallet.
- Approaching the machine from the side, lift the machine on the frame taking care that there are no cables or pipes in the area of the forks.
- Move the machine to the required position and lower gently to the floor.
- Level the machine so that all the supporting feet are taking the weight of the machine and no rocking is taking place.

6.4 Installation

IMPORTANT:

Consider the following when looking for a suitable location to place the machine:

- Overall weight of the machine.
- Weight of material being processed.
- Sizes of material to be processed through the machine.
- Space needed for auxiliary stands, work tables, or other machinery.
- Clearance from walls and other obstacles.

- Maintain an adequate working area around the machine for safety.
- Have the work area well illuminated with proper lighting.
- Keep the floor free of oil and make sure it is not slippery.
- Remove scrap and waste materials regularly, and make sure the work area is free from obstructing objects.
- If long lengths of material are to be fed into the machine, make sure that they will not extend into any aisles.
- **LEVELING:** The machine should be sited on a level, concrete floor. Provisions for securing it should be in position prior to placing the machine. The accuracy of any machine depends on the precise placement of it to the mounting surface.
- **FLOOR:** This machine distributes a large amount of weight over a small area. Make certain that the floor is capable of supporting the weight of the machine, work stock, and the operator. The floor should also be a level surface. If the unit wobbles or rocks once in place, be sure to eliminate by using shims.
- **WORKING CLEARANCES:** Take into consideration the size of the material to be

6.5 Assembly

6.5.1 Contents

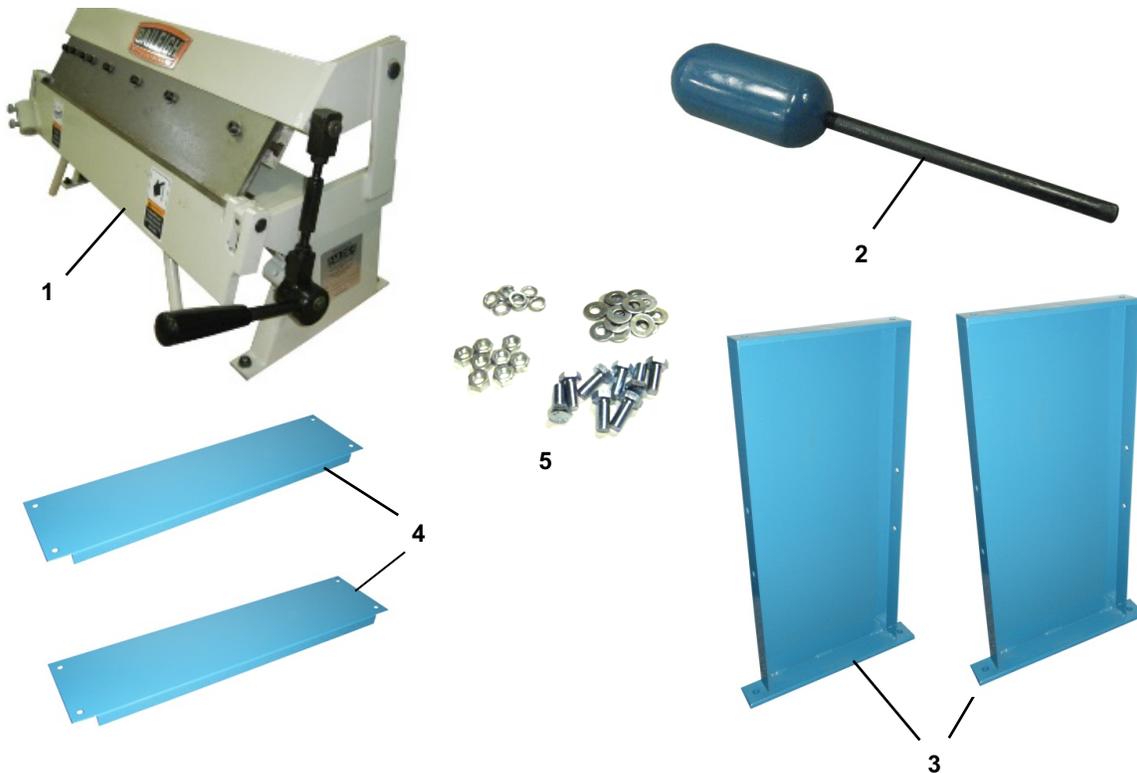


Figure 6-3

processed. Make sure that you allow enough space for you to operate the machine freely.

6.4.1 Anchoring the Machine

- Once positioned, anchor the machine to the floor, as shown in the diagram. Use bolts and expansion plugs or sunken tie rods that connect through and are sized for the holes in the base of the stand.
- This machine requires a solid floor such as concrete at a minimum of 4" (102mm) thick. 6" (153mm) minimum is preferred.

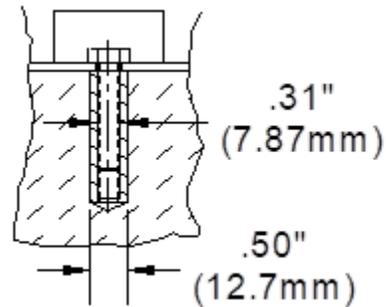


Figure 6-2

Table 6-1

Item	Description	Qty.
1	Brake Main Body	1
2	Counterweight	1
3	Support Stand Ends	2
4	Support Stand Braces	2
5	Hardware Bag	
	Hex Bolt M8 x 18mm	8
	Hex Nut M8	8
	Flatwasher M8	16
	Lockwasher M8	8

1. Assemble stand as shown using supplied bag of hardware.
2. Lightly tighten the bolts.

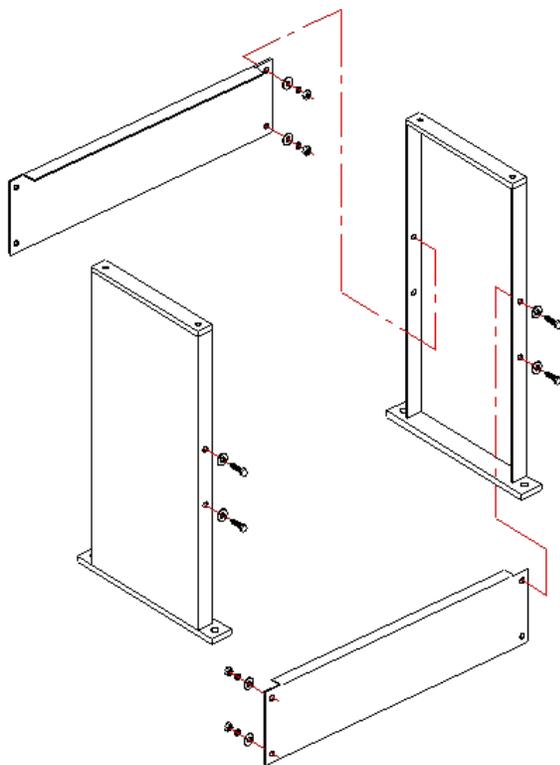


Figure 6-4

3. Install the brake onto the stand using the hardware used to secure the brake to the shipping pallet.
4. Take time to square the brake to the stand.
5. Fully tighten all the bolts for the stand and the brake to the stand.
6. Place the brake and stand in the desired location following the installation guidelines.

6.5.2 Attaching the counterweight

1. Have a helper hold the counterweight.
2. Back off the two hex bolts and slide the counterweight rod into the receiver pipe.

3. When the rod is flush with the bottom of the receiver, tighten the hex bolts.



Figure 6-5

Note: DO NOT use the counterweight handle to raise the bending leaf. You may damage the hinges or the bending leaf.

6.5.3 Aligning the Fingers

CAUTION

Always wear proper safety equipment. The fingers are heavy with sharp edges. Wear safety footwear, and leather gloves to protect from burrs and sharp edges.

1. Make sure there is no pressure on the fingers by first releasing the clamp handle (D).
2. Loosen the socket capscrews on the fingers. Push the fingers tight against the back of the clamping leaf and tighten the capscrews.



Figure 6-6

6.5.4 Adjusting the Setback

Setback is the distance from the front edge of the finger to the front edge of the clamp block. This distance is determined by the gauge (thickness) of the piece part and inside radius of the bend. The setback is typically 1-1/2 - 2 times the material thickness.

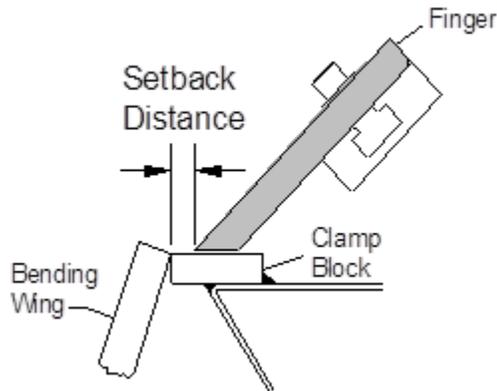


Figure 6-7

1. To adjust, make sure all the fingers are properly aligned to each other and the hold down assembly is not locked in the down position.
2. Loosen the setscrews at the back of the hold down assembly as indicated by the "*" (asterisk). Insert a tool, such as an allen wrench, into one of the spoked holes of the eccentric hub and rotate it, which moves the hold down assembly either forward or back. When the fingers are at the correct setback distance and parallel to the clamp block edge, tighten the setscrews "*" .

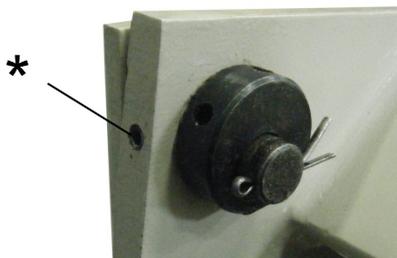


Figure 6-8

6.5.5 Adjusting the Clamping Pressure

The clamping pressure may have to be adjusted as the thickness of the piece part changes. A suitable pressure should have a medium resistance when pulling back on the hold down handle. At the end of the stroke there should be a definite locking of the piece part under the hold down assembly.

1. Loosen the turnbuckle jam nuts on both sides of the hold down assembly. Rotate the two turnbuckles until the desired tension is reached.
2. Retighten all four jam nuts.

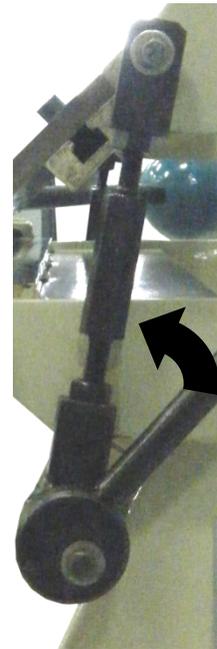


Figure 6-9

7.0 Operation

When performing basic bending operations, it is important that the fingers of the brake are parallel with the edge of the clamping block. Also make sure you have the proper setback and clamping pressure set for the thickness material being bent.

CAUTION

Always wear proper eye protection with side shields, safety footwear, and leather gloves to protect from burrs and sharp edges.

CAUTION

Keep hands and fingers clear of the clamping beam. Stand off to the side of the bending machine to avoid getting hit with the bending apron as it comes up to bend.

CAUTION

When handling large heavy sheets make sure they are properly supported.

7.1 Bending Sheet Metal

1. Lift and rotate the clamping handle (cw) clockwise to raise the clamping assembly.
2. Insert the piece part between the clamp block and the brake fingers.
3. Align the fingers of the hold down assembly to the scribed bend line of the piece part and clamp in place by pulling the clamp handle back.

Note: DO NOT force the clamping handle. The holding pressure only needs to be tight enough to hold the sheet metal from moving when bending.

4. Pull up on the bending leaf handles until the piece part has reached the desired bend angle.
5. Lower the bending leaf, raise the hold down assembly, and remove the bent piece part.
6. If you are doing box and pan bending, choose fingers that closely match the dimensions of the finished piece.

8.0 Bending Allowance

In order to bend sheet metal accurately, you will need to consider the total length of each bend. This is referred to as bend allowance. Subtract the bend allowance from the sum of the outside dimensions of the piece part to obtain the actual overall length or width of the piece. Because of differences in sheet metal hardness, and whether the bend is made with the grain or against it, exact allowances must sometimes be made by trial and error. However, bend allowances for general use can be obtained from metal working books or from the Internet.

9.0 Understanding Springback

Springback, also known as elastic recovery, is the result of the metal wanting to return to its original shape after undergoing compression and stretch. After the bending leaf is removed from the metal and the load is released, the piece part relaxes, forcing the bent portion of the metal to return slightly to its original shape. The key to obtaining the correct bend angle is to over bend the metal a little and allow it to spring back to the desired angle. All metals exhibit a certain amount of spring back.

10.0 Material Selection

⚠ CAUTION

It must be determined by the customer that materials being processed through the machine are NOT potentially hazardous to operator or personnel working nearby.

When selecting materials keep these instructions in mind:

- Material must be clean and dry. (without oil)
- Material should have a smooth surface, so it processes easily.
- Dimensional properties of material must be consistent and not exceed the machine capacity values.
- Chemical structure of material must be consistent.

- Buy certificated steel from the same vendor when possible.

11.0 Maintenance

⚠ WARNING

Maintenance should be performed on a regular basis by qualified personnel.

⚠ WARNING

Always follow proper safety precautions when working on or around any machinery.

- Check daily for any unsafe conditions and fix immediately.
- Check that all nuts and bolts are properly tightened.
- On a weekly basis clean the machine and the area around it.
- Lubricate threaded components and sliding devices.
- Apply rust inhibitive lubricant to all non-painted surfaces.

11.1 Oil Ports

Using an oil can with good quality #30W oil, apply 5-6 drops into each of the ports on both ends of the machine. Repeat weekly or more often, depending on usage. Wipe off any excess oil.

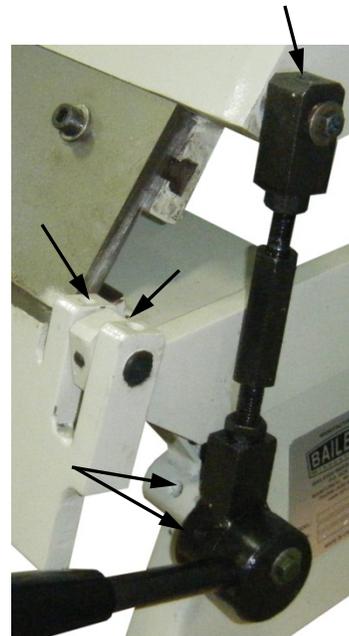


Figure 11-1

Note: Proper maintenance can increase the life expectancy of your machine.


12.0 Troubleshooting

Table 12-1

Fault	Probable Cause	Remedy
INACCURATE BENDS	Fingers are not aligned.	Follow proper finger alignment procedure.
	Setback distance is not equal from one side to the other.	Accurately measure distance and set accordingly.
	Clamping assembly is not holding piece part securely.	Re-adjust the clamping pressure.
BENDING LEAF HARD TO LIFT AND BEND.	Exceeding the bending limits of the brake.	Do not bend material thicker than the machine was designed for.
	Counterweight is not on leaf.	Attach the counterweight to lessen force needed to lift bending leaf.

13.0 Replacement Parts

13.1.1 Box and Pan Brake Assembly – Exploded View

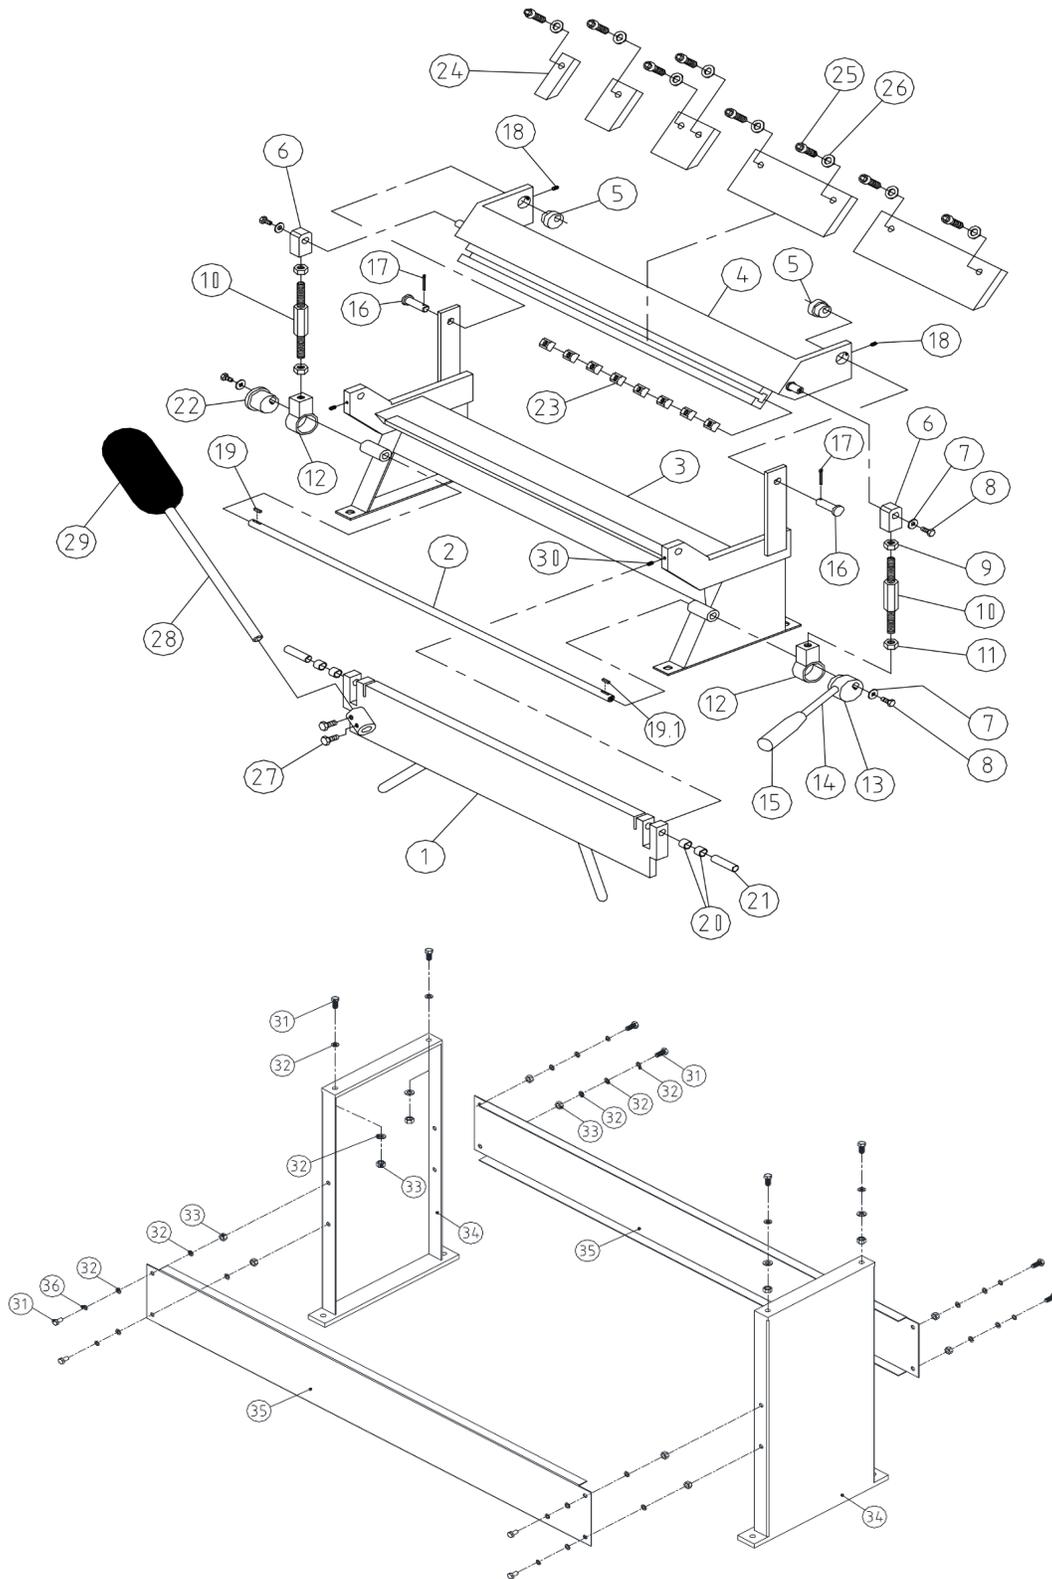

13.1.2 Box and Pan Brake Assembly – Exploded View

Index No	Part No	Description	Size	Qty
1	BA9-1226003	Leaf Weldment		1
2	**	Shaft		1
3	**	Body		1
4	BA9-1226004	Hold Down Assembly		1
5	**	Eccentric Shaft		2
6	BA9-1020470	Connecting Block		2
7	BA9-1020471	Fender Washer	M6	4
8	BA9-1020472	Hex Cap Screw	M6X12	4
9	BA9-1020473	Hex Nut	M10P1.5	2
10	BA9-1020474	Threaded Stud		2
11	BA9-1020475	Hex Nut	M10P1.5	2
12	BA9-1228548	Bushing		2
13	BA9-1010896	Right Eccentric Shaft		1
14	BA9-1010897	Handle Rod		1
15	BA9-1010898	Handle	M12X100	1
16	**	Pin Shaft		2
17	**	Cotter Pin	3X25	2
18	**	Socket Set Screw, Flat Point	M6X8	2
19	**	Flat Key	4X15	1
19.1	**	Flat Key	4X20	1
20	**	Bushing		4
21	**	Small Shaft		2
22	BA9-1228549	Left Eccentric Shaft		1
23	BA9-1000384	T-Nut		8
24	BA9-1015402	Bending Die (Set) (1 Each 1", 2", 3", 8", 10")		1
	BA9-1015403	1 Inch Bend Finger		
	BA9-1015404	2 Inch Bend Finger		
	BA9-1015405	3 Inch Bend Finger		
	BA9-1015089	8 Inch Bend Finger		
	BA9-1015406	10 Inch Bend Finger		
25	**	Socket Head Cap Screw	M8X22	8
26	**	Flat Washer	M8	8
27	**	Hex Cap Screw	M10X16	2
28	BA9-1011022	Counterweight handle		1
29	**	Counterweight		1
30	**	Socket Set Screw, Cone Point	M6X8	2
31	**	Hex Cap Screw	M8X16	12
32	**	Flat Washer	M8	24
33	**	Hex Nut	M8P1.25	12
34	**	Stand		2
35	**	Connecting plate		2
36	**	Lock Washer	M8	8

** These parts are shown for reference only and are not available for order individually. Non-proprietary parts, such as fasteners, can usually be found at local hardware stores.

14.0 Warranty and Service

Thank you for your purchase of a machine from Baileigh Industrial. We hope that you find it productive and useful to you for a long time to come.

Inspection & Acceptance. Buyer shall inspect all Goods within ten (10) days after receipt thereof. Buyer's payment shall constitute final acceptance of the Goods and shall act as a waiver of the Buyer's rights to inspect or reject the Goods unless otherwise agreed. If Buyer rejects any merchandise, Buyer must first obtain a Returned Goods Authorization ("RGA") number before returning any Goods to Seller. Goods returned without an RGA will be refused. Seller will not be responsible for any freight costs, damages to Goods, or any other costs or liabilities pertaining to Goods returned without an RGA. Seller shall have the right to substitute a conforming tender. Buyer will be responsible for all freight costs to and from Buyer and repackaging costs, if any, if Buyer refuses to accept shipment. If Goods are returned in unsalable condition, Buyer shall be responsible for full value of the Goods. Buyer may not return any special-order Goods. Any Goods returned hereunder shall be subject to a restocking fee equal to 30% of the invoice price.

Specifications. Seller may, at its option, make changes in the designs, **specifications**, or components of the Goods to improve the safety of such Goods, or if in Seller's judgment, such changes will be beneficial to their operation or use. Buyer may not make any changes in the specifications for the Goods unless Seller approves of such changes in writing, in which event Seller may impose additional charges to implement such changes.

Limited Warranty. Seller warrants to the original end-user that the Goods manufactured or provided by Seller under this Agreement shall be free of defects in material or workmanship for a period of twelve (12) months from the date of purchase, provided that the Goods are installed, used, and maintained in accordance with any instruction manual or technical guidelines provided by the Seller or supplied with the Goods, if applicable. The original end-user must give written notice to Seller of any suspected defect in the Goods prior to the expiration of the warranty period. The original end-user must also obtain an RGA from Seller prior to returning any Goods to Seller for warranty service under this paragraph. Seller will not accept any responsibility for Goods returned without an RGA. The original end-user shall be responsible for all costs and expenses associated with returning the Goods to Seller for warranty service. In the event of a defect, Seller, at its sole option, shall repair or replace the defective Goods or refund to the original end-user the purchase price for such defective Goods. Goods are not eligible for replacement or return after a period of 10 days from date of receipt. The foregoing warranty is Seller's sole obligation, and the original end-user's exclusive remedy, with regard to any defective Goods. This limited warranty does not apply to: (a) die sets, tooling, and saw blades; (b) periodic or routine maintenance and setup, (c) repair or replacement of the Goods due to normal wear and tear, (d) defects or damage to the Goods resulting from misuse, abuse, neglect, or accidents, (f) defects or damage to the Goods resulting from improper or unauthorized alterations, modifications, or changes; and (f) any Goods that has not been installed and/or maintained in accordance with the instruction manual or technical guidelines provided by Seller.

EXCLUSION OF OTHER WARRANTIES. THE FOREGOING LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ANY AND ALL OTHER EXPRESS, STATUTORY, OR IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED. NO WARRANTY IS MADE WHICH EXTENDS BEYOND THAT WHICH IS EXPRESSLY CONTAINED HEREIN.

Limitation of Liability. IN NO EVENT SHALL SELLER BE LIABLE TO BUYER OR ANY OTHER PARTY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR DOWN TIME) ARISING FROM OR IN MANNER CONNECTED WITH THE GOODS, ANY BREACH BY SELLER OR ITS AGENTS OF THIS AGREEMENT, OR ANY OTHER CAUSE WHATSOEVER, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER THEORY OF LIABILITY. BUYER'S REMEDY WITH RESPECT TO ANY CLAIM ARISING UNDER THIS AGREEMENT IS STRICTLY LIMITED TO NO MORE THAN THE AMOUNT PAID BY THE BUYER FOR THE GOODS.

Force Majeure. Seller shall not be responsible for any delay in the delivery of, or failure to deliver, Goods due to causes beyond Seller's reasonable control including, without limitation, acts of God, acts of war or terrorism, enemy actions, hostilities, strikes, labor difficulties, embargoes, non-delivery or late delivery of materials, parts and equipment or transportation delays not caused by the fault of Seller, delays caused by civil authorities, governmental regulations or orders, fire, lightning, natural disasters or any other cause beyond Seller's reasonable control. In the event of any such delay, performance will be postponed by such length of time as may be reasonably necessary to compensate for the delay.

Installation. If Buyer purchases any Goods that require installation, Buyer shall, at its expense, make all arrangements and connections necessary to install and operate the Goods. Buyer shall install the Goods in accordance with any Seller instructions and shall indemnify Seller against any and all damages, demands, suits, causes of action, claims and expenses (including actual attorneys' fees and costs) arising directly or indirectly out of Buyer's failure to properly install the Goods.

Work By Others; Safety Devices. Unless agreed to in writing by Seller, Seller has no responsibility for labor or work performed by Buyer or others, of any nature, relating to design, manufacture, fabrication, use, installation, or provision of Goods. Buyer is solely responsible for furnishing and requiring its employees and customers to use all safety devices, guards and safe operating procedures required by law and/or as set forth in manuals and instruction sheets furnished by Seller. Buyer is responsible for consulting all operator manuals, ANSI or comparable safety standards, OSHA regulations and other sources of safety standards and regulations applicable to the use and operation of the Goods.

Remedies. Each of the rights and remedies of Seller under this Agreement is cumulative and in addition to any other or further remedies provided under this Agreement or at law or equity.

Attorney's Fees. In the event legal action is necessary to recover monies due from Buyer or to enforce any provision of this Agreement, Buyer shall be liable to Seller for all costs and expenses associated therewith, including Seller's actual attorney fees and costs.

Governing Law/Venue. This Agreement shall be construed and governed under the laws of the State of Wisconsin, without application of conflict of law principles. Each party agrees that all actions or proceedings arising out of or in connection with this Agreement shall be commenced, tried, and litigated only in the state courts sitting in Manitowoc County, Wisconsin or the U.S. Federal Court for the Eastern District of Wisconsin. Each party waives any right it may have to assert the doctrine of "forum non conveniens" or to object to venue to the extent that any proceeding is brought in accordance with this section. Each party consents to and waives any objection to the exercise of personal jurisdiction over it by courts described in this section. Each party waives to the fullest extent permitted by applicable law the right to a trial by jury.

Summary of Return Policy:

- 10 Day acceptance period from date of delivery. Damage claims and order discrepancies will not be accepted after this time.
- You must obtain a Baileigh Industrial issued RGA number PRIOR to returning any materials.
- Returned materials must be received at Baileigh Industrial in new condition and in original packaging.
- Altered items are not eligible for return.
- Buyer is responsible for all shipping charges.
- A 30% re-stocking fee applies to all returns.

Baileigh Industrial makes every effort to ensure that our posted specifications, images, pricing, and product availability are as correct and timely as possible. We apologize for any discrepancies that may occur. Baileigh Industrial reserves the right to make any and all changes deemed necessary in the course of business including but not limited to pricing, product specifications, quantities, and product availability.

For Customer Service & Technical Support:

Please contact one of our knowledgeable Sales and Service team members at:
(920) 684-4990 or e-mail us at Baileigh-Service@jpwindustries.com



BAILEIGH INDUSTRIAL

1625 DUFEK DRIVE MANITOWOC, WI 54220

PHONE: 920.684.4990 FAX: 920.684.3944

www.baileigh.com