



Operating Instructions and Parts Manual SLT-660F/1650 Scissor Lift Tables



For Serial No. 17020001 and Higher

JET

427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

Part No. M-140777
Edition 5 04/2024
Copyright © 2017 JET

Warranty and Service

JET® warrants every product it sells against manufacturers' defects. If one of our tools needs service or repair, please contact Technical Service by calling 1-800-274-6846, 8AM to 5PM CST, Monday through Friday.

Warranty Period

The general warranty lasts for the time period specified in the literature included with your product or on the official JET branded website.

- JET products carry a limited warranty which varies in duration based upon the product. (See chart below)
- Accessories carry a limited warranty of one year from the date of receipt.
- Consumable items are defined as expendable parts or accessories expected to become inoperable within a reasonable amount of use and are covered by a 90 day limited warranty against manufacturer's defects.

Who is Covered

This warranty covers only the initial purchaser of the product from the date of delivery.

What is Covered

This warranty covers any defects in workmanship or materials subject to the limitations stated below. This warranty does not cover failures due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, improper repair, alterations, or lack of maintenance. JET woodworking machinery is designed to be used with wood. Use of these machines in the processing of metal, plastics, or other materials may void the warranty. The exceptions are acrylics and other natural items that are made specifically for wood turning.

Warranty Limitations

Woodworking products with a Five Year Warranty that are used for commercial or industrial purposes default to a Two Year Warranty. Please contact Technical Service at 1-800-274-6846 for further clarification.

How to Get Technical Support

Please contact Technical Service by calling 1-800-274-6846. **Please note that you will be asked to provide proof of initial purchase when calling.** If a product requires further inspection, the Technical Service representative will explain and assist with any additional action needed. JET has Authorized Service Centers located throughout the United States. For the name of an Authorized Service Center in your area call 1-800-274-6846 or use the Service Center Locator on the JET website.

More Information

JET is constantly adding new products. For complete, up-to-date product information, check with your local distributor or visit the JET website.

How State Law Applies

This warranty gives you specific legal rights, subject to applicable state law.

Limitations on This Warranty

JET LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD OF THE LIMITED WARRANTY FOR EACH PRODUCT. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

JET SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

JET sells through distributors only. The specifications listed in JET printed materials and on the official JET website are given as general information and are not binding. JET reserves the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever. JET® branded products are not sold in Canada by JPW Industries, Inc.

Product Listing with Warranty Period

90 Days – Parts; Consumable items
1 Year – Motors; Machine Accessories
2 Year – Metalworking Machinery; Electric Hoists, Electric Hoist Accessories; Woodworking Machinery used for industrial or commercial purposes
5 Year – Woodworking Machinery
Limited Lifetime – JET Parallel clamps; VOLT Series Electric Hoists; Manual Hoists; Manual Hoist Accessories; Shop Tools; Warehouse & Dock products; Hand Tools; Air Tools

NOTE: JET is a division of JPW Industries, Inc. References in this document to JET also apply to JPW Industries, Inc., or any of its successors in interest to the JET brand.

Table of Contents

Warranty and Service.....	2
Table of Contents.....	3
Specifications.....	3
Assembly.....	4
Operation.....	5
Folding Handle for SLT-660F.....	5
Maintenance.....	5
Replacement Parts.....	6
Parts Breakdown for SLT-660F Scissor Lift Table.....	7
Parts List for SLT-660F Scissor Lift Table.....	8
Parts Breakdown for SLT-1650 Scissor Lift Table.....	11
Parts List for SLT-1650 Scissor Lift Table.....	12



IMPORTANT SAFETY INSTRUCTIONS

1. Read and understand the owner's manual before assembly and operation.
2. Do not load scissor lift beyond its rated capacity.
3. Do not allow people to sit or ride on scissor lift.
4. Always secure load in center of table before raising, lowering, or moving scissor lift.
5. Do not transport loads in the raised position.
6. Use on smooth, level, finished floors only.
7. Pull release lever fully to allow load to descend in a controlled manner.
8. Keep hands and feet clear of table when lowering load.
9. Failure to comply with the above warnings may result in personal injury and/or property damage.

Specifications

Model Number.....	SLT-660F.....	SLT-1650
Stock Number.....	140777.....	140779
Capacity (lbs.).....	660.....	1650
Maximum Height (in.).....	34-1/8.....	35-5/8
Minimum Height (in.).....	10-5/8.....	16
Table Size, L x W (in.).....	32-1/2 x 19-5/8.....	39-3/8 x 20-1/8
Wheel Diameter (in.).....	5.....	5
Overall Dimensions, L x W (in.).....	42-1/2 x 19-5/8.....	53-1/2 x 22-3/4
Handle Height (in.).....	40.....	40
Strokes* to reach Maximum Height, approximate.....	13.....	15
Net Weight – approximate (lbs.).....	161.....	229
Shipping Weight – approximate (lbs.).....	185.....	282

* without load

The above specifications were current at the time this manual was published, but because of our policy of continuous improvement, JET reserves the right to change specifications at any time and without prior notice, without incurring obligations.

Assembly

NOTE: The SLT-660F does not require any assembly.

1. On the SLT-1650, attach the handle (A, Figure 1) to the frame using two hex cap screws, two lock washers, two flat washers. Tighten with a 19mm wrench.

NOTE: The two pivoting casters can be locked so that they do not rotate. Press foot lever (B, Figure 1 for SLT-1650) down to lock. Press foot lever (A, Figure 2 for SLT-660F) down to lock.

2. Attach foot lever (A, Figure 3) to the lever bracket (B, Figure 3) with one hex cap bolt, one flat washer, one lock washer (C, Figure 3). Tighten with a 14mm wrench.

⚠ WARNING Keep hands and feet clear of table and scissor lift openings while lowering load. Failure to comply may cause serious injury!

3. Pump the foot lever several cycles so that the table is out of your way while attaching the cable.

NOTE: Place a 2" x 4" board straight up and down between the table and frame so that the table cannot come down on you while attaching the cable.

4. Route the cable (A, Figure 4) into the cable nut (B, Figure 4). Run the cable through the lowering mechanism (C, Figure 4) and pull the cable tight. Tighten the hex nut (D, Figure 4) using a 14mm wrench.

NOTE: You may have to turn the hex socket cap screw to line up the hole. This will allow the cable to pass through freely.

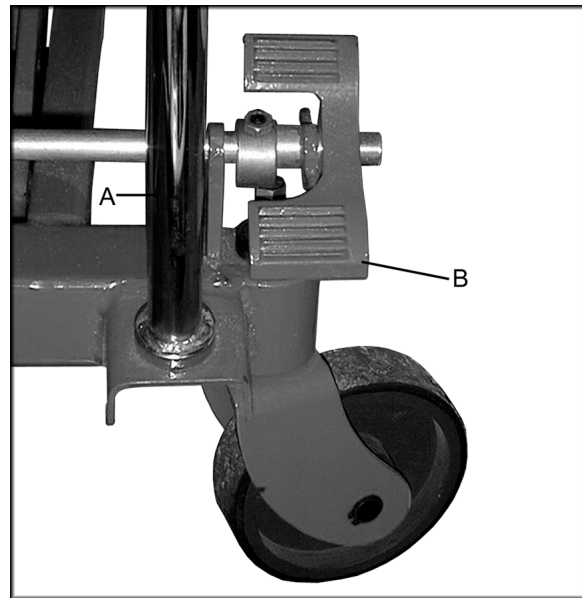


Figure 1

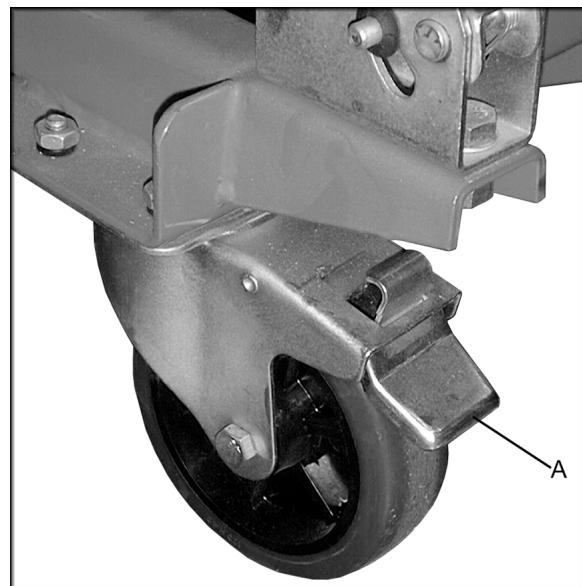


Figure 2

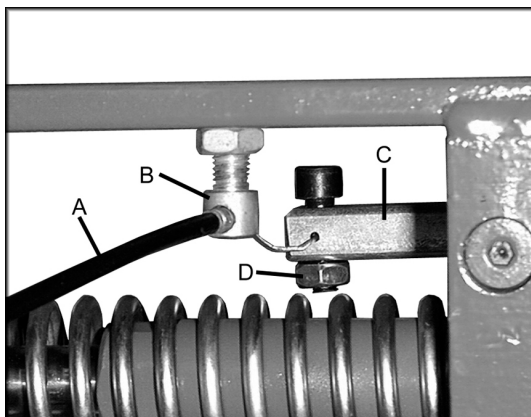


Figure 4

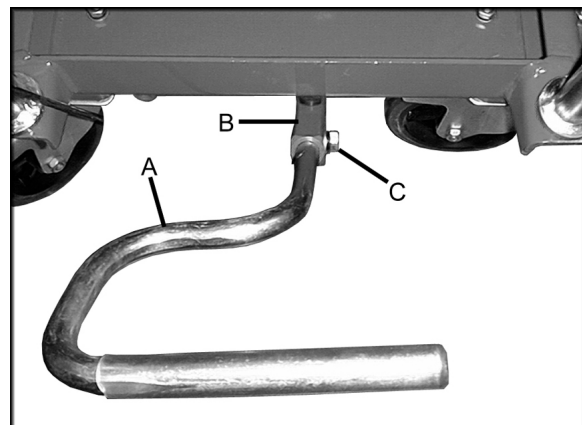


Figure 3

Operation

1. The table can be raised by pumping the foot lever.

NOTE: You may need to raise and lower the table several times to work any air bubbles out of the pump.

2. To lower the table, pull the release lever fully. This allows the table to lower in a slow, controllable manner.
3. Before loading, always lock the caster brake.

Folding Handle for SLT-660F

1. Lower the table.
2. Step on the rod that is located between the lower sections of the handle.
3. Fold the handle flat across the table.

Maintenance

1. Lubricate each friction point monthly with #2 tube grease.
2. Check the movement and wear of wheels.
3. Check for oil leakage from the hydraulic cylinder. Add hydraulic oil as needed.
4. Always store with table in lowered position when not in use.

Troubleshooting SLT-660F/1650 Scissor Lifts

The numbers in parentheses refer to the appropriate breakdown, **660F listed first/1650 listed second**.


Trouble	Probable Cause	Remedy
Table will not lift.	Oil level low in reservoir.	Replenish reservoir.
	Lowering valve (28/29) or steel ball (25/26) is not seating.	Clean lowering valve (28/29) or steel ball (25/26) or replace.
	Steel ball (13/14) is not seating.	Clean or replace steel ball (13/14).
	Relief valve is not adjusted properly.	Reload truck within load capacity and adjust valve by pressure relief adjusting screw (54/52).
Table will not remain elevated.	Lowering valve (28/29) or steel ball (25/26) not seating properly.	Clean or replace lowering valve (28/29) or steel ball (25/26).
	Oil seal (6) or U-packing (7) is worn out.	Replace oil seal (6) or U-packing (7).
Table will not lower.	U-packing (7) is worn out.	Replace U-packing (7).
	Lowering valve plug (28/29) is clogged.	Replace lowering valve plug (28/29).
Oil leaks from lowering valve.	O-ring (27/28) is worn out.	Replace o-ring (27/28).
Oil leaks from pump cylinder.	Oil seal (38/39) or U-packing (39/40) worn out.	Replace oil seal (38/39) or U-packing (39/40).

Replacement Parts

Replacement parts are listed on the following pages. To order parts or reach our service department, call 1-800-274-6848 Monday through Friday, 8:00 a.m. to 5:00 p.m. CST. Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.

Non-proprietary parts, such as fasteners, can be found at local hardware stores, or may be ordered from JET. Some parts are shown for reference only and may not be available individually.

Parts Breakdown for SLT-660F Scissor Lift Table

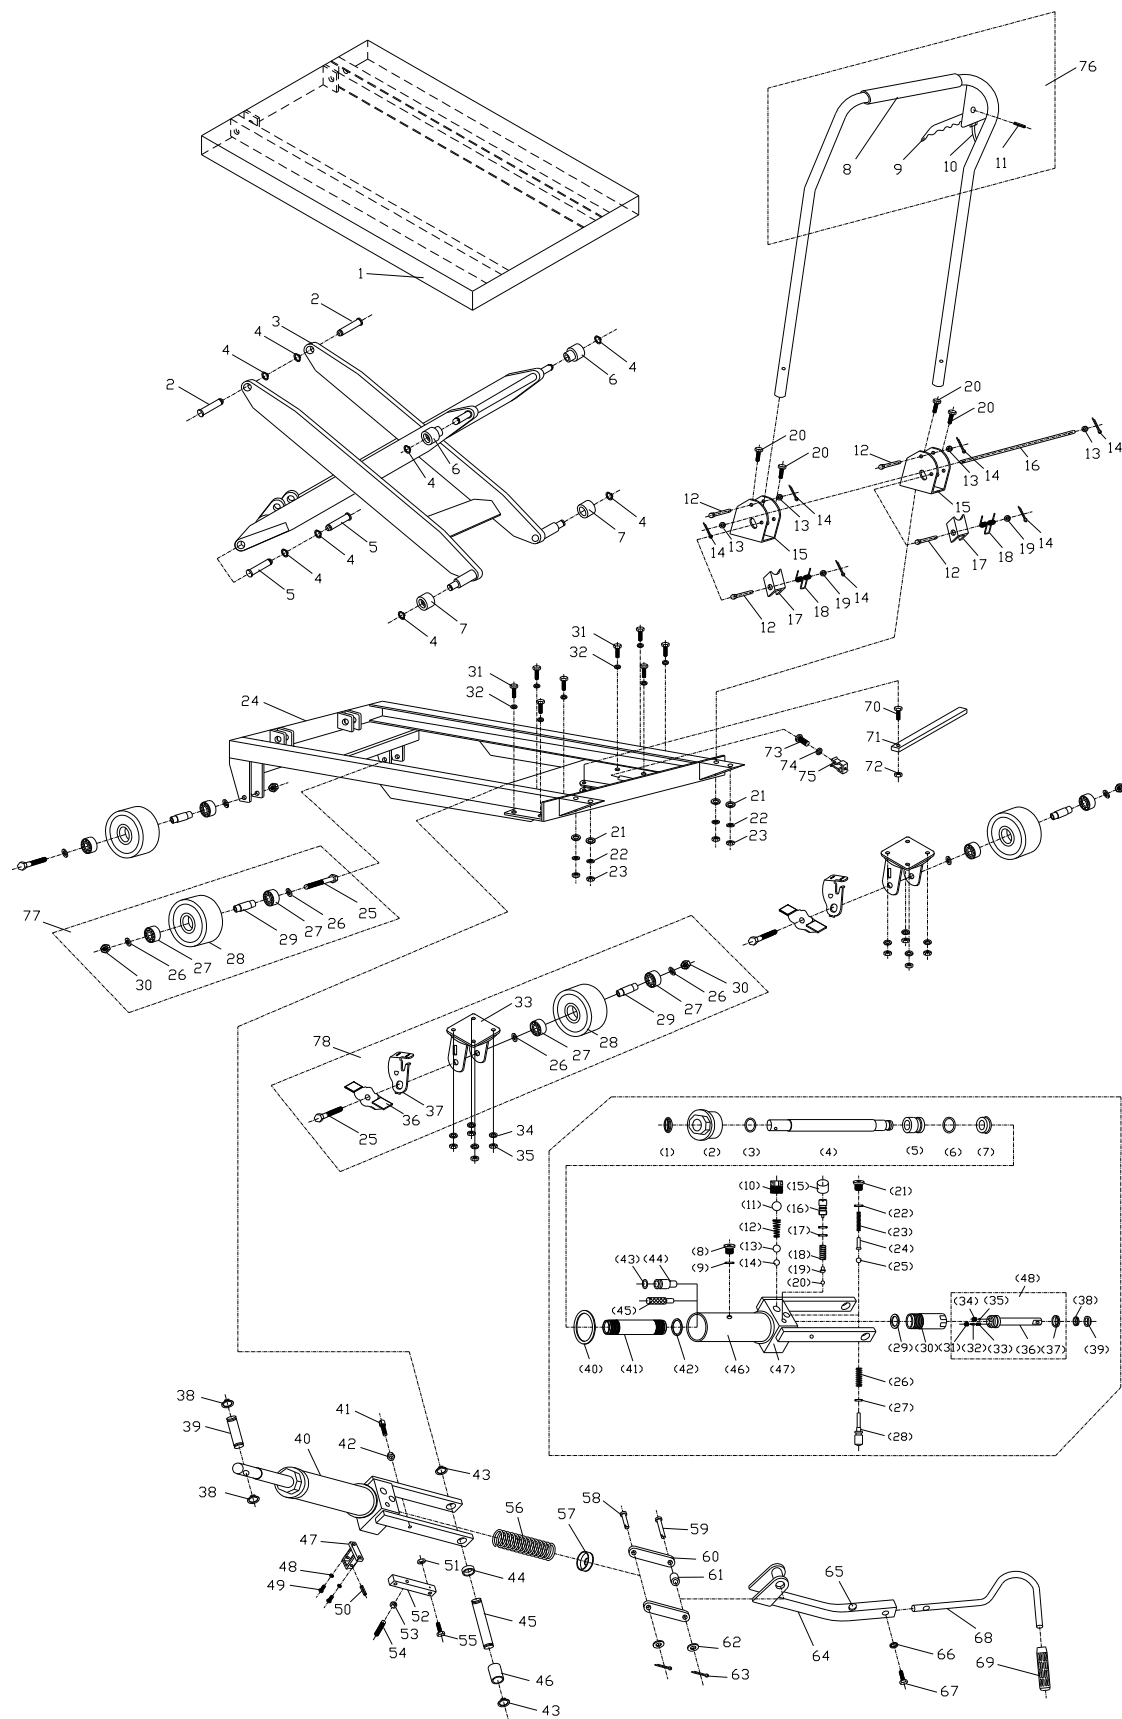

Parts List for SLT-660F Scissor Lift Table

Index No.	Part No.	Description	Size	Qty
1	SLC660F-01G	Table		1
2	SLT660F-06	Link Shaft		2
3	SLC660F-02	Link Assembly		1
4	SLC660F-03	C-Ring	Ø 16 mm	8
5	SLT660FH-05	Link Shaft		2
6	SLC660F-04	Roller Guide		2
7	SLT660FH-07	Roller Guide		2
8	SLT660FH-08	Handle		1
9	SLT660FH-09	Release Lever		1
10	SLT660FH-10A	Cable		1
11	SLT660FH-11	Spring Pin	Ø 6 x 28 mm	1
12	SLT660FH-12	Lock Pin		4
13	SLT660F-66	Flat Washer	Ø 8 mm	4
14	SLT660FH-14	Split Pin	Ø 3 x 20 mm	6
15	SLC660F-09	Handle Bracket		2
16	SLT660FH-16	Shaft		1
17	SLC660F-15	Handle Support		2
18	SLC660F-16	Spring		2
19	SLT660FH-66	Washer	Ø 8 mm	2
20	SLT660FH-20	Hex Cap Screw	M8 x 20	4
21	SLT660F-66	Flat Washer	Ø 8 mm	4
22	SLT660F-22	Spring Washer	Ø 8 mm	4
23	SLT660FH-23	Nut	M8	4
24	SLT660FH-24G	Frame		1
25	SLT660FH-25	Hex Cap Screw	M12 x 95	4
26	SLT660FH-26	Washer	Ø 12 mm	8
27	BB-6203ZZ	Ball Bearing	6203ZZ	8
28	SLT660FH-28	Wheel	Ø 5"	4
29	SLT660FH-29	Bushing		4
30	TS-2342121	Lock Nut	M12	4
31	TS-1490031	Hex Cap Screw	M8 x 20	8
32	TS-1550061	Flat Washer	Ø 8 mm	1
33	SLT660FH-33	Swivel Wheel Holder		2
34	TS-1550061	Flat Washer	Ø 8 mm	8
35	TS-1541031	Lock Nut	M8	8
36	SLT660FH-36	Brake Plate		2
37	SLT660FH-37	Stop Support		2
38	SLT660FH-38	C-Ring	Ø 18 mm	2
39	SLT660FH-39	Shaft		1
40	SLT660FH-40	Hydraulic Pump Assembly		1
[1]	SLT660F-36-1	Oil Seal*	DHS30	1
[2]	SLT660F-30-2	Top Nut		1
[3]	SLT660F-36-3	O-Ring*	Ø 36x3.5 mm	1
[4]	SLT660F-36-4	Lift Piston		1
[5]	SLT660F-36-5	Piston Bushing		1
[6]	SLT660F-36-6	O-Ring*	Ø 40 x 3.5 mm	1
[7]	SLT660F-36-7	U-Packing*	UN40	1
[8]	SLT660F-36-8	Air Breather		1
[9]	SLT660F-36-9	O-Ring*	Ø 11x1.9 mm	1
[10]	SLT660F-36-16	Valve Plug	M16x2	1
[11]	SB-12MM	Steel Ball	Ø 12mm	1
[12]	SLT660F-36-18	Spring		1
[13]	SLT660F-36-19	Steel Ball	Ø 9.525 mm	1
[14]	SLT660F-36-20	Steel Ball	Ø 6.35 mm	1
[15]	SLT660F-36-10	Relief Plug		1
[16]	SLT660F-36-11	Relief Adjusting Screw		1
[17]	SLT660F-36-9	O-Ring*	Ø 11 x 1.9 mm	2
[18]	SLT660F-36-13	Spring		1
[19]	SLT660F-36-14	Steel Ball Support		1


Index No.	Part No.	Description	Size	Qty
[20]	SB-5MM	Steel Ball	Ø 5 mm	1
[21]	SLT660F-36-21	Screw	M10 x 1	1
[22]	SLT660F-36-22	O-Ring*		1
[23]	SLT660F-36-23	Spring		1
[24]	SLT660FH-40-24	Steel Ball Support		1
[25]	SB-5MM	Steel Ball	Ø 5 mm	1
[26]	SLT660F-36-25	Spring		1
[27]	SLT660F-36-26	O-Ring*	Ø 10 x 1.9 mm	1
[28]	SLT660F-36-27	Adjusting Shaft		1
[29]	SLT660FH-40-29	Inner Washer*		1
[30]	SLT660F-36-29	Pump Cylinder		1
[31]	SLT660F-36-32	Screw		1
[32]	SLT660F-36-33	Valve Plug		1
[33]	SLT660F-36-34	Spring		1
[34]	SLT660F-36-30	Screw		1
[35]	SB-5MM	Steel Ball	Ø 5 mm	1
[36]	SLT660F-36-36	Pump Piston		1
[37]	SLT660F-36-35	Oil Seal*	UHS23.5	1
[38]	SLT660F-36-37	Oil Seal*	UHS18	1
[39]	SLT660F-36-38	U-Packing*	DHS18	1
[40]	SLT660FH-40-40	Outer Washer*		2
[41]	SLT660FH-40-41	Inside Cylinder Tube		1
[42]	SLT660FH-40-42	Inside Washer*		1
[43]	SLT660FH-40-43	O-Ring*	Ø 12 x 1.9mm	1
[44]	SLT660FH-40-44	Special Lowering Valve		1
[45]	SLT660FH-40-45	Filter		1
[46]	SLT660FH-40-46	Outer Cylinder Tube		1
[47]	SLT660FH-40-47	Pump Body		1
[48]	SLT660FH-40-48	Pump Piston Assembly (index # [31] thru [37])		1
41	SLT660FH-41	Adjusting Screw	M8 x 25	1
42	TS-2311081	Hex Nut	M8	1
43	SLC660F-38	C-Ring	Ø 20 mm	2
44	SLT660FH-44	Bushing	Ø 20 mm	1
45	SLC660F-39	Shaft		1
46	SLT660FH-46	Bushing		1
47	SLT660F-67	Fixed Seat		1
48	TS-2361051	Spring Washer	Ø 5 mm	2
49	SLT660F-74	Hex Cap Screw	M5 x 14	2
50	SLT660F-69	Spring Pin	Ø 6 x 22 mm	1
51	TS-2311081	Hex Nut	M8	1
52	SLT660F-73	Fixed Board		1
53	SLT660F-70	Hex Nut	M8	1
54	SLT660F-71	Socket Set Screw	M8 x 30	1
55	SLT660F-72	Hex Cap Screw	M8 x 25	1
56	SLC660F-40	Spring		1
57	SLC660F-41	Spring Cover		1
58	SLT660FH-58	Pin		1
59	SLT660FH-59	Pin		1
60	SLC660F-42	Slide Plate		1
61	SLC660F-56	Bushing		1
62	TS-1550071	Flat Washer	Ø 10 mm	2
63	SLT660FH-63	Split Pin	Ø 3 x 30 mm	2
64	SLC660F-45	Lever		1
65	SLC660F-45A	Rubber Bumper		1
66	TS-2361081	Spring Washer	Ø 8 mm	1
67	TS-1490051	Hex Cap Screw	M8 x 30	1
68	SLC660F-46	Foot Lever		1
69	SLC660F-47	Foot Lever Pad		1
70	SLT660FH-70	Hex Cap Screw	M10 x 30	1
71	SLT660FH-71	Safety Bar		1
72	SLT660FH-72	Hex Nut	M10	1

Index No.	Part No.	Description	Size	Qty
73	SLT660FH-73	Hex Cap Screw	M6 x 10	1
74	SLT660FH-74	Spring Washer	Ø 6mm	1
75	SLT660FH-75	Spring Clip		1
76	SLT660FH-76	Handle Assembly (index # 8 thru 11)		1
77	SLT660FH-77	Front Wheel Assembly (index # 25 thru 30)		1
78	SLT660FH-78	Swivel Wheel Assembly (index # 25-30, 33-37)		1
	SLT660FH-RK	Repair Kit		1

Index numbers with brackets [] are part of the hydraulic pump assembly #40.

Parts included in the SLT660FH-RK Repair Kit are indicated by an asterisk *.

Parts Breakdown for SLT-1650 Scissor Lift Table

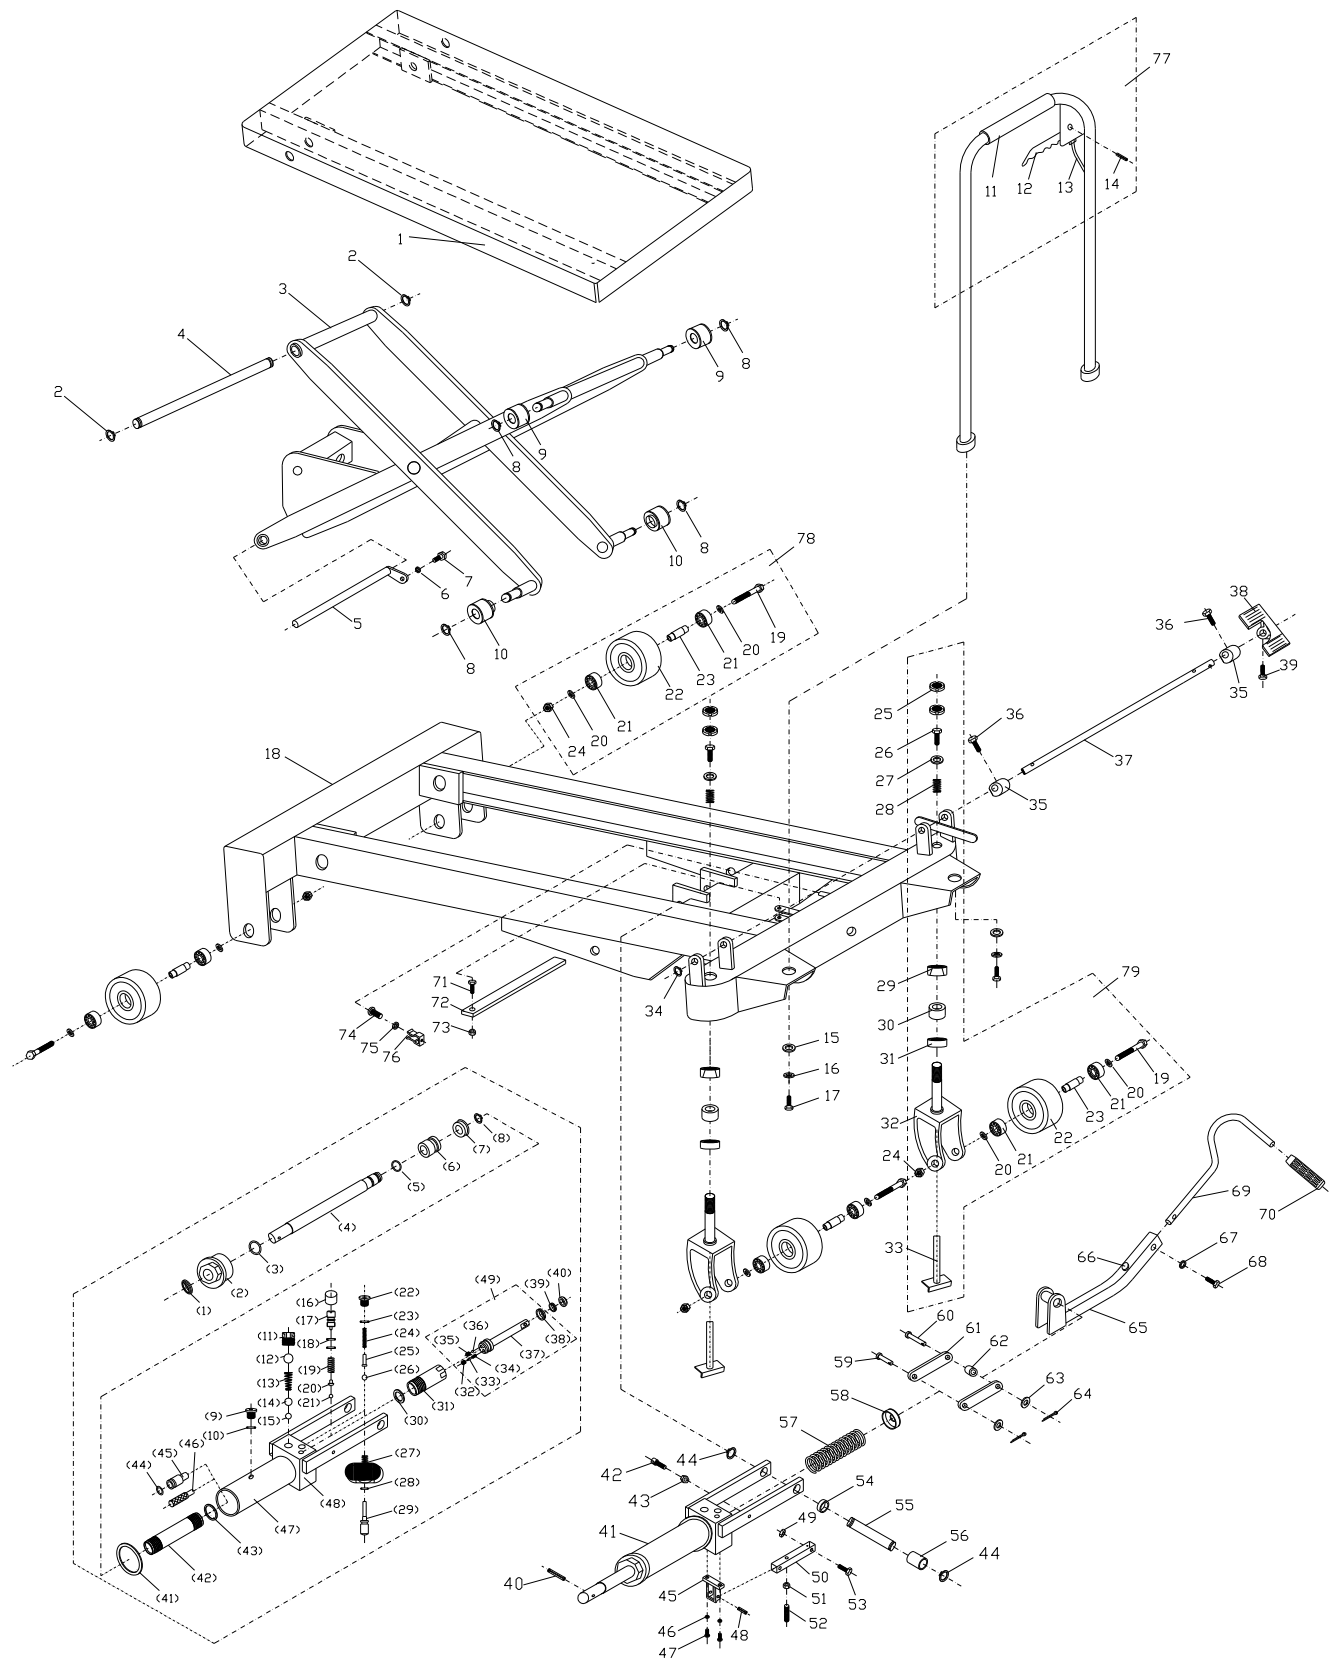

Parts List for SLT-1650 Scissor Lift Table

Index No.	Part No.	Description	Size	Qty
1	SLC1650-1G	Table		1
2	SLC660F-38	C-Ring	Ø 20 mm	2
3	SLC1650-2	Link Assembly		1
4	SLC1650-3	Link Shaft		1
5	SLC1650-6	Link Shaft		1
6	SLT660FH-22	Spring Washer	Ø 8 mm	1
7	SLT660FH-20	Hex Cap Screw	M8 x 20	1
8	SLC1650-4	C-Ring	Ø 22 mm	4
9	SLT1650H-09	Roller Guide		2
10	SLT1650H-10	Roller Guide		2
11	SLT1650H-11	Handle		1
12	SLT660FH-09	Release Lever		1
13	SLT660FH-10A	Cable		1
14	SLT660FH-11	Spring Pin	Ø 6 x 28 mm	1
15	SLT1650-29	Flat Washer	Ø 12 mm	2
16	SLT1650-61	Spring Washer	Ø 12 mm	2
17	SLT1650H-17	Hex Cap Screw	M12 x 25	2
18	SLT1650H-18G	Frame		1
19	SLT660FH-25	Hex Cap Screw	M12 x 95	4
20	SLT660FH-26	Washer	Ø 12 mm	8
21	BB-6203ZZ	Bearing	6203Z	8
22	SLT1650H-22	Wheel	Ø 6"	4
23	SLT1650H-29	Bushing		4
24	SLT660FH-30	Lock Nut	M12	4
25	SLT1650H-25	Nut	M24 x 1.5	4
26	SLC1650-19	Hex Cap Screw	M10 x 25	2
27	SLC1650-21	Flat Washer	Ø 10 mm	2
28	SLC1650-22	Spring		2
29	BB-30205	Tapered Roller Bearing	30205	2
30	SLT1650H-30	Bushing		2
31	BB-6205	Ball Bearing		2
32	SLT1650H-32	Wheel Holder		2
33	SLT1650H-33	Wheel Shaft Holder		2
34	SLC660F-3	C-Ring	Ø 16 mm	2
35	SLT1650H-35	Block		2
36	SLT1650H-36	Hex Cap Screw	M8 x 25	2
37	SLT1650H-37	Brake Shaft		1
38	SLT1650H-38	Brake Pedal		1
39	SLT1650H-36	Hex Cap Screw	M8 x 25	1
40	SLC1650-41	Spring Pin	Ø 6 x 45 mm	1
41	SLT1650H-41	Hydraulic Pump Assembly		1
[1]	SLT660F-36-1	Oil Seal*	DHS30	1
[2]	SLT1650H-41-2	Top Nut		1
[3]	SLT660F-36-3	O-Ring*	Ø 36x3.5 mm	1
[4]	SLT1650H-41-4	Lift Piston		1
[5]	SLT1650H-41-5	O-Ring*	Ø 21 x 2.4 mm	1
[6]	SLT1650H-41-6	Piston		1
[7]	SLT1650H-41-7	U-Packing*	D50	1
[8]	SLC1650-4	C-Ring	Ø 22 mm	1
[9]	SLT660F-36-8	Air Breather		1
[10]	SLT660F-36-9	O-Ring*	Ø 11x1.9 mm	1
[11]	SLT660F-36-16	Valve Plug	M16x2	1
[12]	SB-12MM	Steel Ball	Ø 12mm	1
[13]	SLT660F-36-18	Spring		1
[14]	SLT660F-36-19	Steel Ball	Ø 9.525 mm	1
[15]	SLT660F-36-20	Steel Ball	Ø 6.35 mm	1
[16]	SLT660F-36-10	Relief Plug		1
[17]	SLT660F-36-11	Relief Adjusting Screw		1
[18]	SLT660F-36-9	O-Ring*	Ø 11 x 1.9 mm	2

Index No.	Part No.	Description	Size	Qty
[19]	SLT660F-36-13	Spring		1
[20]	SLT660F-36-14	Steel Ball Support		1
[21]	SB-5MM	Steel Ball	Ø 5 mm	1
[22]	SLT660F-36-21	Screw	M10 x 1	1
[23]	SLT660F-36-9	O-Ring*	Ø 11 x 1.9 mm	1
[24]	SLT660F-36-23	Spring		1
[25]	SLT660FH-40-24	Steel Ball Support		1
[26]	SB-5MM	Steel Ball	Ø 5 mm	1
[27]	SLT660F-36-25	Spring		1
[28]	SLT660F-36-26	O-Ring*	Ø 10 x 1.9 mm	1
[29]	SLT660F-36-27	Adjusting Shaft		1
[30]	SLT660FH-40-29	Inner Washer*		1
[31]	SLT660F-36-29	Pump Cylinder		1
[32]	SLT660F-36-32	Screw		1
[33]	SLT660F-36-33	Valve Plug		1
[34]	SLT660F-36-34	Spring		1
[35]	SLT660F-36-30	Screw		1
[36]	SB-5MM	Steel Ball	Ø 5 mm	1
[37]	SLT660F-36-36	Pump Piston		1
[38]	SLT660F-36-35	Oil Seal*	UHS23.5	1
[39]	SLT660F-36-37	Oil Seal*	UHS18	1
[40]	SLT660F-36-38	U-Packing*	DHS18	1
[41]	SLT1650H-41-41	Outer Washer*		2
[42]	SLT1650H-41-42	Inside Cylinder Tube		1
[43]	SLT1650H-41-43	Inside Washer*		1
[44]	SLT660FH-40-43	O-Ring*	Ø 12 x 1.9mm	1
[45]	SLT660FH-40-44	Special Lowering Valve		1
[46]	SLT660FH-40-45	Filter		1
[47]	SLT1650H-41-47	Outer Cylinder Tube		1
[48]	SLT1650H-41-48	Pump Body		1
[49]	SLT1650H-41-49	Pump Piston Assembly (index # [32] thru [38])		1
42	SLT660FH-41	Adjusting Screw	M8 x 25	1
43	SLT660F-70	Hex Nut	M8	1
44	SLC660F-38	C-Ring	Ø 20 mm	2
45	SLT660F-67	Fixed Seat		1
46	SLT660F-68	Spring Washer	Ø 5 mm	2
47	SLT660F-74	Hex Cap Screw	M5 x 14	2
48	SLT660F-69	Spring Pin	Ø 6 x 22 mm	1
49	SLT660F-70	Hex Nut	M8	1
50	SLT660F-73	Fixed Board		1
51	SLT660F-70	Hex Nut	M8	1
52	SLT660F-71	Socket Set Screw	M8 x 30	1
53	SLT660F-72	Hex Cap Screw	M8 x 25	1
54	SLT660FH-44	Bushing		1
55	SLC660F-39	Shaft		1
56	SLT660FH-46	Bushing		1
57	SLT1650H-57	Spring		1
58	SLC660F-41	Spring Cover		1
59	SLT660FH-58	Pin		1
60	SLT660FH-59	Pin		1
61	SLT1650H-61	Slide Plate		1
62	SLT1650H-62	Bushing		1
63	SLT660FH-62	Washer	Ø 10 mm	2
64	SLT660FH-63	Split Pin	Ø 3 x 30 mm	2
65	SLT1650H-65	Lever		1
66	SLC660F-45A	Rubber Bumper		1
67	SLT660FH-22	Spring Washer	Ø 8 mm	1
68	SLT660FH-67	Hex Cap Screw	M8 x 30	1
69	SLT1650H-69	Foot Lever		1
70	SLC660F-47	Foot Lever Pad		1
71	SLT660FH-70	Hex Cap Screw	M10 x 30	1

Index No.	Part No.	Description	Size	Qty
72	SLT1650H-72	Safety Bar		1
73	SLT660FH-72	Hex Nut	M10	1
74	SLT660FH-73	Hex Cap Screw	M6 x 10	1
75	SLT660FH-74	Spring Washer	Ø 6mm	1
76	SLT660FH-75	Spring Clip		1
77	SLT1650H-77	Handle Assembly (index # 1 thru 14)		1
78	SLT1650H-78	Front Wheel Assembly (index # 25 thru 30)		1
79	SLT1650H-79	Swivel Wheel Assembly (index # 19-33)		1
	SLT1650-RK	Repair Kit		1

Index numbers with brackets [] are part of the hydraulic pump assembly #41.

Parts included in the SLT1650-RK Repair Kit are indicated by an asterisk *.

NOTES



427 New Sanford Road
LaVergne, Tennessee 37086
Phone: 800-274-6848
www.jettools.com