



# Operating Instructions and Parts Manual

## Manual Roll Bender

Model R-M5



**Baileigh Industrial**  
P.O. Box 531  
Manitowoc, WI 54221-0531  
Ph.: 920-684-4990  
Fax: 920-684-3944  
Baileigh-Sales@jpwindustries.com

BA9-1006854  
Edition 2 08/2025  
Copyright © 2021 Baileigh Industrial

# 1.0 Table of Contents

Section	Page
1.0 Table of Contents .....	2
2.0 Safety Instructions .....	3
3.0 About This Manual .....	4
4.0 Specifications .....	5
4.1 Machine Features .....	5
5.0 Setup and Assembly .....	6
5.1 Unpacking and Checking Contents .....	6
5.2 Cleaning .....	6
5.3 Installation .....	6
5.4 Assembly .....	7
6.0 Operation .....	7
6.1 Forming Upward – Tight Radius .....	8
6.2 Forming Downward – Large Radius .....	9
7.0 Maintenance .....	9
8.0 Replacement Parts .....	10
8.1.1 Manual Roll Bender Assembly – Exploded View .....	10
8.1.2 Manual Roll Bender Assembly – Part List .....	11
9.0 Warranty and Service .....	12



## 2.0 Safety Instructions

### **⚠ WARNING**

**Failure to follow these rules may result in serious personal injury**

1. FOR YOUR OWN SAFETY, READ INSTRUCTION MANUAL BEFORE OPERATING THE MACHINE. Learn the machine's application and limitations as well as the specific hazards.
2. Only trained and qualified personnel can operate this machine.
3. Make sure guards are in place and in proper working order before operating machinery.
4. Remove any adjusting tools. Before operating the machine, make sure any adjusting tools have been removed.
5. Keep work area clean. Cluttered areas invite injuries.
6. Overloading machine. By overloading the machine, you may cause injury from flying parts. DO NOT exceed the specified machine capacities.
7. Dressing material edges. Always chamfer and deburr all sharp edges.
8. Do not force tool. Your machine will do a better and safer job if used as intended. DO NOT use inappropriate attachments in an attempt to exceed the machine's rated capacity.
9. Use the right tool for the job. DO NOT attempt to force a small tool or attachment to do the work of a large industrial tool. DO NOT use a tool for a purpose for which it was not intended.
10. Dress appropriately. DO NOT wear loose fitting clothing or jewelry as they can be caught in moving machine parts. Protective clothing and steel toe shoes are recommended when using machinery. Wear a restrictive hair covering to contain long hair.
11. Use eye protection. Always wear ISO approved protective eye wear when operating machinery. Wear a full-face shield if you are producing metal filings. Eye wear shall be impact resistant, protective safety glasses with side shields which comply with ANSI Z87.1 specification. Use of eye wear which does not comply with ANSI Z87.1 specification could result in severe injury from breakage of eye protection.
12. Do not overreach. Maintain proper footing and balance at all times. DO NOT reach over or across a running machine.
13. Stay alert. Watch what you are doing and use common sense. DO NOT operate any tool or machine when you are tired.
14. Check for damaged parts. Before using any tool or machine, carefully check any part that appears damaged. Check for alignment and binding of moving parts that may affect proper machine operation.
15. Observe work area conditions. DO NOT use machines or power tools in damp or wet locations. Do not expose to rain. Keep work area well lighted.
16. Keep children away. Children must never be allowed in the work area. DO NOT let them handle machines, tools, or extension cords.
17. Keep visitors a safe distance from the work area.
18. Store idle equipment. When not in use, tools must be stored in a dry location to inhibit rust. Always lock up tools and keep them out of reach of children.
19. DO NOT operate machine if under the influence of alcohol or drugs. Read warning labels on prescriptions. If there is any doubt, DO NOT operate the machine.

**Familiarize yourself with the following safety notices used in this manual:**

### **⚠ CAUTION**

This means that if precautions are not heeded, it may result in minor injury and/or machine damage.

### **⚠ WARNING**

This means that if precautions are not heeded, it may result in serious injury or death.

### **⚠ DANGER**

This means that if precautions are not heeded, it will result in serious or fatal, injury.

## Save the Instructions

## 3.0 About This Manual

This manual is provided by Baileigh Industrial, covering the safe operation and maintenance procedures for a Baileigh Model R-M5 Manual Roll Bender. This manual contains instructions on installation, safety precautions, general operating procedures, maintenance instructions and parts breakdown. Your machine has been designed and constructed to provide consistent, long-term operation if used in accordance with the instructions as set forth in this document.

Technical Support handles questions on setup, operation, schematics, warranty issues, and individual parts needed. Our Technical Support department can be reached at 920-684-4990.

If there are questions or comments, please contact your local supplier or Baileigh Industrial. We can also be reached at our web site: [www.baileigh.com](http://www.baileigh.com).

Retain this manual for future reference. If the machine transfers ownership, the manual should accompany it.

### **WARNING**

**Read and understand the entire contents of this manual before attempting assembly or operation! Failure to comply may cause serious injury!**

Register your product online -

<https://baileigh.com/product-registration>



## 4.0 Specifications

Table 4-1

Model Number	R-M5
Stock Number	BA9-1006854
Power	
Power	Manual
General Specifications	
Solid Round	0.5" (12.7mm)
Flat Bar	0.25" x 1.00" (6.35 x 25.4mm)
Minimum Diameter	2.75" (70mm)
Handle Length	9" (229mm)
Weights and Dimensions	
Shipping Dimensions (L x W x H)	30" x 40" x 18" (762 x 1016 x 458mm)
Shipping Weight	85 lbs. (38 kg.)
Based on a material tensile strength of *60000 PSI – mild steel	

### 4.1 Machine Features

- Small, Compact, and Portable
- 3 driven rolls
- Manually Powered
- Perfect for Doing Small Circles
- Includes Heavy Duty Stand
- Optional Tooling Sets for Round Stock (available)

## ⚠ WARNING

Read and understand the entire contents of this manual before attempting assembly or operation. Failure to comply may cause serious injury.

## 5.0 Setup and Assembly

### 5.1 Unpacking and Checking Contents

Your Baileigh machine is shipped complete. Separate all parts from the packing material and check each item carefully. Make certain all items are accounted for before discarding any packing material.

## ⚠ WARNING

**SUFFOCATION HAZARD!** Immediately discard any plastic bags and packing materials to eliminate choking and suffocation hazards to children and animals.

## ⚠ WARNING

If any parts are missing, **DO NOT** place the machine into service until the missing parts are obtained and installed correctly.

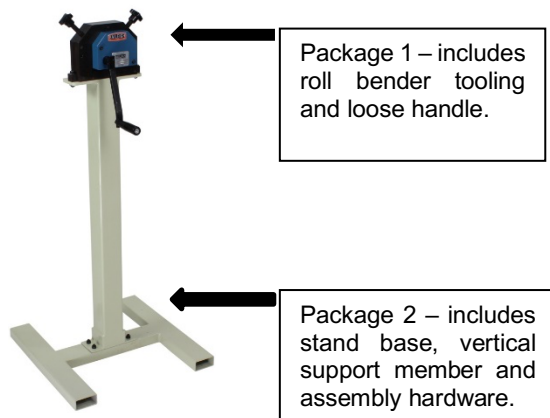


Figure 5-1

## ⚠ CAUTION

The roll bender must be mounted securely before using. (Customer to provide necessary hardware)

### 5.2 Cleaning

## ⚠ WARNING

**DO NOT USE** gasoline or other petroleum products to clean the machine. They have low flash points and can explode or cause fire.

## ⚠ CAUTION

When using cleaning solvents work in a well-ventilated area. Many cleaning solvents are toxic if inhaled.

Your machine may be shipped with a rustproof waxy coating and/or grease on the exposed unpainted metal surfaces. Fully and completely remove this protective coating using a degreaser or solvent cleaner. Moving items will need to be moved along their travel path to allow for cleaning the entire surface. For a more thorough cleaning, some parts will occasionally have to be removed. **DO NOT USE** acetone or brake cleaner as they may damage painted surfaces.

Follow manufacturer's label instructions when using any type of cleaning product. After cleaning, wipe unpainted metal surfaces with a light coating of quality oil or grease for protection.

**IMPORTANT:** This waxy coating is **NOT** a lubricant and will cause the machine to stick and lose performance as the coating continues to dry.

### 5.3 Installation

#### **IMPORTANT:**

Consider the following when looking for a suitable location to place the machine:

- Overall weight of the machine.
- Weight of material being processed.
- Sizes of material to be processed through the machine.
- Space needed for auxiliary stands, work tables, or other machinery.
- Clearance from walls and other obstacles.
- Maintain an adequate working area around the machine for safety.
- Have the work area well illuminated with proper lighting.
- Keep the floor free of oil and make sure it is not slippery.
- Remove scrap and waste materials regularly, and make sure the work area is free from obstructing objects.
- If long lengths of material are to be fed into the machine, make sure that they will not extend into any aisles.
- **LEVELING:** The machine should be sited on a level, concrete floor. Provisions for securing it should be in position prior to placing the machine. The accuracy of any machine depends on the precise placement of it to the mounting surface.

- **FLOOR:** This tool distributes a large amount of weight over a small area. Make certain that the floor is capable of supporting the weight of the machine, work stock, and the operator. The floor should also be a level surface. If the unit wobbles or rocks once in place, be sure to eliminate by using shims.
- **WORKING CLEARANCES:** Take into consideration the size of the material to be processed. Make sure that you allow enough space for you to operate the machine freely.

### 5.3.1 Anchoring the Machine

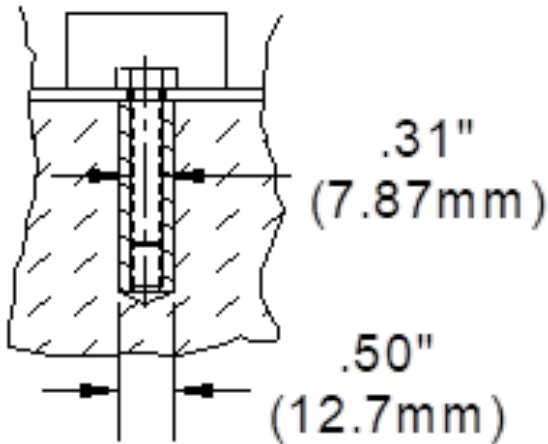


Figure 5-2

- Once positioned, anchor the machine to the floor, as shown in the diagram. Use bolts and expansion plugs or sunken tie rods that connect through and are sized for the holes in the base of the stand.
- This machine requires a solid floor such as concrete at a minimum of 4" (102mm) thick. 6" (153mm) minimum is preferred.

### 5.4 Assembly

1. The handle (D) for the Baileigh Model R-M5 manual Roll Bender is shipped loose. Slide onto the shaft making sure the key lines up with the keyway in the handle hub.
2. Assemble the stand base (A) to the vertical support member (B) using the socket cap screws, lockwashers, and nuts (provided). The larger holes in the stand base (A) will face down.
3. Secure the roll bender (C) to the top plate of the pedestal as shown below. (Customer to supply hardware for this part of the assembly).
4. The stand base (A) should also be secured to a solid foundation for added support when rolling material.

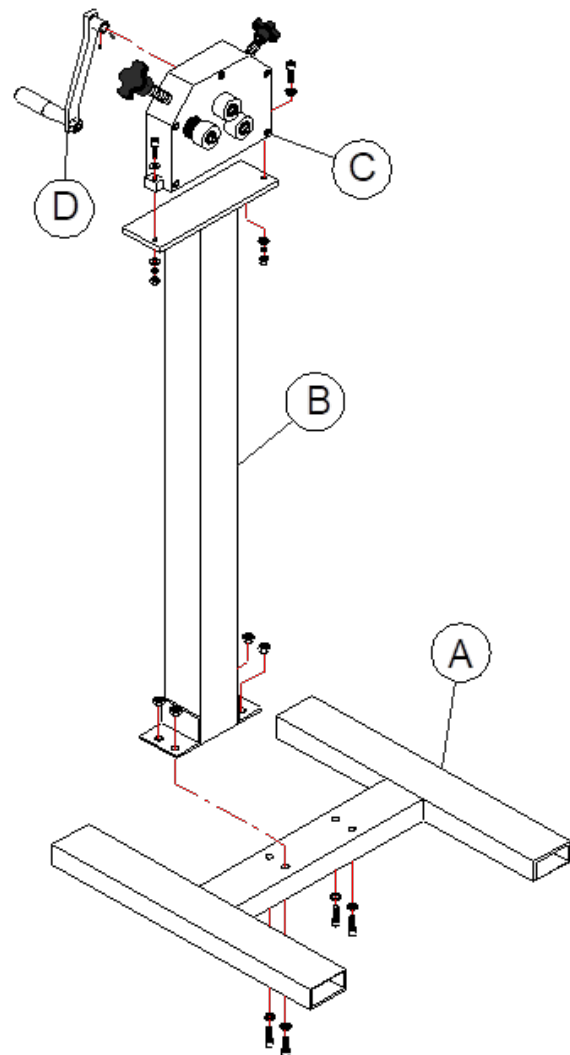


Figure 5-3

## 6.0 Operation

### ⚠ CAUTION

Always wear proper eye protection with side shields, safety footwear, and leather gloves to protect from burrs and sharp edges.

### ⚠ CAUTION

When handling large heavy materials make sure they are properly supported.

1. Determine the size ring you need to roll.

**Note:** Generally, it is recommended that the material be formed upward around the top roll for smaller, tighter radius rings as shown in figure 6-1 and figure 6-2. Bend larger more open radiuses downward as shown in figure 6-3.

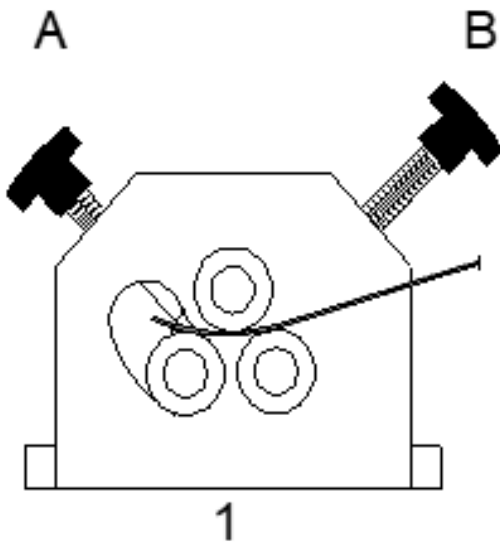


Figure 6-1

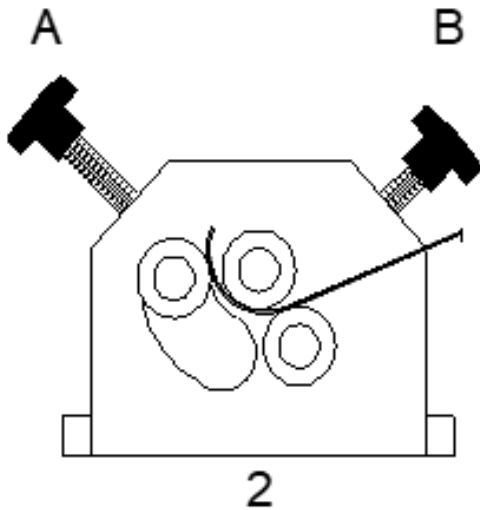


Figure 6-2

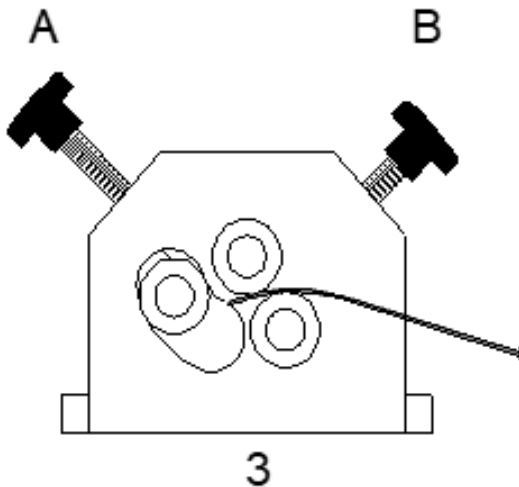


Figure 6-3

## 6.1 Forming Upward – Tight Radius

When forming material in the upward direction, knob “A” sets the stop point for the adjustable (pinch) roll. Knob “B” is the pressure adjustment to increase the pinch force on the material with each pass. This then tightens the radius of the material.

- Loosen the stop knob “A” so that the pinch roll will move within the full range of its travel.

**Note:** Maintain a 1/64” – 1/32” gap between the pinch roller and the lower stop point to maintain full leverage of the pinch roller fulcrum and prevent the adjustment bolt “B” from getting caught behind the pinch lever internally.

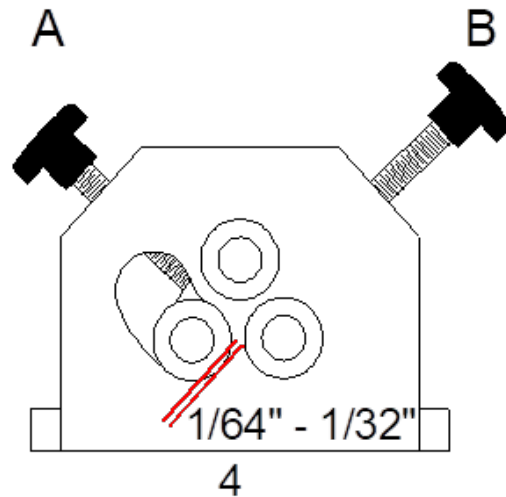


Figure 6-4

- Loosen the pressure knob “B” so that the pinch roll is about 1/64” – 1/32” away from the lower stop point as shown in figure 6-4.
- Feed the material into the rolls as shown.
- Turn knob “B” to apply light pressure to and start to bend the material.
- Rotate the drive handle to radius as much of the material as needed.
- Continue feeding the material forward and reverse. Adjust knob “B” as needed after each pass to increase the pinch pressure until the desired radius is reached.
- Adjust knob “A” to place light to moderate pressure on the pinch roll. This will become the stop for additional material to be formed to the same radius.

**Note:** Material from the same lot from the same supplier will generally bend to the same radius and show the same amount of spring back. Because spring back will vary between material and lots, it cannot be guaranteed that the same stop point will provide the exact same bend radius.

- Loosen knob “B” to release the pinch roll and remove the material.

## 6.2 Forming Downward – Large Radius

When forming material in the downward direction, knob “B” sets the stop point for the adjustable (pinch) roll. Knob “A” is the pressure adjustment to increase the pinch force on the material with each pass. This then tightens the radius of the material.

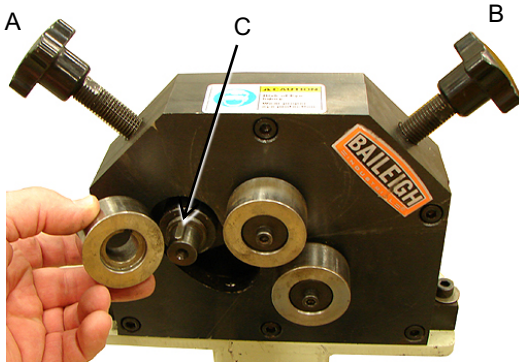


Figure 6-5

1. Remove the retaining bolt and washer from the pinch roll and slide the roll off the shaft to expose the drive key (C).
2. Remove and retain the drive key (C) for upward bending.
3. Lightly lubricate the shaft with multi-purpose grease and install roll onto the shaft and secure with the washer and bolt. Do not over tighten the bolt.
4. Loosen both knobs “A” and “B” so that the pinch roll will move within the full range of its travel.
5. Manually hold the pinch roll up and feed the material into the rolls as shown in figure 3 (previous pages).
6. Turn knob “A” to apply lite pressure to and start to bend the material.
7. Rotate the drive handle to radius as much of the material as needed.
8. Continue feeding the material forward and reverse. Adjust knob “A” as needed after each pass to increase the pinch pressure until the desired radius is reached.
9. Adjust knob “B” to place lite to moderate pressure on the pinch roll. This will become the stop for additional material to be formed to the same radius.

**Note:** Material from the same lot from the same supplier will generally bend to the same radius and show the same amount of spring back. Because spring back will vary between material and lots, it cannot be guaranteed that the same stop point will provide the exact same bend radius.

10. Loosen knob “A” to release the pinch roll and remove the material.

## 7.0 Maintenance

### **! WARNING**

Maintenance should be performed on a regular basis by qualified personnel.

### **! WARNING**

Always follow proper safety precautions when working on or around any machinery.

- Check daily for any unsafe conditions and fix immediately.
- Check that all nuts and bolts are properly tightened.
- On a weekly basis clean the machine and the area around it.
- Lubricate Gears (monthly) with a good quality grease after removing the handle and cover.
- Apply rust inhibitive lubricant to all non-painted surfaces.


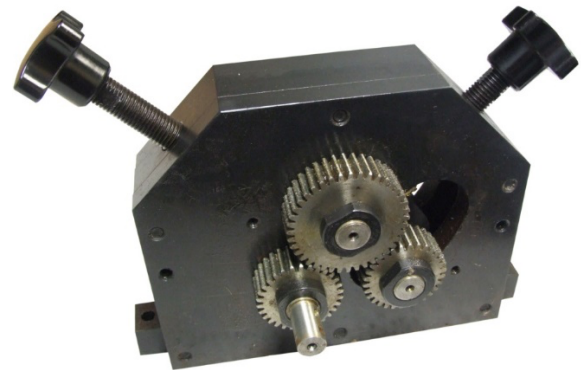


Figure 7-1

**Note:** Proper maintenance can increase the life expectancy of your machine.

# 8.0 Replacement Parts

## 8.1.1 Manual Roll Bender Assembly – Exploded View

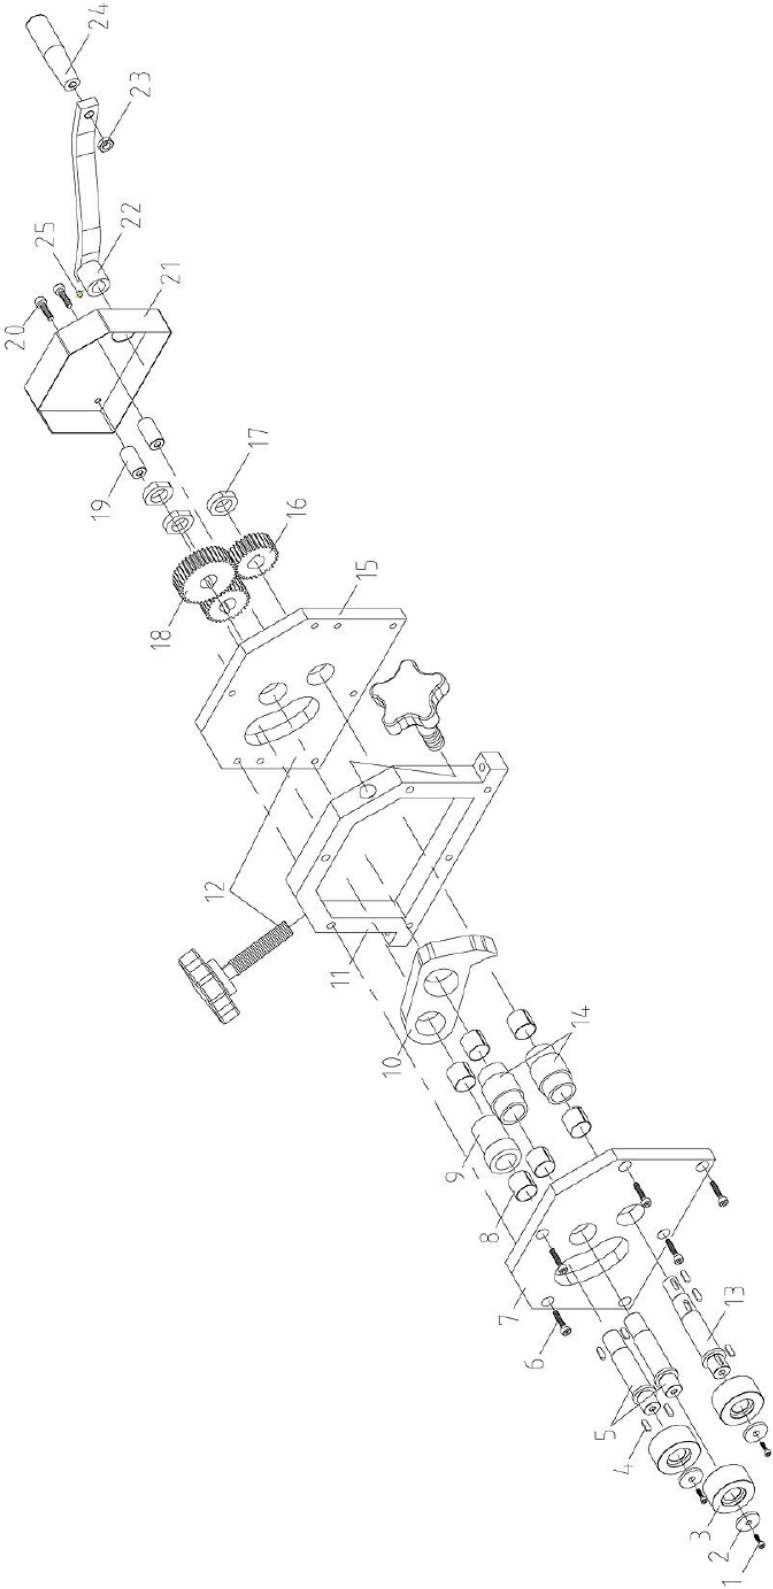

## 8.1.2 Manual Roll Bender Assembly – Part List

Item	Part No.	Description	Size	Qty.
1	BA9-1226867	Socket Head Cap Screw	M6X16	3
2	BA9-1226864	Flat Washer (Machined)		3
3	BA9-1226866	Standard Flat Roll, 1/4" Material		3
4	BA9-1226868	Flat Key	5X5X15	7
5	BA9-1226865	Gear Shaft 2		2
6	JT9-TS-1504091	Socket Head Cap Screw	M8X45	6
7	BA9-1226861	Front Plate		1
8	**	Bushing	2020	6
9	**	Bushing		1
10	**	Swing Block		1
11	**	Middle Plate		1
12	BA9-1226869	Knob Handle	M16X70	2
13	BA9-1226863	Gear / Handle Shaft 1		1
14	**	Bushing		1
15	**	Back Plate		1
16	**	Small Gear		2
17	**	Locking Nut		3
18	**	Big Gear		1
19	**	Locking Shaft		2
20	JT9-TS-1503101	Socket Head Cap Screw	M6X45	2
21	BA9-1226862	Cover Guard		1
22	**	Crank Handle		1
	BA9-1226870	Handle with Set Screw		
23	**	Hex Thin Nut	M12P1.75	1
24	**	Handle		1
25	**	Socket Set Screw, Flat Point	M6X6	1
	BA9-1014744	Stand Assembly		

\*\* These parts are shown for reference only and are not available for order individually. Non-proprietary parts, such as fasteners, can usually be found at local hardware stores.

## 9.0 Warranty and Service

Thank you for your purchase of a machine from Baileigh Industrial. We hope that you find it productive and useful to you for a long time to come.

**Inspection & Acceptance.** Buyer shall inspect all Goods within ten (10) days after receipt thereof. Buyer's payment shall constitute final acceptance of the Goods and shall act as a waiver of the Buyer's rights to inspect or reject the Goods unless otherwise agreed. If Buyer rejects any merchandise, Buyer must first obtain a Returned Goods Authorization ("RGA") number before returning any Goods to Seller. Goods returned without an RGA will be refused. Seller will not be responsible for any freight costs, damages to Goods, or any other costs or liabilities pertaining to Goods returned without an RGA. Seller shall have the right to substitute a conforming tender. Buyer will be responsible for all freight costs to and from Buyer and repackaging costs, if any, if Buyer refuses to accept shipment. If Goods are returned in unsalable condition, Buyer shall be responsible for full value of the Goods. Buyer may not return any special-order Goods. Any Goods returned hereunder shall be subject to a restocking fee equal to 30% of the invoice price.

**Specifications.** Seller may, at its option, make changes in the designs, **specifications**, or components of the Goods to improve the safety of such Goods, or if in Seller's judgment, such changes will be beneficial to their operation or use. Buyer may not make any changes in the specifications for the Goods unless Seller approves of such changes in writing, in which event Seller may impose additional charges to implement such changes.

**Limited Warranty.** Seller warrants to the original end-user that the Goods manufactured or provided by Seller under this Agreement shall be free of defects in material or workmanship for a period of twelve (12) months from the date of purchase, provided that the Goods are installed, used, and maintained in accordance with any instruction manual or technical guidelines provided by the Seller or supplied with the Goods, if applicable. The original end-user must give written notice to Seller of any suspected defect in the Goods prior to the expiration of the warranty period. The original end-user must also obtain an RGA from Seller prior to returning any Goods to Seller for warranty service under this paragraph. Seller will not accept any responsibility for Goods returned without an RGA. The original end-user shall be responsible for all costs and expenses associated with returning the Goods to Seller for warranty service. In the event of a defect, Seller, at its sole option, shall repair or replace the defective Goods or refund to the original end-user the purchase price for such defective Goods. Goods are not eligible for replacement or return after a period of 10 days from date of receipt. The foregoing warranty is Seller's sole obligation, and the original end-user's exclusive remedy, with regard to any defective Goods. This limited warranty does not apply to: (a) die sets, tooling, and saw blades; (b) periodic or routine maintenance and setup, (c) repair or replacement of the Goods due to normal wear and tear, (d) defects or damage to the Goods resulting from misuse, abuse, neglect, or accidents, (f) defects or damage to the Goods resulting from improper or unauthorized alterations, modifications, or changes; and (f) any Goods that has not been installed and/or maintained in accordance with the instruction manual or technical guidelines provided by Seller.

**EXCLUSION OF OTHER WARRANTIES.** THE FOREGOING LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ANY AND ALL OTHER EXPRESS, STATUTORY, OR IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED. NO WARRANTY IS MADE WHICH EXTENDS BEYOND THAT WHICH IS EXPRESSLY CONTAINED HEREIN.

**Limitation of Liability.** IN NO EVENT SHALL SELLER BE LIABLE TO BUYER OR ANY OTHER PARTY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR DOWN TIME) ARISING FROM OR IN MANNER CONNECTED WITH THE GOODS, ANY BREACH BY SELLER OR ITS AGENTS OF THIS AGREEMENT, OR ANY OTHER CAUSE WHATSOEVER, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER THEORY OF LIABILITY. BUYER'S REMEDY WITH RESPECT TO ANY CLAIM ARISING UNDER THIS AGREEMENT IS STRICTLY LIMITED TO NO MORE THAN THE AMOUNT PAID BY THE BUYER FOR THE GOODS.

**Force Majeure.** Seller shall not be responsible for any delay in the delivery of, or failure to deliver, Goods due to causes beyond Seller's reasonable control including, without limitation, acts of God, acts of war or terrorism, enemy actions, hostilities, strikes, labor difficulties, embargoes, non-delivery or late delivery of materials, parts and equipment or transportation delays not caused by the fault of Seller, delays caused by civil authorities, governmental regulations or orders, fire, lightning, natural disasters or any other cause beyond Seller's reasonable control. In the event of any such delay, performance will be postponed by such length of time as may be reasonably necessary to compensate for the delay.

**Installation.** If Buyer purchases any Goods that require installation, Buyer shall, at its expense, make all arrangements and connections necessary to install and operate the Goods. Buyer shall install the Goods in accordance with any Seller instructions and shall indemnify Seller against any and all damages, demands, suits, causes of action, claims and expenses (including actual attorneys' fees and costs) arising directly or indirectly out of Buyer's failure to properly install the Goods.

**Work By Others; Safety Devices.** Unless agreed to in writing by Seller, Seller has no responsibility for labor or work performed by Buyer or others, of any nature, relating to design, manufacture, fabrication, use, installation, or provision of Goods. Buyer is solely responsible for furnishing and requiring its employees and customers to use all safety devices, guards and safe operating procedures required by law and/or as set forth in manuals and instruction sheets furnished by Seller. Buyer is responsible for consulting all operator manuals, ANSI or comparable safety standards, OSHA regulations and other sources of safety standards and regulations applicable to the use and operation of the Goods.

**Remedies.** Each of the rights and remedies of Seller under this Agreement is cumulative and in addition to any other or further remedies provided under this Agreement or at law or equity.

**Attorney's Fees.** In the event legal action is necessary to recover monies due from Buyer or to enforce any provision of this Agreement, Buyer shall be liable to Seller for all costs and expenses associated therewith, including Seller's actual attorney fees and costs.

**Governing Law/Venue.** This Agreement shall be construed and governed under the laws of the State of Wisconsin, without application of conflict of law principles. Each party agrees that all actions or proceedings arising out of or in connection with this Agreement shall be commenced, tried, and litigated only in the state courts sitting in Manitowoc County, Wisconsin or the U.S. Federal Court for the Eastern District of Wisconsin. Each party waives any right it may have to assert the doctrine of "forum non conveniens" or to object to venue to the extent that any proceeding is brought in accordance with this section. Each party consents to and waives any objection to the exercise of personal jurisdiction over it by courts described in this section. Each party waives to the fullest extent permitted by applicable law the right to a trial by jury.

**Summary of Return Policy:**

- 10 Day acceptance period from date of delivery. Damage claims and order discrepancies will not be accepted after this time.
- You must obtain a Baileigh Industrial issued RGA number PRIOR to returning any materials.
- Returned materials must be received at Baileigh Industrial in new condition and in original packaging.
- Altered items are not eligible for return.
- Buyer is responsible for all shipping charges.
- A 30% re-stocking fee applies to all returns.

Baileigh Industrial makes every effort to ensure that our posted specifications, images, pricing, and product availability are as correct and timely as possible. We apologize for any discrepancies that may occur. Baileigh Industrial reserves the right to make any and all changes deemed necessary in the course of business including but not limited to pricing, product specifications, quantities, and product availability.

**For Customer Service & Technical Support:**

Please contact one of our knowledgeable Sales and Service team members at:  
(920) 684-4990 or e-mail us at [Baileigh-Service@jpwindustries.com](mailto:Baileigh-Service@jpwindustries.com)







**BAILEIGH INDUSTRIAL**

**1625 DUFEK DRIVE MANITOWOC, WI 54220**  
**PHONE: 920.684.4990 FAX: 920.684.3944**

**[www.baileigh.com](http://www.baileigh.com)**